


# INSTALLATION

1. Remove the battery compartment cover.
2. Align the sensor notch with the module slot.
3. Press the lightning sensor downward firmly (until the clips click into place).
4. Replace battery compartment cover.

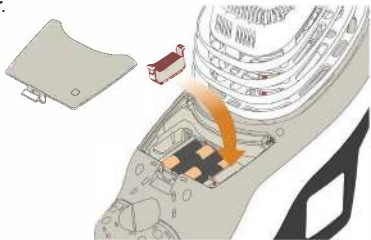

[support.acurite.com](http://support.acurite.com)

Model Number 06075M