



AIRDOPES 121V2 PLUS



AIRDOPES 121V2 PLUS

Get ready to immerse yourself in music with your very own pair of boat Airdopes 121V2 Plus. Please consider this manual as your guiding map to the unparalleled shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boAt. Therefore, we strongly recommend thoroughly reading this manual. Also, you can refer to this if you face difficulties.




PACKAGE CONTENTS

- 1. 1x Pair of TWS Earbuds
- 1. 1x Warranty Card
- 1. 1x Charging Case
- 1. 1x Catalogue
- 1. 1x Type-C Charging Cable
- 1. 1x Pair of Additional Earbuds
- 1. 1x User Manual
- 1. 1x FCC Card

OVERVIEW

- 1. CTC (Capacitive Touch Control) / Power Button

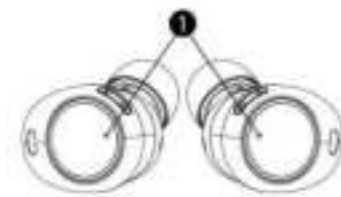

POWER ON (FIRST TIME USER):

Step 1. To switch the earbuds on (Smart Power On), simply open the lid of the charging case (when the earbuds are ready). Courtesy of our WPT™ (Wish Wake N' Pair) technology, the earbuds power on automatically. This is indicated with a solid blue LED for 2 seconds followed by a voice prompt.

OR:
Long touch the CTC (Capacitive Touch Control) on both earbuds for 3 seconds to manually power on the earbuds.

Step 2. After powering on, the earbuds are ready to be paired and enter the Connection mode. This is indicated with alternate red and blue LED flashing on the master earbud and the blue LED flashing two times every 5 seconds on the slave earbud.

CONNECTION MODE

Step 1. Turn on the Bluetooth functionality on your smartphone device and scan.

Step 2. Select 'Airdopes 121V2 Plus' from the list of available devices to pair.

Congratulations! Your earbuds are now connected successfully via Bluetooth. This is indicated by solid blue LED on both the earbuds followed by a sound prompt.

Note:
- Pairing mode lasts for 5 minutes after which the red LED remains steady for 2 seconds and the earbuds turn off automatically.
- If the pairing duration is missed, you will have to reconnect the earbuds and follow the steps again.
- Airdopes 121V2 Plus remembers previously connected devices. Once switched on, the earbuds automatically reconnect to the previously connected device within the working range.

SINGLE EARBUD USAGE (MONO MODE):

Step 1. Please note that both the earbuds can be used in Mono mode. Use Smart / Manual Power-On option for switching on the selected earbud.

Step 2. The selected earbud automatically enters pairing mode. This is indicated by alternate red and blue LED flashing.

Step 3. Turn on Bluetooth on your smartphone device and start scanning.

Step 4. Select 'Airdopes 121V2 Plus' from the list of devices. The earbud is now connected via Bluetooth. This is indicated by a solid blue light for 2 seconds.

Note:
- To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo mode.
- You can only switch to the "best track" using the right earbud in Mono/Stereo mode.
- You can only switch to the "previous track" using the left earbud in Mono/Stereo mode.



SINGLE EARBUD USAGE (MONO MODE):

QUICK GLANCE ON FUNCTIONALITIES

- 2 Seconds: Long touch left CTC for 2 seconds to activate voice assistant
- 3 Seconds: Long touch both CTCs for 3 seconds to manually power on
- 5 Seconds: Long touch both CTCs for 5 seconds one at a time to manually power off
- 3 Seconds: Long touch both CTCs for 5 seconds to perform factory reset

CTC (Capacitive Touch Control) / Power Button




CHARGING THE EARBUDS

Step: To charge the earbuds, please place them inside the charging case in the correct orientation and close the lid. While LED light on the case remains solid for 3 seconds while the earbuds are being charged and turns off when the earbuds are charged completely.

Earbud Battery Level	LED Status
Less than 20%	Red LED quickly flashes 3 times on both the earbuds every 30 seconds
Fully Charged (100%)	LED turns OFF

Note:
- When the earbud battery level drops below 20%, a 'Battery Low' prompt gets triggered every 5 minutes.
- Before using the earbuds for the 1st time, it is recommended to fully charge them. Also, please keep the lid of the charging case closed while charging.
- Please note that the earbuds cannot be switched on while charging.

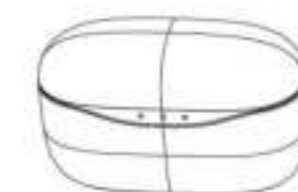

CHARGING THE CASE:

Step: To charge the case, plug one end of the provided USB Type-C cable into the case and connect the other end to a computer, wall adapter, power bank, etc.

Case is in charging	Blinking white LED
Case gets fully charged	Solid white LED

BASIC FUNCTIONS

- Answer Calls: Single tap the CTC on either earbud to answer incoming calls.
- Hang Up / Reject Call: Double tap the CTC on either earbud to end an ongoing call or reject an incoming call.
- Play/Pause Music: Single tap the CTC on either earbud to play or pause a track.
- Next Track: When playing music, double tap the right earbud's CTC to skip to the next song.
- Previous Track: When playing music, double tap the left earbud's CTC to return to the previous song.

Note: Volume can be controlled only via the mobile device.

VOICE ASSISTANT:

Step 1. Long touch the CTC on the left earbud for 3 seconds to activate the smart voice assistant.

Step 2. The respective voice assistant screen pops up along with a sound prompt and you can give your commands easily.

Tip: You can try out the following commands:
- What's the weather today? - Play a song - Set a reminder



Note: If the voice assistant is not triggered, then the functionality needs to be first enabled via your mobile device settings.

BEAST™ Mode

Long touch the right earbud CTC for 3 seconds to switch to Low Latency gaming mode, also known as the BEAST™ Mode. Once switched on, it is notified via a sound prompt. Press and hold the right earbud CTC again for 3 seconds to turn it off and return to standard Music Mode.

Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.

ENx™ Tech

Our ENx™ (Environmental Noise Cancelling) tech algorithm cancels out the background noise so that you can be heard crystal clear on video calls. You don't have to switch on ENx™ separately as the 4x mics are already equipped with the same and activated by default.

Deliver your voice without interruptions wherever you are - traffic, railway stations, airports, workspace: literally everywhere!

SMART POWER OFF

Step 1. After usage, remove both earbuds from your ears.

Step 2. Place the earbuds back into the charging case in the correct orientation and close the lid.

Step 3. Red LED light remains solid for 2 seconds followed by a voice prompt. After this, the earbuds automatically switch off (Smart Power Off) and enter charging mode.

MANUAL POWER OFF

Step 1. Long touch both CTCs for 5 seconds (one at a time) to manually power off the earbuds.

Step 2. The red LED stays solid on for 2 seconds and the earbuds switch off.

Step 3. Place both the earbuds inside the case and close the lid.

FACTORY RESET

Perform the factory reset to solve any face difficulties while operating your Earbuds.

***NOTE:** Before performing the reset, please close 'Airdopes 121V2 Plus' from the pairing device history by forgetting the device.

Step 1. Open the lid of the charging case and take out both the earbuds from the case.

Step 2. Long touch both CTCs for 5 seconds to reset the two earbuds. This is indicated by the red LED on both the earbuds rapidly flashing 5 times.

Step 3. Close the case lid and wait for 5 seconds.

Step 4. Take out the earbuds from the charging case and perform a fresh connection.

Congratulations! Your Airdopes 121V2 Plus have been reset.

Charging norms & Precautionary Substitutes:

1) Charge/Recharge/Use with 2) Cables/Wire	for 24. Standard Cables (3F strands) 40/30cm (3.5meter) strand.
--	---

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

SPECIFICATIONS

Headphone Type	TWS
Bluetooth Version	v5.3
Music Playtime	Up to 30 hours (at 60% volume)
Number of ENC Equipped Mics	4
ANC™ Tech	Yes
BEAST™ Mode	Yes, 90 ms Low Latency
Transmission Range	30 m
Driver Size	10 mm ²
Supported Codes	AAC/SBC
Frequency	20Hz-20 kHz
Battery	150 mAh (Case), 40 mAh (Earbuds)
ASAP™ Charge	Yes, 10 mins charge = 100 mins playtime
Charging Time	30 mins (Earbuds), up to 2 hours (Case)
Charging Interface	USB Type-C
Water Resistance	IPX4

SAFETY CAUTION

- Please follow the instructions to operate the earbuds smoothly.
- Please don't use the earbuds in extreme temperatures.
- Please don't use the product in water.
- Please keep the product away from heat sources, as the heat may damage it.
- Please don't jam the ports, such as the charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume to protect your hearing and extend the service life of the earbuds.

RECOMMENDATION

The earbuds may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on your smartphone device.

