



STONE 1200PRO



USER MANUAL

- Select "Stone 1200 Pro" to play music through the two paired speakers.
- Once connected in TWS mode, the TWS button will light up to indicate this.
- Press and hold the 'Play/Pause' button on one of the speakers for about 2 seconds to disconnect TWS mode.

USB MODE

- Long press the Power button for 3 seconds to switch on the speaker.
- Insert a USB flash drive (containing songs in MP3 format) into the USB port, and it will switch to USB mode automatically.
- Alternatively, short press the Mode button multiple times to switch to USB mode.
- Short press the Play/Pause button to resume/pause playback.
- Press and hold the + and - buttons to go to the next track or return to the previous track.
- Short press the + and - buttons on the speaker to adjust the volume.

Note:

1. Compatibility with all commercially available storage devices cannot be guaranteed.
2. Under any mode, when you insert a USB flash drive into the speaker, it will switch to USB mode and play the stored music automatically.

HANDSFREE CALLING

- Under Bluetooth connection status, if there is an incoming call, short press the Play/Pause button to accept the call and long press the Play/Pause button for 3 seconds to reject the call.



STONE 1200 PRO

Thank you for purchasing boAt Stone 1200 Pro. You are now just a step away from the realm of pure audio bliss. Please follow this user manual carefully in case of any doubts and difficulties that arise. Please note that playtime will vary depending on the selected volume level. You can stay plugged into the sound via USB and wireless Bluetooth technology compatibility.

This portable speaker has been designed with a smooth interface that requires minimum efforts.

PACKAGE CONTENTS

- 1x boAt Stone 1200 Pro
- 1x User Manual
- 1x Type-C Charging Cable



- Short press the Play/Pause button to end an ongoing call.
- Short press the Play/Pause button 3 times to redial the last contacted number.
- Long press the Play/Pause button for 2 seconds to switch an ongoing call from the speaker to your mobile phone. Long press the Play/Pause button for 2 seconds again to switch the call back to the speaker.

RESET FUNCTIONALITY

Perform the reset function if the speaker doesn't turn off or doesn't respond properly.

Step: Use a pointed object to prick the button inside the reset port to set the speaker to default settings.

Alternatively, you can press and hold the Volume Down button (-) for 5 seconds to revert it to the default settings, turn off the speaker, and clear the Bluetooth connection history of the speaker.


CHARGING

- When the battery level is 20%, red LED flashes and the speaker makes a low battery tone prompt. The speaker makes a low battery tone prompt again when the battery level is 10%.
- Insert the provided charging cable to charge the speaker.
- When the speaker is in charging mode, the LED remains solid red. The LED indicator turns off once the speaker is fully charged.

Note:

- Please avoid using the speaker while it is charging, as this may decrease the battery's performance.
- If the battery is completely discharged, the speaker may restart. Leave it in the off state and charge it for at least an hour before using it.

PRODUCT OVERVIEW

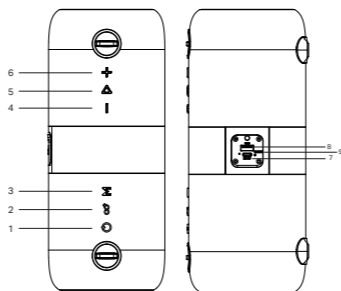

1. Power On/Off Button
2. TWS Button
3. Mode Button
4. Volume Down/Previous Track Button
5. Play/Pause Button
6. Volume Up/Next Track Button
7. Type-C Charging Port
8. USB Port
9. Reset Button Port

CHARGING NORMS & GUIDELINES

| | |
|-----------------------|---|
| Charger/Brick/Adapter | 5V/3A |
| Cable/Wire | Standard Cable (35 strands @0.10mm diameter/strand) |

Note:

- Any other accessory can be used to charge the product as long as the above-mentioned norms are followed.

BASIC FUNCTIONS

| | |
|------------------------------|--|
| Power ON/OFF | Long press the Power button for 3 seconds to switch the speaker ON/OFF |
| Switch Modes | Short press the M button to change the connectivity mode (USB/BT) |
| Increase Volume | Short press the '+' button in steps to increase the volume |
| Decrease Volume | Short press the '-' button in steps to decrease the volume |
| Play/Pause Music | Short press the 'Play/Pause' button to play/pause the track |
| Previous Track | Long press the '-' button to return to the previous track |
| Next Track | Long press the '+' button to skip to the next track |
| Answer Incoming Calls | Short press the 'Play/Pause' button to answer an incoming call |
| End Calls | Short press the 'Play/Pause' button to end an ongoing call |
| Reject Incoming Calls | Long press the 'Play/Pause' button for 3 seconds to reject an incoming call |
| Redial | Short press the 'Play/Pause' button 3 times to redial the last contacted number |
| Activate/Deactivate TWS Mode | Press and hold the TWS button for 2 seconds to activate/deactivate TWS mode |
| Switch Device for Calls | Long press the 'Play/Pause' button for 2 seconds during a call to switch from the speaker to your phone; Long press the 'Play/Pause' button again for more than 2 seconds to switch the call back to the speaker |

SPECIFICATIONS

| | |
|-----------------------|---|
| Product Type | Portable Wireless Speaker |
| Bluetooth Version | v5.3 |
| Bluetooth Profiles | A2DP/AVRCP/HFP/SPP/GATT/HSP/OPP/HID/PBAP/SM |
| Working Range | 10m |
| Driver Size | 2*2.75" full frequency speakers+2 radiators |
| Compatibility | USB/BT |
| TWS Function | Yes |
| Frequency | 60Hz-20kHz |
| Signal to Noise Ratio | >80dB |
| Input Voltage | 5V/3A |
| Output Power | 60W |
| Playing Time | Up to 7.5 hours (@50% volume) |
| Talk Time | Up to 8.5 hours |
| Standby Time | Up to 360 hours |
| Charging Time | 3 to 4 hours |
| Battery Capacity | 4800 mAh |
| Water Resistance | IPX6 |

*Playtime may vary accordingly to the music type & the volume level

| | |
|-----------------------------------|--|
| Voice Assistant | Double press the 'Play/Pause' button to activate the default voice assistant (Google voice assistant /Sir) |
| Disconnect/Reconnect Media Device | Long press the 'Play/Pause' button for 2 seconds to disconnect the current connected device. Long press the 'Play/Pause' button for 2 seconds again to reconnect the speaker with the previously paired device. |
| Reset | Use a pointed object to prick and short-press the reset button in the reset port; or Press and hold the Volume Down button (-) for 5 seconds. The Bluetooth connection history of the speaker will be cleared and go back to the default settings. |

OPERATING INSTRUCTIONS

POWER ON/OFF

Long press the Power button for 3 seconds to switch the speaker ON and OFF.

BLUETOOTH FUNCTION

Stone 1200 Pro supports music playback via wireless connection to a smartphone or other compatible devices.

Note: Compatibility with all commercially available devices cannot be guaranteed.

BLUETOOTH PAIRING

- Long press the power button for 3 seconds to switch on the speaker. The speaker enters Bluetooth pairing mode automatically with blinking LED to indicate the same.

WARNINGS

- Please charge the speaker according to the charging norms mentioned to protect the battery.
- Please do not disassemble, repair, or modify this product by yourself without authorization.
- Please do not submerge the product in water.
- Please keep this product safe from coming in contact with liquids.
- Please store and use this product in an environment of normal temperature.
- Please do not expose this product to extreme temperatures.
- Please keep this product away from heat sources, such as radiators, stoves, etc.
- When cleaning this product, please use a soft cloth or slightly damp cloth if necessary. Please do not use chemicals for cleaning.
- In order to have an extended product life and protect your hearing, please avoid listening to songs on maximum volume for long time.

- Activate the Bluetooth on your smartphone and search for "Stone 1200 Pro" to connect.
- Select "Stone 1200 Pro" from the list of available devices.

Congratulations! Stone 1200 Pro speaker is now connected to your phone via Bluetooth indicated by a solid LED and tone prompt.

Note:

- Stone 1200 Pro remembers previously connected devices; once switched on, the speaker automatically reconnects to the previously connected devices within the working range.
- If pairing is unsuccessful, please remove "Stone 1200 Pro" from the list of paired devices on your phone, bring the phone closer to the speaker and try pairing again.

SWITCH CONNECTIVITY MODES

Short press the M button on the speaker to switch between Bluetooth/USB connectivity modes.

Note: Modes need to be changed manually. You need to press the Mode button every time you want to change the mode.

TWS FUNCTION

Turn on the two Stone 1200 Pro speakers that you want to connect in TWS Mode, both in Bluetooth mode.

- You need to set only one of the two units and follow the steps below-
- Press and hold the TWS button on one of the speakers for 2 seconds.
 - Release the button and wait for a few seconds for the two speakers to connect.
 - Enable Bluetooth on your mobile phone and search for "Stone 1200 Pro" to pair.

