




A Seamless
Play



Thank you for purchasing Stone 350. You are now just a step away from the realm of Nirvana. Please follow this user manual carefully in case of any doubts and difficulties that arise. Please note that play time varies depending on the selected volume level. You can stay plugged into the sound with Bluetooth wireless technology, TF Card & AUX wire compatibility. This portable speaker has been designed for smooth interface that requires the minimal of efforts.

Package Contents

- 1x Bluetooth Speaker
- 1x Charging Cable
- 1x Audio Cable
- 1x User Manual
- 1x Warranty Card
- 1x Catalogue

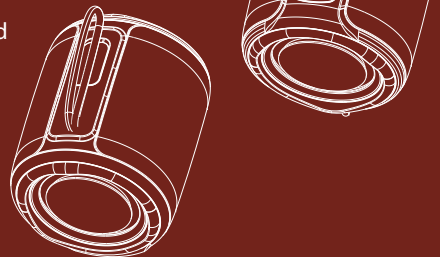

Power ON/OFF

You may long press the power button to switch the speaker ON/OFF.

Functions:

- Answer Incoming Calls : Short press the MFB (*Multifunction Button)
- End Calls : Short press the MFB once to end calls
- Reject Incoming Calls : Long press the MFB for 2 seconds
- Redial : Double press the MFB to redial the last contacted number
- Switch Modes : Short press the power button to select modes (Bluetooth/AUX/TF Card)
- Volume Increase : Short press the "+" button in steps for increasing the volume
- Volume Decrease : Short press the "-" button in steps for decreasing the volume
- Play/Pause : Short press the MFB to play or pause the tracks
- Previous Track : Long press the "<" button for returning to the previous track
- Next Track : Long press the ">" button for skipping to the next track

Warning:

- Please charge the speaker according to the charging norms mentioned on packaging to protect the battery
- Do not disassemble the product
- Do not submerge the product inside water
- Please keep this product safe from coming in contact with any liquid
- Don't use/store this product in extreme temperatures
- Please keep the product away from anything that generates heat, such as radiators, stoves, etc.
- In order to have hearing protection and an extended speaker life, avoid listening to songs on maximum volume
- Don't try to dismantle/repair the product on your own.

| Charging norms & Precautionary Guidelines: - | |
|---|--|
| 1) Charger/Brick/Adapter | : 5V 2A |
| 2) Cable/Wire | : Standard Cable (35 strands @0.10mm diameter/ strand) |
| Any other accessory can be paired up with the product as long as the specifications are as per above norms. | |

Bluetooth Connectivity:

- Turn the speaker on. Its LED indicator blinks blue until the pairing is done
- Activate the phone's Bluetooth function and search for "Stone 350". As soon as the speaker gets selected and paired by you, the connection gets indicated by a sound prompt.

Note:

- The speaker can automatically reconnect to the last paired device
- If you are having connection troubles, then remove Stone 350 from the list of paired devices on your phone, keep the phone closer to the speaker and try pairing again

AUX Mode:

- You can switch to AUX mode by using the AUX cable to connect the phone and the speaker, and then short pressing the Power button
- In the AUX mode, you can control the audio playback via the media device/ phone

TWS:

You can connect two Stone 350s and virtually forge them into one speaker for a greater impact. For TWS connection:

- Turn on both the speakers
- Press and hold MFB on one of the two speakers for about 2 seconds until you hear a beep
- After releasing MFB, it may take a few more seconds for the speakers to connect
- Activate the phone's Bluetooth function and search for "Stone 350" to establish pairing

TF Card Mode:

- You can switch to TF card mode as well
- Insert the TF Card in the TF Card slot for playback

Charging:

- Stone 350 beeps once every 5 minutes when the battery is low. After three such indications, the speaker automatically turns off
- Utilize the provided charging cable to charge the speaker
- The LED indicator turns into steady red while charging; the same goes off as soon as the speaker gets fully charged

Note:

Please avoid using the speaker while it is in charge as it may decrease the battery's performance

Specifications:

| | |
|--------------------|---------------------------|
| Speaker Type | Portable Wireless Speaker |
| Bluetooth Version | V5.0 |
| Working Range | 10m |
| Speaker Size | 1.96" |
| Water Resistance | IPX7 |
| Supported Profiles | Bluetooth V5.0+BR+EDR+BLE |
| SNR | 80dB |
| Frequency | 20Hz-20kHz |
| Input Voltage | 5V/2A |
| Output Power | 10W |
| Play Time | Up to 12 hours |
| Talk Time | Up to 32 hours |
| Charging Time | 1.5-2 hours |
| Battery | 2200mAh |
| TF Compatibility | Yes |
| AUX Compatibility | Yes |
| TWS Speaker | Yes |



A Seamless
Play

Kiara Advani

Kiara Advani

