 


boAt

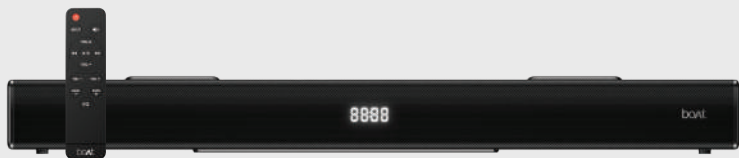

AAVANTE **Octave Plus**

2.2-Channel 80W boAt Signature Sound
with Built-in Subwoofer



AAVANTE Octave Plus

Thank you for choosing the Aavante Octave Plus Soundbar as the audio source for your home. You are a step away from the realm of pure audio bliss. Stay plugged into the sound with an array of wired connections, USB port, and wireless Bluetooth v5.3 technology. This 2.2-Channel soundbar with a built-in subwoofer provides balanced sound for movies, music, and even video games where you can experience cinematic sound that revolves around you.

COMPONENTS LIST

- | | | |
|---------------------|------------------|---------------------|
| • 1x Soundbar | • 1x User Manual | • 1x Warranty Card |
| • 1x Remote Control | • 1x AUX Cable | • 1x Wall Mount Kit |

SAFETY & WARNINGS

Caution

To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture, The unit has no user-serviceable parts inside. Refer servicing to qualified personnel only

 The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.

 Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

Notice:

This appliance is not intended for use by people (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge unless they are under proper supervision.

Children should be supervised to ensure that they do not play with the appliance.

1. To prevent possible hearing damage, do not listen at high volume levels for long periods of time or a sudden high volume level.
2. Never use the device unsupervised! Switch off the device whenever you are not using it, even if not using it only for a short while.
3. The appliance is not intended to be operated by means of an external timer or separate remote controller system.
4. If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
6. The unit shouldn't be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above & at least 5 cm of space on each side of the unit.
7. The apparatus must not be exposed to dripping or splashing. Don't place objects filled with liquids such as vases, bottles or humidifiers on the unit.
8. To prevent fire or shock hazard, don't expose this equipment to direct heat, rain, moisture or dust.
9. Do not place this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools, Ensure that you place the unit on a dry, stable surface.
10. Do not place this unit close to a strong magnetic field.
11. Do not place the unit on an amplifier or a receiver.
12. Do not place this unit in a damp area as the moisture will affect the life of electric components.
13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.

14. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.
15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the LED TV. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit away from the TV set.
16. The mains plug is used to disconnect the device, the disconnected device should remain readily operable.

IMPORTANT SAFETY INSTRUCTIONS

 
1. Read, keep, and follow all instructions. Heed all warnings.
2. Avoid dropping. Do not disassemble.
3. Do not use any corrosive cleaner/oil to clean. Clean only with a dry cloth.
4. Do not submerge in water; do not use this appliance near water. The product should not be exposed to dripping or splashing water.
5. Do not block any ventilation openings. Install it in accordance with the manufacturer's instructions.
6. Avoid extreme temperatures. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
7. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, or where they exit from the appliance.
8. Only use original or certified cables or attachments/accessories specified by the manufacturer.
9. Do not use the device outdoors during thunderstorms. Unplug this appliance during lightning storms or when unused for long periods of time.
10. Refer all servicing to qualified service personnel only. Servicing is required when the appliance has been damaged in any way, for example, when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the appliance, the appliance has been exposed to rain or moisture, does not operate normally, or has been dropped.
11. The AC plug is used to disconnect the device; the disconnected device should remain readily operable. To disconnect the device from the AC power completely, the AC plug must be removed from the AC outlet completely.
12. Make sure the power supply is correct and never handle the power cord or its plug with wet hands when plugging into or unplugging from an outlet.
13. Ensure the main power switch is in OFF state before connecting the power cord to the power supply to avoid damage to the unit.
14. A damaged power cord can easily cause an electric shock or fire hazard, never use a power cord after it has gotten damaged.

UNPACKING AND SET UP

- Remove the soundbar from the carton and remove all packing material from the soundbar. Save the packing material, if possible, in case the soundbar ever needs to be serviced or transported. The original carton and packing material are the only safe way to pack your soundbar to protect it from damage in transit.
- Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.
- Place your soundbar on a level surface such as a table, desk, or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.
- Unwind the line cord connecting the AC adapter and extend it to its full length.

INSTALLATION - FREE STANDING

This soundbar can sit free-standing on a surface, or it can be mounted on a wall.

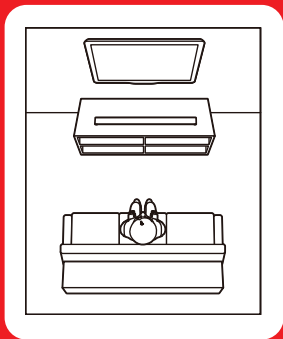


- Place the soundbar horizontally on a flat surface such as a TV unit or shelf and align it centrally with the TV screen.
- Allow some space between the soundbar and the wall.
- Don't place it inside a cabinet or a walled shelf. Follow this guidance for the best sound output and good airflow around the soundbar.

INSTALLATION – MOUNT ON THE WALL



Warnings:


 
- If you don't feel confident to correctly and securely wall-mount the soundbar, seek the assistance of an experienced person or professional.
- Install the soundbar on a vertical, fast, reinforced area of the wall.
- For plaster walls, it is recommended to screw into wall studs for greater security.
- For optimum performance, allow at least 25mm/1" distance between the soundbar and the TV.

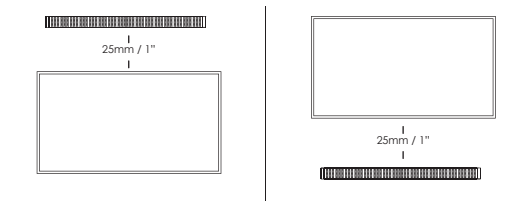

Wall mounting instructions are as follows:

    
1. Measure 24.41 inches (620mm) and drill two parallel holes (1/4 inch each) in the wall
2. Firmly apply a dowel into each hole in the wall (dowel is required only for solid walls).
3. Attach the soundbar to the screws on the wall and push the soundbar to the right 1/8 inch each to lock in.

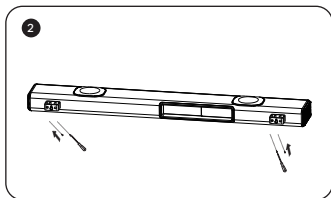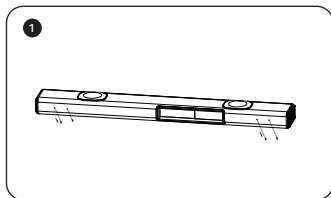

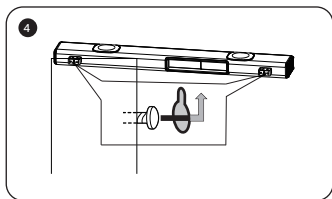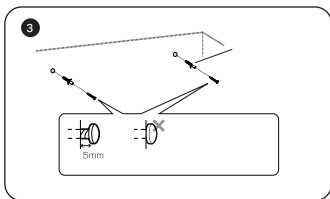


CONTROLS AND CONNECTIONS

 Get to know your soundbar:

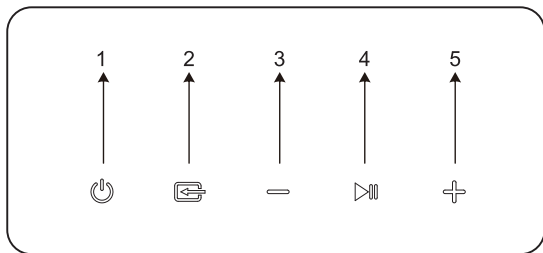

1. Power Button	Short press for standby ON and OFF
2. Input Button	Short press to switch between Bluetooth/HDMI(ARC)/USB/AUX connectivity modes
3. (-) Button	Short press to decrease the volume Long press to return to the previous track
4. Reset/ Play-Pause Button	In Bluetooth & USB modes, short press to play/pause; In AUX & HDMI(ARC) modes, short press to mute/unmute. In all modes, long press to reset the soundbar to the default settings and clear BT connection history.
5. (+) Button	Short press to increase the volume Long press to skip to the next track

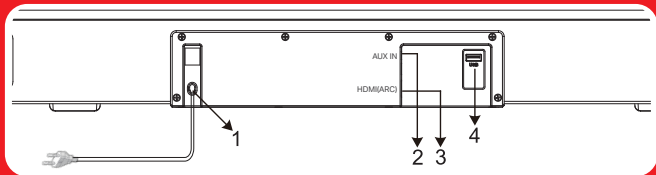 

1. POWER INPUT	AC 110-240V~50/60Hz
2. AUX IN	Auxiliary Audio input from MP3/Phone/set-top box devices.
3. HDMI(ARC)	Connect to HDMI (ARC)
4. USB Input	Connect the USB flash drive to the USB port on the soundbar

REMOTE CONTROL BATTERY SETUP AND REPLACEMENT

Please insert the batteries as shown below-

Step 1: Remove the battery compartment cover.

Step 2: Insert two AAA batteries according to the polarity markings (+ / -) inside the compartment. Make sure the batteries are correctly aligned and properly pushed into place.

Step 3: Close the battery compartment.

PRECAUTIONS WHEN USING BATTERIES:

- Do not use old and new batteries together.
- The batteries must not be exposed to excessive heat such as sunshine, fire etc.
- Do not use different types of batteries together.
- Install the batteries correctly as per the polarity markings to prevent battery leakage.
- Remove the batteries from the remote if you do not intend to use it for a long time.
- When discarding used batteries, follow the guidelines for recycling and disposal of batteries that apply in your local area.
- Keep batteries away from children and pets.

 


OPERATING RANGE OF THE REMOTE CONTROL

- When the unit is mounted on a wall, point the remote control at the remote-control sensor on the panel. The provided remote control allows the unit to be operated from a distance.
- Even if the remote control is operated within the effective range of 26.2 feet (8m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the remote control is operated near other products which generate infrared rays, or if other remote-control device using infrared rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.

REMOTE CONTROL OVERVIEW

1. Power Button: Short press to enter standby mode for Power ON/OFF.
2. INPUT: Short press to switch among input modes: Bluetooth, HDMI(ARC), USB, and AUX. Long press to disconnect and reconnect with the previously paired device.
3. Volume+/- : Short press to increase/decrease the volume
4. Previous Button: In Bluetooth and USB modes, short press to return to the previous track; In USB mode, long press to fast rewind.
5. Next Button: In Bluetooth and USB modes, short press to skip to the next track; In USB mode, long press to fast forward.
6. Reset/Play-Pause Button: In Bluetooth and USB modes, short press to play/pause; in AUX/HDMI(ARC) modes, short press to mute/unmute; In all modes, long press the button to reset the soundbar and clear Bluetooth memory..
7. TRE+/-: Short press to increase/decrease treble
8. BASS+/-: Short press to increase/decrease bass
9. EQ Mode: Short press to switch between EQ modes: E1-Music, E2-Movie, E3-News, E4-3D
10. Mute: Short press to mute/unmute the sound

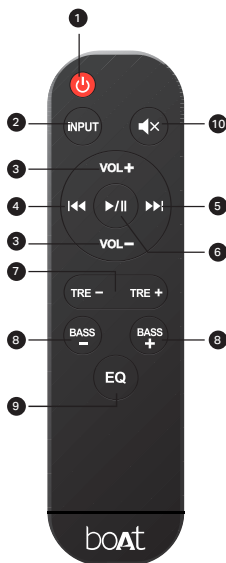

GENERAL OPERATION

Plug in the power cable of the soundbar to an external power socket; the unit goes into standby mode.

 
Short press the Power button on the remote or soundbar control panel to turn on the soundbar. Once powered on, the default input mode will be displayed.

① **AUX:** Use the provided 3.5mm AUX cable to connect external audio sources to the soundbar. Press the Input button on the remote or soundbar control panel to select AUX mode.

② **HDMI(ARC):** Use an HDMI cable to connect the soundbar to your HDMI(ARC) enabled device. The soundbar automatically enters HDMI mode. Press the Input button on the remote or soundbar control panel to select HDMI(ARC) mode.

③ **USB:** Insert your USB drive into the USB port on the soundbar. The soundbar goes automatically under USB mode. You can also press the Input button on the remote or soundbar control panel to switch to USB mode.

④ **Bluetooth:** Press the Input button on the remote or soundbar control panel to enter Bluetooth mode. Turn on the Bluetooth functionality on your media device, search for "Aavante Octave Plus" and select the same to establish pairing. To power off, press the Power button on the soundbar or the remote control. Then, unplug it from the wall outlet.

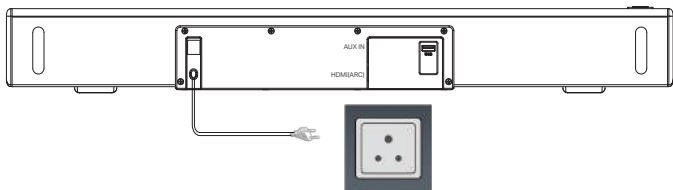

INPUT MODES

Mode	Description
HDMI (ARC)	Audio from TV (via HDMI (ARC) port)
Bluetooth	Sound from a Bluetooth-connected device
USB	Sound from a USB storage device
AUX	Sound from a connected device (via AUX port)

AUTO STANDBY

1. The unit will automatically turn to standby mode when no audio input is received for 30 minutes. The soundbar will wake up from standby mode when the Power button is pressed, or source input is received.
2. If the TV or the external unit is disconnected, switch off the soundbar. To switch the unit off completely, remove the mains plug from the mains socket. Please turn the unit off completely to save energy when not in use.

BLUETOOTH PAIRING



 
Connect the soundbar to your Bluetooth device (such as an iPad, iPhone, iPod, Android phone, laptop or TV), and then you can listen to the audio files stored on the device through your soundbar.

1. Turn on the soundbar and short press the Input button repeatedly on the unit or on the remote control to switch the soundbar to Bluetooth mode. The display on the soundbar will indicate Bluetooth pairing mode.
2. Switch on the Bluetooth on the media device, search for, and select "Aavante Octave Plus" on your Bluetooth list to pair. If prompted for a password, please use "0000".

Note:


- If your pairing device is switched off or manually disconnected, the soundbar will automatically enter pairing mode.
- The connection to the device will be re-established once you re-enter wireless range (8-10 m).
- To connect to other devices, repeat the above pairing steps.

PLAYING VIA USB PORT

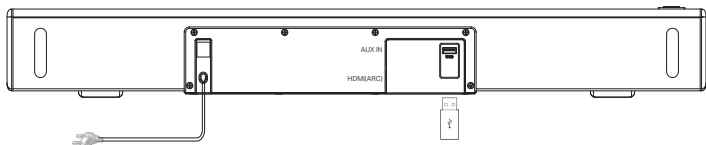

1. When the soundbar is powered on, press the Input button on the remote control or the soundbar to switch to USB input mode.
2. Ensure that your USB flash drive contains MP3 audio files (other file types are not supported.)
3. Connect the USB flash drive to the USB port on the soundbar or by USB adapter (or your own USB extension cable connected to the USB port), and the music will be played automatically.
4. Press the VOL +/- buttons to adjust the volume to your desired level.
5. Short press the PLAY/PAUSE button to play/pause audio.
6. Long press the - button on the soundbar or short press the Previous button on the remote to return to the previous track; Long press the Previous button on the remote to fast rewind.
7. Long press the + button on the soundbar or short press the Next Button on the remote to skip to the next track; Long press the Next button on the remote to fast forward.

 PLAYING VIA AUX MODE

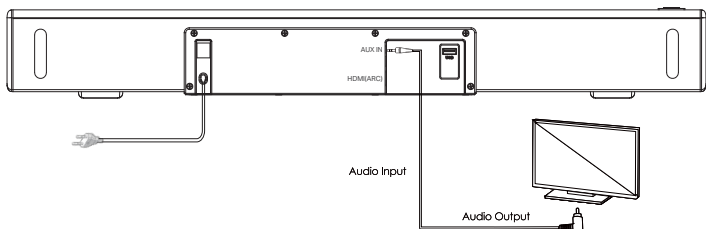


1. Firstly, connect the soundbar to your PC, laptop, smartphone, TV, or other audio devices by using an AUX cable. Use the provided 3.5mm AUX cable to connect the PC, tablet, smartphone, TV's headphone socket to the AUX socket on the soundbar. Make sure that these devices have both AUX IN and AUX OUT terminals.

2. Then press the Input button on the soundbar or the remote control to switch the soundbar to AUX mode. Once the soundbar is connected in AUX mode, the music on your connected device will play. Playback can only be controlled on your connected device.

Note: For some computers, you may need to access the audio control panel to manually set the soundbar as per the steps mentioned above.

 PLAYING VIA HDMI TV (ARC) MODE

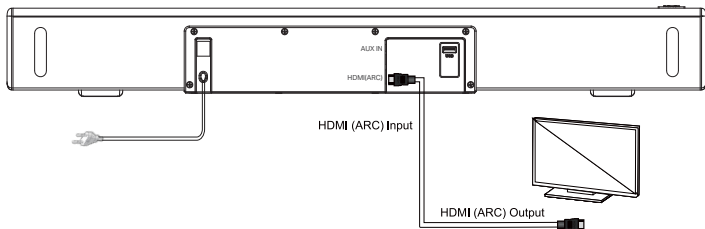

Connecting to HDMI (ARC) Socket

Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.

► ARC (Audio Return Channel)

- Your soundbar supports HDMI with an Audio Return Channel (ARC). If your TV is HDMI (ARC) compliant, you can hear the TV audio through your soundbar by using a single HDMI cable.
- Set the TV to PCM Stereo or Stereo 2.0. Set the audio output mode as <automatic> or <decoded output as PCM state>.
- Using a high-speed HDMI cable, connect the HDMI (ARC) on the soundbar to the HDMI (ARC) connector on your TV.
- Then short press the Input button on the soundbar or the remote control to switch to HDMI (ARC) mode. After a successful connection, if the TV supports ARC, start playing audio on your TV.

Note:

- Your TV must support the HDMI-CEC and ARC functions. HDMI-CEC and ARC must be set to be on.
- The setting method of HDMI-CEC and ARC may differ depending on the TV. For details about the ARC function, please refer to your TV owner's manual.
- Only HDMI 1.4 compatible cables can support the ARC function.

SPECIFICATIONS:

Model Name	boAt Aavante Octave Plus
Compatibility	Bluetooth v5.3/HDMI(ARC)/ AUX/USB
Driver Size (in inches)	5890*2 + 2pcs Passive Radiator
Output Power	80W
Frequency Response	40Hz-20kHz
Signal-to-Noise Ratio	≥80dB
Impedance	8Ω*2
Working Voltage	AC 110V-240V, 50/60Hz
Bluetooth	v5.3
Bluetooth Transmission	Up to 10m
Dimensions	Soundbar: 710 x 89 x 75mm
Net Weight	1.781 kg

