

Brookstone®

iDESIGN®

2-in-1 Music System

STEREO FOR iPod®—PLUS CD PLAYER & RADIO



TABLE OF CONTENTS

| | |
|--|-------|
| Warnings and Cautions | 2-8 |
| Location of Parts and Controls | 9-10 |
| Location of Parts and Controls on Remote | 11-12 |
| Removal of Packing Materials | 13 |
| Remote Control Battery Installation | 13 |
| Connecting | 13-14 |
| Subwoofer Connection | 14 |
| AUX Connection | 14 |
| Video Output Connection | 15 |
| Headphone Connection | 15 |
| Compatible iPod Models | 16 |
| Basic Operation | 17-18 |
| Clock Setting | 18 |
| Timer On/Off | 19-20 |
| Tuner Operation | 21-22 |
| Compact Disc Operation | 23-26 |
| MP3 Disc Operation | 26-29 |
| iPod Operation | 29-31 |
| CD Care and Maintenance | 32 |
| Cleaning the Unit | 33 |
| Resetting the Unit | 33 |
| Troubleshooting | 34-35 |
| Specifications | 36 |
| Warranty | 37-38 |

CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

IMPORTANT SAFETY INSTRUCTIONS

All the safety and operating instructions should be read, adhered to and followed before the unit is operated.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

All the safety and operating instructions should be read, adhered to and followed before the unit is operated.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus outside or near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades, with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where it exits from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.



PORTABLE CART WARNING

12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, including if the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Note:

1. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on apparatus.
2. Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the power completely, the main plug should be disconnected from the main socket outlet completely.
3. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
4. Excessive sound pressure from earphones and headphones can cause hearing loss.
5. Press the unit's buttons gently, pressing them or the screen too hard may cause damage to the unit.
6. Ensure that your earphones are inserted into the player before it is switched on. Inserting them afterwards can potentially damage the earphones and the player.

WARNING

1. Keep away from children. This is not a toy.
2. Use this unit only for its intended use as described in this manual.
3. Unplug this unit during lightning storms or when unused for long periods of time.
4. Never drop or insert an object into any opening.

5. Protect the power cord from being walked on or pinched, particularly at plug outlets, convenience receptacles and the point where it exits the unit.

WARNING: This product may contain small parts which may pose a choking hazard to children. This product is not a toy. Keep out of reach of children due to risk of suffocation. This product may include components which may pose a strangulation hazard to children.

CAUTION

Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.

BATTERY PRECAUTIONS

- Dispose of the old batteries properly. Do not dispose of old batteries in a fire.
- Do not leave batteries where a child or pet could play with or swallow them. If a battery is swallowed, contact a physician immediately.
- The batteries may explode if mistreated. Do not attempt to recharge or disassemble the batteries.
- Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries, or rechargeable batteries of different capacities.

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.





Modifications not authorized by the manufacturer may void the user's authority to operate this device.

WARNING

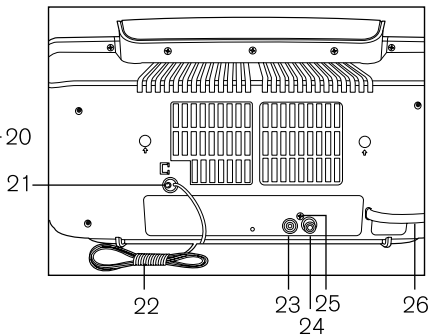
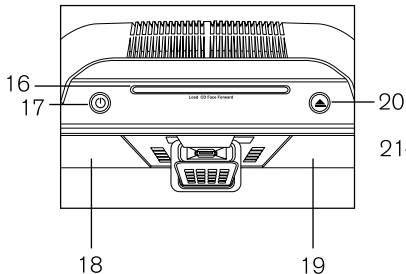
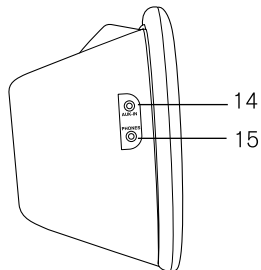
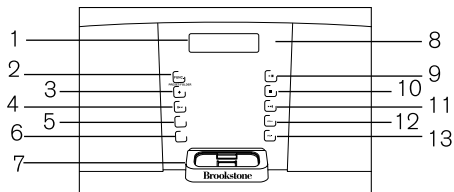
To protect your hearing, follow the below guidelines when using headphones.

1. Do not listen at an extremely high volume level. Extended high volume listening can lead to permanent hearing loss.
2. Turn the volume down before listening to headphones. Once you begin listening, adjust volume up to your desired sound level. This prevents the headphones from suddenly activating at a high level.
3. Once you set the volume level, do not increase it. Over time, your ears adapt to the volume level. So a volume level that does not cause discomfort might still damage your hearing.


LOCATION OF PARTS AND CONTROLS

1. LCD Display
2. Function Button
3. Preset/Folder + Button
4.  Previous/Tuning – Button
5. Program Button
6. Play Mode Button
7. iPod Connector
8. Remote Sensor
9.  Play/Pause/Band Button
10.  CD Stop Button
11.  Next/Tuning + Button
12. Volume + Button
13. Volume – Button
14. Aux-in Socket
15. Phone Jack (3.5mm)
16. CD Slot
17. Standby/On Button
18. Left Speaker
19. Right Speaker
20. CD Release Button
21. AM Antenna Socket
(AM Antenna included, not shown)
22. FM Antenna
23. Video Out Socket
24. Subwoofer Out Socket
25. Reset Switch
26. AC In Plug
27. AC Adapter (not shown)
28. 8 iPod Dock Adapters (not shown)
29. Protective Cover (not shown)

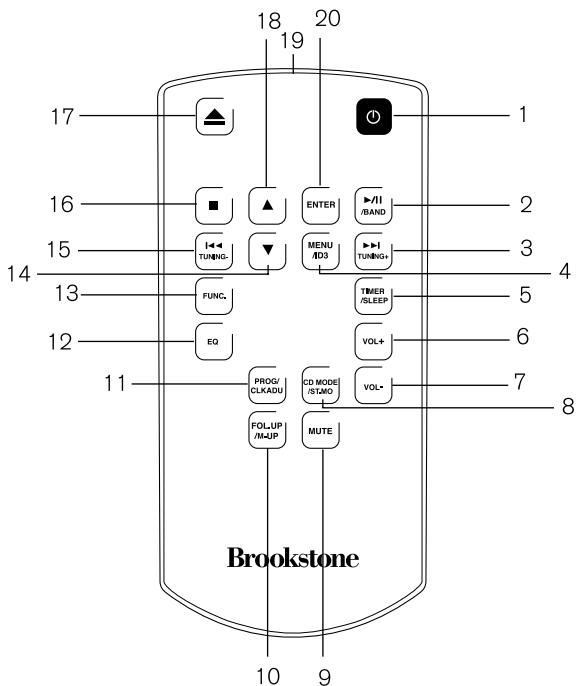
LOCATION OF PARTS AND CONTROLS



LOCATION OF PARTS AND CONTROLS ON REMOTE

1. Standby/On Button
2.  Play/Pause/Band Button
3.  Next/Tuning + Button
4. Menu/ID3 Button
5. Timer/Sleep Button
6. Volume + Button
7. Volume – Button
8. CD Play/Stereo Button
9. Mute Button
10. Fol.up/N-up Button
11. Prog/Clk Adj Button
12. EQ Button
13. Function Button
14.  iPod Menu Down Button
15.  Previous/Tuning – Button
16.  CD Stop Button
17. CD Eject Button
18.  iPod Menu Up Button
19. Infrared Transmitter
20. iPod Menu Enter Button

LOCATION OF PARTS AND CONTROLS ON REMOTE



REMOVAL OF PACKING MATERIALS

Remove all the accessories from the display package carefully. Verify that you have all the necessary accessories before you dispose of the package.

Remove all the packing materials from the individual components. Do not remove any labels or stickers on the back panels of the main unit.

REMOTE CONTROL BATTERY INSTALLATION

The remote control battery is already installed at the factory. To extend the life of the original battery we have inserted a small clear plastic spacer tab between the lithium battery and the battery terminal. You must pull this battery spacer tab out before you use the remote control. If the remote control stops operating, replace the battery with a new CR2025 3V lithium battery. To use the remote control, point it at the remote sensor within a 16-foot range and at an angle of 60 degrees.

To access the battery compartment on the remote control:

1. Squeeze the notched tab while pulling the battery holder out.
2. Insert a CR2025 3V lithium battery. Make sure the battery is installed according to the polarity indicators inside the compartment.
3. Slide the battery holder back into place.

CONNECTING

This system was designed to operate with AC 120V~60Hz power supply. Connecting the unit to a power supply with different voltages could damage the unit and also void your warranty.

1. Unwind the AC power cord completely.
2. Insert the plug into any convenient AC outlet.
3. Once the unit is connected to the main supply, the unit will enter standby mode. To turn the unit off completely, you must remove the main plug from the AC outlet.

Please disconnect the main plug from the AC outlet if the device is not going to be used for a long period of time.

SUBWOOFER CONNECTION

An external subwoofer speaker can be connected to the socket marked "Subwoofer" on the rear of the main unit.

1. Connect one end of RCA cable (not included) to the SUBWOOFER output socket, and the other side to your subwoofer (not supplied).
2. Press the STANDBY/ON button to switch the unit on and enjoy the music.

AUX CONNECTION

1. Connect a 3.5mm stereo jack lead (not included) to the AUX-IN jack and the other end to your preferred device.
2. Press the FUNCTION button on the unit or on the remote control to select AUX mode, "AUX" will be shown on the display.
3. Select the play function on the auxiliary device and the sound output can then be heard from the unit.

VIDEO OUTPUT CONNECTION

The video output from certain iPod models can be output to a TV using the VIDEO OUT jack. Connect one end of an RCA plug signal wire (not included) to the VIDEO jack and the other end to your home TV. Please note that the jack on your TV must be configured to accept input rather than output signals to enable this feature to work correctly. For iPod nano, touch and classic, VIDEO OUT function is disabled by default. iPod VIDEO OUT settings can be changed through menu "TV out option".

HEADPHONE CONNECTION

You can use headphones (not included) to listen in privacy. Insert the headphone's 3.5mm plug into the PHONE jack. Use corresponding adapters if you have different plugs. The unit's speakers will mute automatically when headphones are plugged into the jack.

WARNING:

To protect your hearing, follow below guidelines when you use the headphones.

1. Do not listen at an extremely high volume level. Extended high volume listening can lead to permanent hearing loss.
2. Turn the volume down before listening to headphones. Once you begin listening, adjust volume up to your desired sound level. This prevents the headphones from suddenly activating at a high level.
3. Once you set the volume level, do not increase it. Over time, your ears adapt to the volume level. So a volume level that does not cause discomfort might still damage your hearing.

COMPATIBLE iPod MODELS

iPod touch (2nd generation)*

iPod touch (1st generation)*

iPod classic*

iPod with video (5th generation)

iPod nano (5th generation)*

iPod nano (4th generation)*

iPod nano (3rd generation)*

iPod nano (2nd generation)*

iPod nano (1st generation)



iPod with color display (4th generation)

iPod mini

*DOCK ADAPTER included

BASIC OPERATION

TURN THE UNIT ON/OFF

Press the  STANDBY button on the main unit or remote control to turn the unit on. The system will switch to the last selected source. The Power On indicator around the STANDBY and CD RELEASE button will be lit. Press the STANDBY  button again to power the unit off. The clock will be shown on the display.

SELECTING OPERATING MODE

Press the FUNCTION button on the main unit or remote control to select TUNER, CD, iPod or AUX mode.

PLAY/PAUSE button

Press this button to begin playback or pause a CD. In Tuner mode, press this button to select FM or AM.

STOP button

Press this button to stop the playback of a disc.

VOL – and VOL + buttons

Press repeatedly to adjust sound level output from 00 (minimum) to 40 (maximum).

MUTE button

Press this button to mute the sound output from the unit. “-MUTE-” will flash on the display. Press the button again or press the volume control to resume the previous volume.

EQ button

Press this button to select one of the 5 preset sound equalizer settings. They are FLAT, ROCK, CLASSIC, POP and JAZZ.

CD PLAY MODE/ST-MO button


 



 


 

 
Press the CD MODE/ST-MO to select repeat function in CD mode. Press the CD PLAY MODE/ST-MO button in Tuner mode to switch in between stereo and mono reception.

CLOCK SETTING

When the unit is plugged into a wall outlet for the first time, the display will show "00:00" or "AM 12:00". The unit should be in Standby mode to set the current time.

1. In Standby mode, press the PROG button on the unit or the remote control. The hour digits "24H or 12H" will flash on the display.
2. Press the **◀◀** or **▶▶** buttons on the unit or the remote control to change to 24-hour or 12-hour time format.
3. Press the PROG button again, the hour digit will flash. Press **◀◀** or **▶▶** buttons on the unit or on the remote control repeatedly to select the current hour.
4. Press the PROG button again, the minute digit will flash. Press **◀◀** or **▶▶** buttons to select the current minute.
5. Press PROG button again to complete the setting of the current time.

TURNING THE TIMER ON/OFF

1. In Standby mode, press the TIMER/SLEEP button on the remote control, the  and hour digit will flash on the display. Then press the  or  buttons repeatedly to select the desired hour for timer. The  will disappear after an hour, or when you switch to other modes or turn the unit off.
2. Press the TIMER/ SLEEP button again, the minute digit flashes. Then press the  or  buttons repeatedly to select the desired minute, for example "9:30".
3. Press the TIMER/ SLEEP button, the iPod or TUNER or CD mode will flash in the display. Press the  or  buttons repeatedly to select the desired mode. (Do not forget to place a disc into the CD compartment or iPod into the iPod socket if your selected music source is CD or iPod)
4. Press the TIMER/ SLEEP button again, and the VOLUME digit will flash on the display. Press the  or  buttons repeatedly to select the appropriate sound level.
5. To deactivate the Timer On function, press the TIME/SLEEP button until the icon  disappears on the display.
6. Pressing the TIMER/SLEEP button again will start a new setting.

Note: To make the unit switch on at a set time, the clock needs to be set first before the timer can be used. During setting, if no button is pressed within 90 seconds, the system will exit Timer Setting mode automatically.

- The unit will automatically turn off after 60 minutes if the unit is turned on by the Timer On function.

- The unit will automatically turn on at the selected time. Please ensure the correct time is set before setting the Timer On function.
- The Timer On function can only be operated if the unit is switched to Standby mode when it is not in use.
- If you wish to be woken up by radio, ensure that a radio station is tuned.
- If the CD or iPod isn't connected when the unit turns on, the unit will switch to radio automatically.

SLEEP SETTING (AUTOMATIC TURN OFF)

The sleep time enables the system to switch off by itself after a set period of time.





1. When the unit is turned on, press the TIMER/SLEEP button repeatedly until the desired sleep time is shown on the display.
2. The SLEEP time can be set at 120, 90, 60, 30, 15, 0 minutes.
3. To deactivate the Sleep function, set the time to "0".
4. To cancel Sleep function, press either POWER button or SLEEP button once or more until the sleep indicator disappears from the display.

Note: You can set desired sleep time when the unit is in AUX mode.





If the playing time is shorter than the selected sleep time while CD or iPod is playing, the music will stop at the end of the disc.

TUNER OPERATION

Manual Operation

1. Press the  STANDBY button on the unit or on the remote control to turn on the unit.
2. Press the FUNC button to select Tuner mode. "TUNER" will show on the display.
3. Press the  button on the unit or on the remote control to select AM or FM.
4. Press the  /TUNING – or  /TUNING + buttons on the unit or remote control repeatedly to select the desired station.


Automatic Search Operation

1. Press and hold  /TUNING – or  /TUNING + buttons for approximately 2 seconds to automatically search for the previous or next radio station with a strong signal. Stations with a weak signal can be tuned manually.
2. Press and hold  /TUNING – or  /TUNING + buttons for approximately 2 seconds to start the station search again.

NOTE: During the search operation, the sound level will be muted automatically.

Preset Memory

This unit has a memory and is able to store 20 FM and 10 AM radio stations in the preset memory.

1. In Tuner mode, press the  button to select FM or AM.
2. Tune to a radio station either manually or by automatic search.
3. Press the PROG button on the unit or on the remote control. Then press the FOLDER UP/M-UP button repeatedly until the desired memory position number appears on the display.

4. Press the PROG button again to save the programmed station.
5. To store the remaining stations, repeat steps 2–4.

Note: If you wish to save a new station over a current one, follow the steps above. Any stations that have been stored in the memory will be overwritten by the new station.

CD PLAY/STEREO and PLAY MODE buttons

1. Press PLAY MODE or CD PLAY/STEREO buttons repeatedly to switch between stereo and mono reception.
2. When the unit is tuned into a stereo broadcast with a good signal, "STEREO" will appear on the display.
3. If a stereo broadcast is received, but with interference, switch to mono mode.

Using the Preset Station Memory

Press the FOL.UP/M-UP or PRESET/FOLDER buttons on the remote or the unit repeatedly to select preset stations that are stored in the memory.

RECEPTION TIPS

FM: Extend FM Wire Antenna completely for best reception. If a stereo broadcast is received, "STEREO" will appear on the display.


AM: Connect the AM Loop Antenna to AM Antenna Socket. Move it 12 inches away from the main unit, and then rotate the AM Loop Antenna for best reception.

Note: The unit will not charge the iPod in Radio mode.

COMPACT DISC OPERATION

USING COMPACT DISC SLOT

Loading Discs

1. Press the STANDBY or  button to turn "ON" the unit.
2. Hold the CD by the edges with CD graphic side facing front (refer to the warning "LOAD CD FACE FORWARD" on the unit) and insert it into the CD slot gently. The CD will be placed into the CD tray automatically after a few seconds (you also can press the CLOSE button). "CD CLOSE" will appear on the display.

Ejecting Discs

1. Press the CD/RELEASE button or EJECT button on the unit or remote control. "OPEN" will appear on the display, and the CD will be released automatically.
2. Take out the CD. To remove the disc, hold it by the edges and remove it from the slot.
3. When the CD is released, and you want to listen to it again, remove the disc completely and gently reinsert it into the CD slot again.



Note: Press the disc straight down when it's in the slot.

NORMAL PLAYBACK



After loading the disc, press FUNC button to select CD Mode until "TOC READ" flashes on the display. The disc will begin spinning and the total number of the tracks on the disc and total playback time will be shown on the display. The unit will play the CD starting with the first track.

Note: If there is no disc in the unit, "NO DISC" will appear on the display.

Pause

To pause temporarily during CD playback, press the  button. The disc will pause and the elapsed track time will flash on the display. Press the  button again to resume playback.



 

Stop

To stop CD playback, press the  button on the unit or on the remote control. The CD will stop playback and the whole tracks and time of the disc will be shown on the display. Press the  button to return to the beginning of the first track.

Skip Track

During playback, press the  or  buttons to skip to the next or previous tracks.

High-Speed Music Search

During playback, press and hold the  or  buttons to skip/search through a track at high speed. When you release the  or  button, normal speed playback will resume at that point.

Play Modes

1. Repeat the Current Track

- Select the track to be repeated and begin playback.
- Press the CD MODE button on the remote once.
- "Repeat" will flash on the display and the selected track will be repeated continuously.

2. Repeat All Tracks

- During playback, press the CD MODE button twice.
- "Repeat" will be shown on the display and all tracks on the disc will be repeated continuously.

3. Random Playback

The Random playback feature allows you to play all the tracks on the current disc in a random order. This function can be selected when the disc is playing or stopped.

- Press the CD MODE button three times to enter Random Playback mode. "RANDOM" will flash on the display.
- Press the CD MODE button four times to cancel Random Playback mode and normal playback will resume.

Programmed Playback

The CD player can be programmed to play any sequence of up to 20 tracks in CD mode. Load compact disc into the CD compartment.

1. Press PROG/CLK ADJ button on the remote once while CD player is stopped/not playing. "PROGRAM" will flash on the display.
2. Press **◀◀** or **▶▶** buttons to select the desired track to be programmed. For example, track 3.

3. Press PROG/CLK ADJ button again to save the selected track.
The programmed serial number "P02 00" appears on the display.
4. Repeat steps 2-3 to program up to 20 tracks.
5. Press the **▶||** button to play the programmed tracks when programming is completed.

Clear Program (Resume Normal Playback)



Press STOP button twice in Programmed Playback mode, or release the CD door, or change to another mode to clear the programmed tracks.

MP3 DISC OPERATION



Normal Playback

After loading a MP3 disc, the MP3 will be read automatically. "TOC READ" flashes in the display. The total number of folders and tracks will be displayed briefly and the playback of the disc will begin at the first track of the first folder. The "MP3", folder number, track number and playing time will be indicated on the display. The folder number and the track number will take turns flashing on the display.

Pause Control



To pause temporarily during MP3 disc playback, press the  button. The disc will pause and the elapsed track time will flash on the display. Press the  button again to resume playback.

Stop Control

To stop MP3 disc playback, press the  button once on the unit or on the remote control. Playback will stop and the folder and track number will be indicated on the display. Press the  button to return to the beginning of the first track.

Skip Track

During playback, press the  or  buttons on the unit or on the remote control to skip to the next or previous tracks.

During playback, press and hold the  or  buttons to search forwards or backwards through the current track. When the desired part of the track is reached, release the button and playback will resume.

Skip Folder

In stop mode or during playback, press the FOLD+ on the unit, or the FOLD+ or FOLD- buttons on the remote control to skip to next or previous folders. Playback will begin at the first track in the selected folder.

ID3 Function

During MP3 disc playback, if ID3 option is "ON", the ID3 tagging information that may be encoded onto the disc will show in the display. Information such as album, title and artist will scroll across the display when this function is selected.

Play Modes for MP3s

1. Repeat the Current Track

Select the track to be repeated and begin playback. Press the CD MODE button on the remote control or PLAY MODE button on the unit once. "REPEAT" will flash on the display and the selected track will be repeated continuously.

2. One Folder Repeat

Select the folder to be repeated and begin playback. Press the CD MODE button or PLAY MODE twice. "REPEAT FOLDER" will show on the display and the selected folder will be repeated continuously.

3. Repeat All

Press the CD MODE button or PLAY MODE button a third time, "REPEAT" will show on the display and all tracks on the disc will be repeated continuously.

4. Random Playback

The Random Playback feature allows you play all the tracks in random order. You can select random playback while the discs are playing or when the player is stopped. Press the CD MODE or PLAY MODE button a fourth time. "RANDOM" will show on the display and all tracks will play in a random order.

Programmed Playback for MP3s

It is possible to program a selection of up to 20 files for playback. Individual tracks can be programmed more than once.

1. After a CD containing MP3 tracks is loaded, press the PROGRAM button on the unit or on the remote control. "P01F-00" and "F-00" appears on the display.
2. Press the **◀◀** or **▶▶** buttons to select the desired folder and then press the PROG. or PROGRAM button to confirm. "P01 000" appears in the display.
3. Press the **◀◀** or **▶▶** buttons to select the desired track and then press the PROG. or PROGRAM button to confirm. "P02 F-00" appears in the display.
4. Repeat steps 2-3 until the memory is full.
5. When programming is complete, press the **▶||** button to begin playback of the selected folders/files.

Clear Program (Resume Normal Playback)

Press the **■** STOP button twice, release the CD, or change to another mode to erase the programmed tracks.

iPod OPERATION

This unit is equipped with a docking system to allow you to connect and play your iPod. The docking system is able to fit most types of iPod models currently available. The unit is designed with a universal docking station that will accommodate your iPod's own insert.

This unit can also charge the iPod's battery when the iPod is connected via the dock.

Note: The charging function is not available in Radio mode.

DOCK ADAPTER

Select the appropriate DOCK ADAPTER for your iPod from the ones included in the box or use the one that came with your iPod. Take care to use the correct one, as this will ensure the iPod is held securely in place.




 




Gently press the iPod DOCK ADAPTER into the dock at the top of the unit.

Carefully place your iPod into the dock. (The iPod must not be in a case or "skin".)

To remove/replace a DOCK ADAPTER:

First remove your iPod by gripping the sides of the iPod and lifting straight up. Then, grip the DOCK ADAPTER and pull it upwards.

OPERATING iPod WITH THE MAIN UNIT

1. Press the  STANDBY button to turn on the unit.
2. Press the FUNC. button repeatedly to select iPod mode. "iPod" will be indicated on the display.
3. Press  or  buttons repeatedly to select the next or previous music track. Press  button to play or pause.
4. Press , , ENTER and MENU button on the remote control to operate the menu and other functions of the iPod.
5. Press MENU button to show the menu screen of the iPod, then use ,  buttons to highlight the item you want to operate. Press ENTER button to confirm. (You can also operate the buttons on your iPod.)

6. Press the VOL– and VOL+ buttons to adjust to the desired sound level.

NOTE: If you want to watch photos and videos from the iPod, please connect the VIDEO sockets on the rear of the unit as described in the “Video Output Connection” section of the user guide.

CHARGING YOUR iPod


While your iPod is docked, it will automatically recharge until it is fully charged in CD or AUX mode.

Other non-docking types of iPod models will NOT be charged.

Note: The unit will not charge the iPod in Radio mode.

OPERATING AUX IN CONNECTION (audio cable is not included)

You can listen to the sound of the connected external device through your stereo system’s speakers.

1. Connect one end to a 3.5mm plug signal wire to the AUX IN SOCKET and the other end to home equipment such as a portable CD player or VCR.
2. Press the  STANDBY button to turn the unit “ON”.
3. Press the FUNC button repeatedly to select AUX mode and the display shows “AUX”.
4. The unit is now set up to play your home equipment.
5. Press the VOL– and VOL+ buttons on the unit or press the VOLUME button on the remote control to adjust the sound level.

CD CARE AND MAINTENANCE

- Treat the disc carefully. Handle the disc only by its edges. Never allow your fingers to contact the shiny, unprinted side of the disc.
- Do not attach adhesive tape, stickers etc., to either side of a disc.
- Clean the disc periodically with a soft, lint-free, dry cloth. Never use detergents or adhesive cleaners to clean the disc. If necessary, use a CD cleaning kit.
- If a disc skips or gets stuck at a section of the disc, it is probably dirty or damaged (scratched).
- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.
- Fingerprints and dust should be carefully wiped off the disc's recorded surface with a soft cloth. Unlike conventional records, compact discs have no grooves to collect dust and microscopic debris, so gently wiping with a piece of soft cloth should remove most particles.

IMPORTANT: When cleaning the disc, wipe in straight lines from the center of the disc to the edge of the disc. Never wipe in circular motions.

CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- If the cabinet becomes dusty, wipe it with a soft, dry, dust cloth. Do not use any wax or polish sprays on the cabinet.
- If the cabinet becomes dirty or smudged with fingerprints, it may be cleaned carefully with a soft, damp cloth. Never use abrasive cloth or polishes as this will mar the finish of the unit.

IMPORTANT: Never allow any water or other liquids to get inside the unit while cleaning.

RESETTING THE UNIT

If the unit exhibits abnormal operation, or fails to respond to button presses, use a pointed non-metallic object such as a pencil tip to press the RESET button located on the back of the unit.

Disconnect the AC power from AC outlet and wait for a few seconds for the built-in microcomputer to reset.

TROUBLESHOOTING (RADIO)

| ISSUE | POSSIBLE CAUSE | SOLUTION |
|--|--|---|
| No signal from the radio. | Unit is not in radio mode. | Press the FUNC button and select radio mode. |
| Noise or sound distorted on AM or FM broadcasting. | Station is not tuned properly. | Retune the AM or FM station. |
| | FM: Wire antenna is not extended. | Extend the FM wire antenna. |
| | AM: AM antenna is not positioned properly. | Reposition the AM antenna until the best reception is obtained. |
| FM STEREO indicator will not illuminate. | Signal is not strong enough, or the station is a mono station. | Extend the FM antenna or find another FM station. |
| AM or FM has no sound. | Unit is not in TUNER function on an AM or FM band. | Press tuner button to select AM or FM band. |
| | Volume is at the lowest level or the unit is in MUTE mode. | Increase the volume level or press MUTE button to resume the previous volume level. |

TROUBLESHOOTING (CD PLAYER)

| ISSUE | POSSIBLE CAUSE | SOLUTION |
|-------------------------|--|---|
| CD player doesn't play. | Unit is not in CD mode. | Press the FUNC button and select CD mode. |
| | CD is not loaded correctly, or there is no CD loaded at all. | Load a CD. Make sure the CD is loaded with the label on the correct side. |
| | Disc format is not compatible. | Change it to a compatible CD format. |
| CD skips while playing. | Disc is dirty or scratched. | Wipe the disc with a soft, dry cloth or use another disc. |

SPECIFICATIONS

| | |
|----------------------------------|--|
| Power Source..... | AC 120V~60Hz |
| Battery for Remote Control | DC 3V CR2025 Lithium Battery |
| Power Consumption..... | 32W |
| Dimensions..... | 438 w x 171 d x 203 h (mm) |
| Frequency Range | FM: 87.5 - 108 MHz AM: 520 - 1710 kHz |
| Power Output..... | 2 x 5W |
| Speaker Impedance | 4 ohms |
| Headphone Impedance | 32 ohms |

iPod not included. iPod is a trademark of Apple Inc., registered in the U.S. and other countries. "Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser (“Warranty Period”). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone’s property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone’s property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the “Brookstone” trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own warranties to the purchaser,

but Brookstone, in so far as permitted by law, provides these products “as is.” This warranty does not apply to: a) damage caused by failure to follow instructions relating to product’s use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold “as is” including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Brookstone®

A WORLD OF INNOVATION

Since 1965, people have come to Brookstone to see what's new, discover smart solutions to everyday problems—and have some fun. At Brookstone, we believe there's always a better way to do things. And we created a world of innovation to prove it.

Merrimack, New Hampshire USA 03054 • 800-846-3000 • www.Brookstone.com

634410