

# EG4<sup>®</sup> WALLMOUNT ALL WEATHER BATTERY

---

## USER MANUAL



## TABLE OF CONTENTS

|      |  |    |
|------|--|----|
| 1.   | TECHNICAL SPECIFICATIONS .....               | 1  |
| 2.   | ABBREVIATIONS.....                           | 3  |
| 3.   | BATTERY SAFETY .....                         | 4  |
| 3.1  | SAFETY INSTRUCTIONS.....                     | 4  |
| 3.2  | IMPORTANT SAFETY NOTIFICATIONS.....          | 4  |
| 4.   | BRIEF INTRODUCTION .....                     | 6  |
| 4.1  | PRODUCT DESCRIPTION.....                     | 6  |
| 5.   | PACKING LIST.....                            | 7  |
| 5.1  | BATTERY DIAGRAM.....                         | 8  |
| 6.   | LOCATION SELECTION AND INSTALLATION .....    | 9  |
| 6.1  | POWERPRO CONDUIT BOX INSTALLATION.....       | 10 |
| 6.2  | INSTALLATION WITHOUT A CONDUIT BOX.....      | 13 |
| 6.3  | INSTALLATION WITH A CONDUIT BOX.....         | 14 |
| 6.4  | WITH EG4 18KPV INVERTER.....                 | 17 |
| 7.   | GENERAL INSTALLATION .....                   | 20 |
| 7.1  | BATTERY PARALLELING GUIDE.....               | 20 |
| 7.2  | BATTERY CABLE CONNECTIONS.....               | 21 |
| 7.3  | ADDITIONAL CONFIGURATIONS .....              | 22 |
| 8.   | EMERGENCY STOP (RSD, ESS DISCONNECT).....    | 25 |
| 9.   | BATTERY COMMUNICATIONS.....                  | 26 |
| 9.1  | DIP SWITCH ID TABLE .....                    | 26 |
| 9.2  | LCD SCREEN .....                             | 27 |
| 9.3  | COMMUNICATION PROTOCOL SELECTION.....        | 28 |
| 10.  | OPERATION GUIDE .....                        | 30 |
| 10.1 | BMS TOOLS INSTALLATION AND INTERFACING ..... | 30 |
| 11.  | BATTERY CHARGING .....                       | 33 |
| 11.1 | BATTERY PERFORMANCE CURVES.....              | 34 |
| 12.  | TROUBLESHOOTING, MAINTENANCE & DISPOSAL..... | 35 |
| 12.1 | INTRODUCTION TO THE BMS.....                 | 35 |
| 12.2 | BMS PROTECTION .....                         | 35 |
| 12.3 | TROUBLESHOOTING.....                         | 36 |
| 12.4 | BATTERY END OF LIFE .....                    | 38 |
| 13.  | WARRANTY INFORMATION.....                    | 38 |
| 14.  | STORAGE .....                                | 38 |
| 15.  | CHANGELOG.....                               | 39 |

## 1. TECHNICAL SPECIFICATIONS

| MODULE OPERATING PARAMETERS    |                                    |                   |  |
|--------------------------------|------------------------------------|-------------------|--|
| Parameter                      | BMS                                |                   | Recommended Settings                                 |
| Total Energy Capacity          | 14.3kWh @25°C, 100% SOC            |                   | -  |
| Voltage                        | 51.2V                              |                   | -  |
| Capacity                       | 280Ah ±2%                          |                   | @25°C ±2°C @ 0.5C                                    |
| Charging Voltage (Bulk/Absorb) | 56.0V (±0.8V)                      |                   | 56.2V (±0.2V)  |
| Float                          | -                                  |                   | 54V (±0.2V)  |
| SOC Cutoff                     | -                                  |                   | 20%*   |
| Charge Current                 | 200A Max. Continuous               |                   | 60 - 160A  |
| Discharge Current              | 200A Max. Continuous               |                   | 160A   |
| BMS PARAMETERS                 |                                    |                   |  |
| Charge                         | Spec                               | Delay             | Recovery   |
| Cell Voltage Protection        | 3.8V                               | 1 sec             | 3.45V  |
| Module Voltage Protection      | 60V                                | 1 sec             | 55.2V  |
| Charge Over-Current 1          | >205A                              | 10 sec            | -  |
| Charge Over-Current 2          | >225A                              | 3 sec             | -  |
| Temperature Protection         | <23°F or >158°F<br><-5°C or >70°C  | 1 sec             | >32°F or <140°F<br>>0°C or <60°C                     |
| Discharge                      | Spec                               | Delay             | Recovery   |
| Cell Voltage Protection        | 2.3V                               | 1 sec             | 3.1V   |
| Module Voltage Protection      | 44.8V                              | 1 sec             | 48V  |
| Discharge Over-Current 1       | >205A                              | 10 sec            | 60 sec   |
| Discharge Over-Current 2       | >300A                              | 3 sec             | 60 sec   |
| Short Circuit                  | 2000A                              | 0.1 ms            | -  |
| Temperature Protection         | <-4°F or >167°F<br><-20°C or >75°C | 1 sec             | >14°F or <149°F<br>>-10°C or <65°C                   |
| PCB Temperature Protection     | >230°F (>110°C)                    | 1 sec             | @ <176°F (<80°C)                                     |
| GENERAL SPECIFICATIONS         |                                    |                   |  |
| Parameter                      | Spec                               |                   | Condition  |
| Cell Balance                   | 120mA                              | Passive Balance   | Cell Voltage Difference<br>>40mV                     |
| Temperature Accuracy           | 3%                                 | Cycle Measurement | Measure Range:<br>-40°F – ≈212°F<br>(-40°C – ≈100°C) |
| Voltage Accuracy               | 0.5%                               | Cycle Measurement | Cells & Module                                       |
| Current Accuracy               | 3%                                 | Cycle Measurement | Measure Range:<br>-200 – 200A                        |
| SOC                            | 5%                                 |                   | Integral Calculation                                 |
| Power Consumption (Standby)    | <300uA                             |                   | Standby/Storage                                      |
| Power Consumption (Operating)  | <25mA                              |                   | Charging/Discharging                                 |
| Communication Ports            | RS485/CAN                          |                   | Customizable   |
| BATTERY HEATER SPECIFICATIONS  |                                    |                   |  |
| Parameter                      | Spec                               |                   | Condition  |
| Voltage                        | 56V                                |                   | -  |
| Power Consumption              | 224W                               |                   | -  |
| Internal Battery Temperature   | ≤32°F (0°C) or ≥41°F (5°C)         |                   | Heat On/Heat Off                                     |

## ENVIRONMENTAL PARAMETERS

|                    |                                 |
|--------------------|---------------------------------|
| Charging Range     | 32° to ≈113°F (0°C to ≈45°C)    |
| Discharging Range  | -4°F to ≈122°F (-20°C to ≈50°C) |
| Storage Range      | -4°F to ≈122°F (-20°C to ≈50°C) |
| Ingress Protection | IP65                            |
| Operating Altitude | <6561.68 ft. (<2000m)           |

## PHYSICAL SPECIFICATIONS

|                        |  |
|------------------------|--|
| Dimensions (H × W × D) | 34.6 × 22.3 × 9.1 in. (88 × 56.6 × 23.2cm) |
| Weight                 | 308.6 lbs. (140 kg)                        |
| Design Life            | >15 years                                  |
| Cycle Life             | >8000 Cycles @ 0.5C 80% DOD                |
| Lifetime Production    | 82.6MWh**                                  |

\*EG4 recommends this value be set no lower than 20% to maintain the recommended 80% depth of discharge.

\*\* $(51.2V \times 280Ah / 1000 \times 80\% \times 8000 \text{ cycles} / 1000) 90\% = MWh$

## 2. ABBREVIATIONS

- AWG – American Wire Gauge
- A – Amps
- Ah – Amp hour(s)
- AC – Alternating Current
- AFCI – Arc-Fault Circuit Interrupter
- AHJ – Authority Having Jurisdiction
- kAIC – kilo-Amp Interrupting Capability
- ANSI – American National Standards Institute
- BAT – Battery
- BMS – Battery Management System
- COM – Communication
- CT – Current Transformer
- DC – Direct Current
- DIP – Dual In-line Package
- DOD – Depth of Discharge
- EG – Equipment Ground
- EGS – Equipment Grounding System
- EMC – Electromagnetic Compatibility
- EPS – Emergency Power System
- ESS – Energy Storage System
- E-Stop – Emergency Stop
- FCC – Federal Communication Commission
- GE – Grounding Electrode
- GEC – Grounding Electrode Conductor
- GFCI – Ground Fault Circuit Interrupter
- GFDI – Ground Fault Detector/Interrupter
- Imp – Maximum Power Point Current
- IEEE – Institute of Electrical and Electronic Engineers
- IP – Ingress Protection
- I<sub>sc</sub> – Short-Circuit Current
- In-lbs. – Inch Pounds
- kW – Kilowatt
- kWh – Kilowatt-hour
- LCD – Liquid Crystal Display
- LFP – Lithium Iron Phosphate
- L1 – Line 1
- L2 – Line 2
- mm – Millimeters
- MPPT – Maximum Power Point Tracking
- mV – Millivolt
- N – Neutral
- NEC – National Electric Code
- NEMA – National Electrical Manufacturers Association
- NFPA – National Fire Prevention Association
- Nm – Newton Meters
- NOCT – Normal Operating Cell Temperature
- PC – Personal Computer
- PCB – Printed Circuit Board
- PE – Protective Earth
- PPE – Personal Protective Equipment
- PV – Photovoltaic
- RSD – Rapid Shut Down
- SCC – Standards Council of Canada
- SOC – State of Charge
- STC – Standard Testing Conditions
- UL – Underwriters Laboratories
- UPS – Uninterrupted Power Supply
- V – Volts
- VOC – Open-Circuit Voltage
- VMP – Voltage Maximum Power

## 3. BATTERY SAFETY

### 3.1 SAFETY INSTRUCTIONS

Before any work begins, carefully read all safety instructions, and always observe them when working on or with the battery. The installation must follow all applicable national or local standards and regulations. Consult with the local AHJ to obtain the proper permits and permissions before installation.

**Incorrect installation may cause:**

- *Injury or death to the installer, operator or third party*
- *Damage to the battery or other attached equipment*

### 3.2 IMPORTANT SAFETY NOTIFICATIONS



#### **DANGER!**

#### ***Hazardous Voltage Circuits!***

There are various safety concerns that must be carefully observed before, during, and after the installation, as well as during future operation and maintenance. The following are important safety notifications for the installer and any end users of this product under normal operating conditions.

1. **Do not disassemble the battery.** Contact the distributor for any issues that need repair for more information and proper handling instructions. Incorrect servicing or re-assembly may result in a risk of electric shock or fire and void the warranty.
2. **Never short-circuit DC inputs.** Short-circuiting the battery may result in a risk of electric shock or fire and can lead to severe injury or death and/or permanent damage to the unit and/or any connected equipment.
3. **Use caution when working with metal tools on or around batteries and systems.** Risk of electrical arcs and/or short circuiting of equipment can lead to severe injury or death and equipment damage.
4. **Beware of high battery current.** Ensure that the battery module breakers and/or on/off switches are in the “open” or “off” position before installing or working on the battery. Use a voltmeter to confirm there is no voltage present to avoid electric shock.
5. **Do not make any connections or disconnections to the system while the batteries are operating.** Damage to system components or risk of electrical shock may occur if working with energized batteries.
6. Make sure the battery and rack are properly grounded.
7. An installer should make sure to be well protected by reasonable and professional insulative equipment [e.g., personal protective equipment (PPE)].
8. Before installing, operating, or maintaining the system, it is important to inspect all existing wiring to ensure it meets the appropriate specifications and conditions for use.
9. Ensure that the battery and system component connections are secure and proper to prevent damage or injuries caused by improper installation.



## **WARNING: TO REDUCE THE RISK OF INJURY, READ ALL INSTRUCTIONS!**

All work on this product (system design, installation, operation, setting, configuration, and maintenance) must be carried out by qualified personnel. To reduce the risk of electric shock, do not perform any servicing other than those specified in the operating instructions unless qualified to do so.

1. Read all instructions before commencing installation. For electrical work, follow all local and national wiring standards, regulations, and these installation instructions. All wiring should be in accordance with the National Electrical Code (NEC), ANSI/NFPA 70.
2. The battery and system can connect with the utility grid only if the utility provider permits. Consult with the local AHJ before installing this product for any additional regulations and requirements for the area.
3. All warning labels and nameplates on this battery should be clearly visible and must not be removed or covered.
4. The installer should consider the safety of future users when choosing the battery's correct position and location as specified in this manual.
5. Keep children away from touching or misusing the battery and relevant systems.

The battery is designed to stop charging when reaching the low threshold of 32°F. If charging current is observed when the internal battery temperature is below 32°F, disconnect battery immediately and consult distributor.



## **WARNING!**

*Cancer and Reproductive Harm – See [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov) for more details.*

## **DISCLAIMER**

EG4 reserves the right to make changes to the material herein at any time without notice.

Please refer to [www.eg4electronics.com](http://www.eg4electronics.com) for the most updated version of our manuals/spec sheets.

## 4. BRIEF INTRODUCTION

### Battery Features

- Constant rated output current of 200A
- IP65 all-weather rated, integrated self-heating during low ambient temperatures
- Smart balancing of cells enhancing the battery consistency and the lifespan up to 15 years of life with over 8000 cycles at 80% DOD at 0.5C
- Built-in intelligent BMS with battery voltage, current, temperature, and health management to reduce electrical risks and overheating
- Internal busbars rated to 600 Amps for paralleling multiple batteries and feeding multiple inverters
- Real time monitoring and LCD screen to display battery voltage, current, temperature, SOC in detail
- Integrated E-stop circuit supports emergency stop function with remote Rapid Shutdown Initiator (RSD) or Energy Storage Systems (ESS) disconnect or by inverter's RSD or ESS terminals
- Communicate with inverter using CAN or RS485. Firmware update using RS485
- Plug-and-play cable installation with the use of the 250A weather-tight quick connectors
- Stable, reliable, and maintenance-free battery pack
- Comprehensive safety UL9540A, UL1973 on cell and module level with enhanced onboard fire-extinguishing modules


### 4.1 PRODUCT DESCRIPTION

The EG4 48V WallMount All Weather 280Ah batteries are ideal for low-voltage residential outdoor energy storage system (ESS) applications. These batteries use lithium iron phosphate (LiFePO<sub>4</sub> or LFP) cells with the highest safety performance and an intelligent Battery Management System (BMS) that can monitor and record the voltage of each cell, along with the current, voltage, and temperature of the module in real-time. The BMS also contains a passive balance function and an advanced battery control method, both of which improve the performance of the battery pack. For enhanced security, the battery has two onboard fire-extinguishing modules. With a design life of more than 15 years, the WallMount is designed to last over 8000 cycles at 80% DOD at 0.5C°.

## 5. PACKING LIST

The items listed below are included with the purchase:

Figure 1 – Packing List

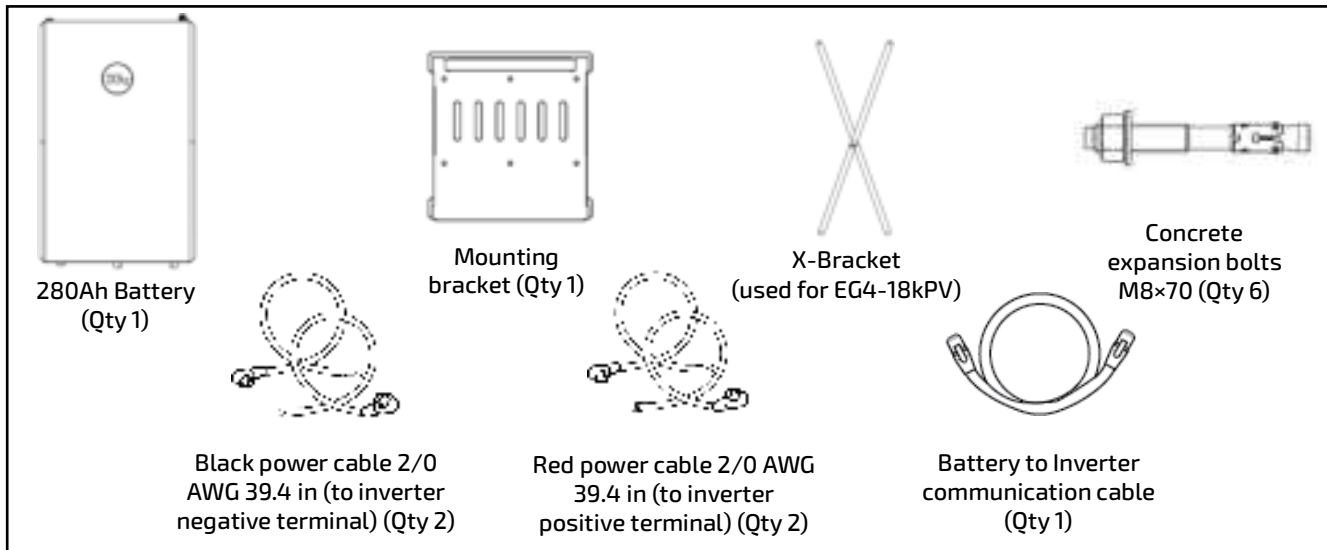

## Battery Overview

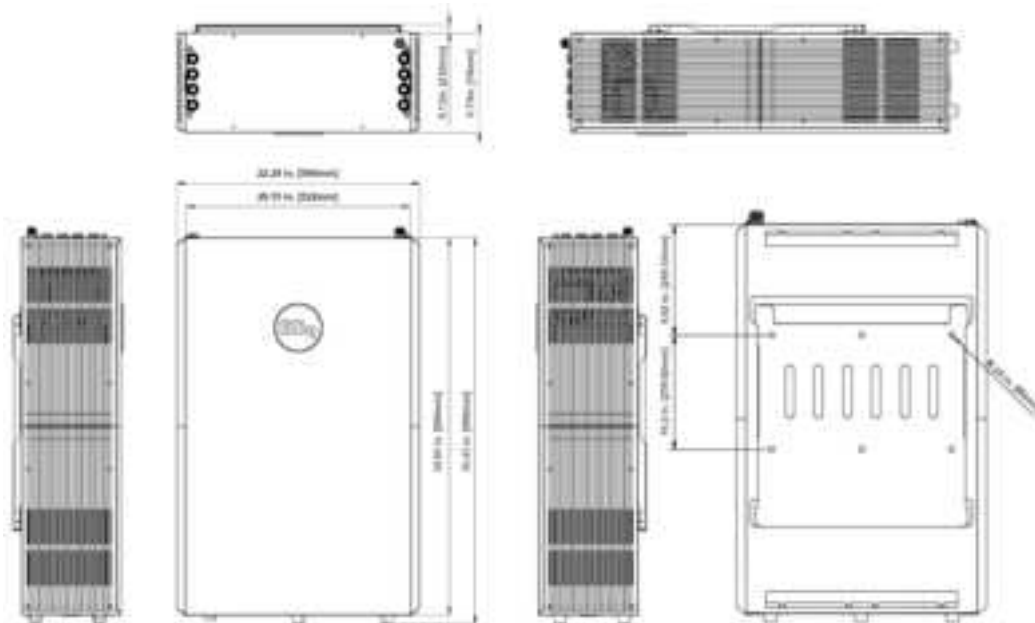


Figure 2 – Battery Cross-Sectional View




**DANGER:** When installing or removing battery, ensure battery is in the off position, and use a voltmeter to confirm there is no voltage present. This will prevent users from encountering live (powered) terminals by accident.

**Failure to do so can result in severe injury and/or death.**

## 5.1 BATTERY DIAGRAM

It is highly recommended to install the battery with at least 6-inch (152.4 mm) clearance on each side of the battery (back and front sides excluded) to easily access the side panel.

Side Panel Screws

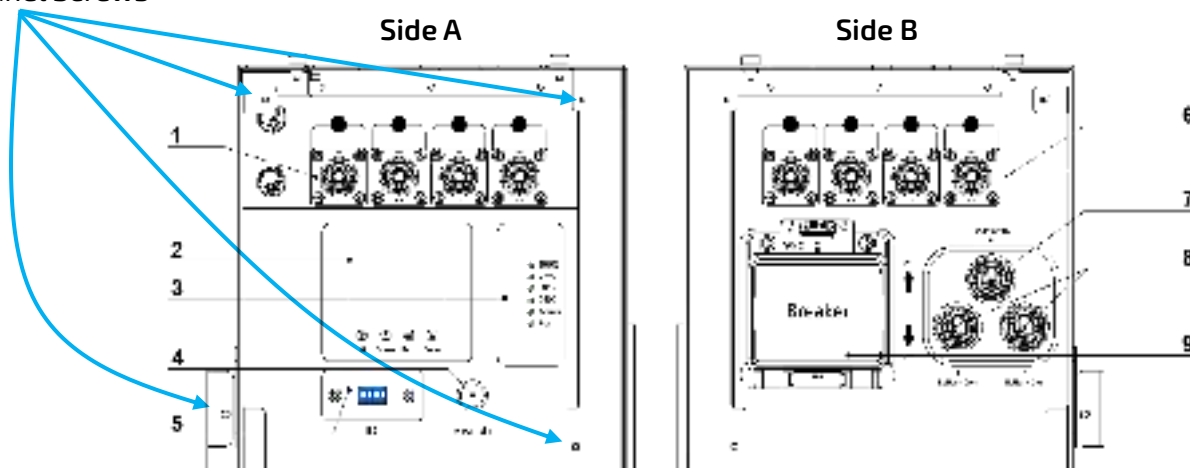

**Figure 3 – Battery (side view)**



**NOTE:** Additional hardware **may** be required to remove the side terminal covers. EG4 recommends a Phillips head screwdriver to remove said screws.

| NO. | ITEM                       | DESCRIPTION   | REMARKS  |
|-----|----------------------------|---|--|
| 1   | Negative Terminals         | Connects to negative terminal of Inverter and/or paralleled battery |  |
| 2   | LCD Screen                 | Shows battery information   |  |
| 3   | SOC Display                | State of Charge LED   |  |
| 4   | Power Switch               | Turns BMS on/off  |  |
| 5   | ID/DIP Switch              | DIP Switch board for BMS  |  |
| 6   | Positive Terminal          | Connects to positive terminal of Inverter and/or paralleled battery |  |
| 7   | RS485/CAN Port             | RS485/CAN Communication Interface                                   | Pin 1 & Pin 8 – RS485_B<br>Pin 2 & Pin 7 – RS485_A<br>Pin 4 – CAN_H<br>Pin 5 – CAN_L |
| 8   | Battery-Comm               | Parallel battery Communication Port                                 | Pin 1 & Pin 8 – RS485_B<br>Pin 2 & Pin 7 – RS485_A<br>Pin 3 & Pin 6 – E-Stop NO      |
| 9   | Battery Disconnect Breaker | Turns power supply on/off   | Double Pole Single Throw<br>125 Frame size<br>125A Rating*                           |



**\*NOTE:** The battery disconnect breaker is 2 single pole breakers with a singular switch, paralleled together to reach a 250A rating.

## 6. LOCATION SELECTION AND INSTALLATION



### WARNING

- **Do not put these batteries in series.** The BMS and internal components are not designed to handle this setup, which could cause the modules to fail.
- The WallMount battery is heavy. Use a lift or other equipment to lift and carry the unit.
- The battery can be installed against a flat wall, but the weight of the battery should not be fully supported by the wall. To help with this requirement, the battery comes with pre-installed feet that should be used to allow some of the weight of the battery to rest on the ground.
- If the battery is installed against a wall, EG4 *insists* the wall to be made of non-combustible material. If this is not possible, then the unit **MUST** have a minimum of 2 in. (50.8mm) of clearance from the wall to prevent heat transfer to the wall surface. Also note that whatever mounting solution that is used to grant the 2 in. clearance from the wall **MUST** be a non-combustible material.
- If installing on flat ground as a standalone unit, ensure there is proper drainage on the ground surrounding the battery to maintain integrity of the module over time and prevent damage from flooding. If installing against a wall, ensure at least a 6 in. (152.4 mm) gap on each side of the unit for adequate airflow and operations.
- Always mount the battery in an upright position.



**NOTE:** The battery will be shipped with temporary lifting handles for removing the battery from its packaging. See image below for location. EG4 recommends removing the handles before connecting any wiring to the battery.


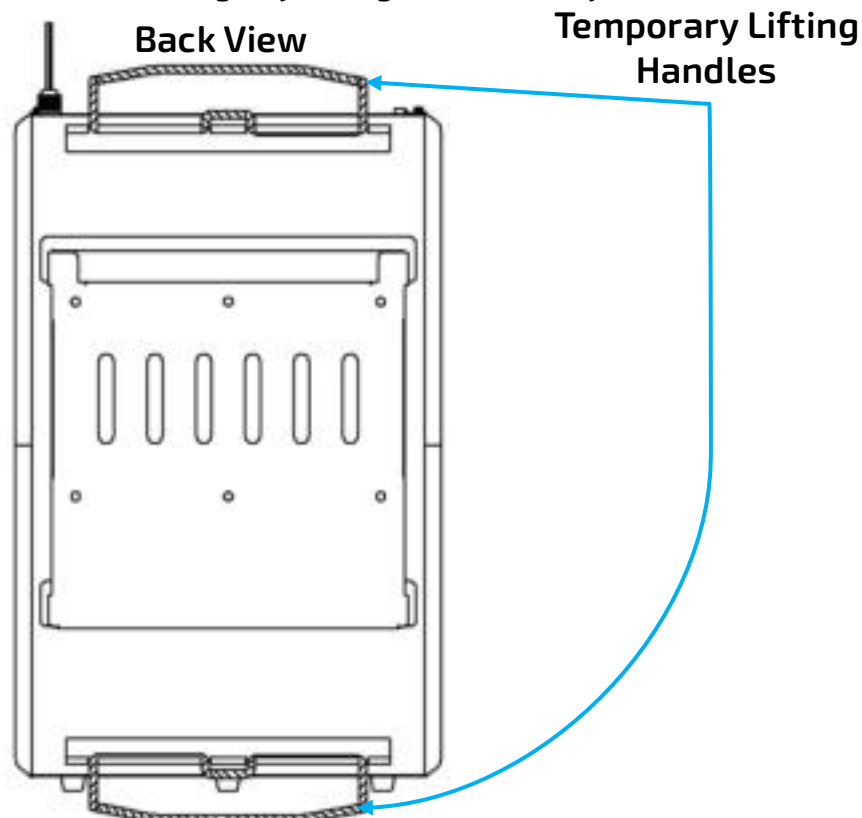


Figure 4 – Battery Lifting Handles

- Ensure at least 6 in. (152.4 mm) between multiple WallMount batteries and other devices unless it is installed as a part of PowerPro WallMount ESS that includes the EG4-18kPV with the conduit box. In a PowerPro WallMount ESS installation, the conduit box is attached directly to both battery and inverter.
- Please follow NEC and other local codes while installing the product.

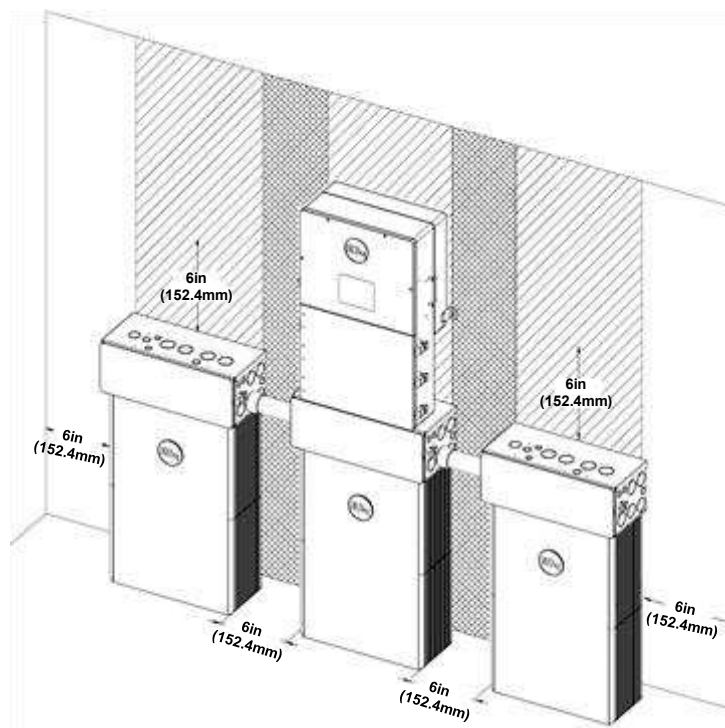

**Figure 5 – Clearance Diagram**

### **The battery can be installed in multiple different configurations:**

1. Installation without a conduit box (Sec 7.2)
2. Installation with a conduit box (Sec 7.3)
3. Installation with EG4 18kPV inverter (Sec 7.4)

Refer to Section 7.3 for multiple battery installations with multiple EG4-18kPV units.

## **6.1 POWERPRO CONDUIT BOX INSTALLATION**

The conduit box is a highly recommended accessory for the battery to retain all the cables inside an enclosure for added protection and safety. The conduit box holds both the conduits and wires that are running between the inverter and the battery.

Each conduit box comes with 8 thumb screws that can be used to attach the inverter and the battery.



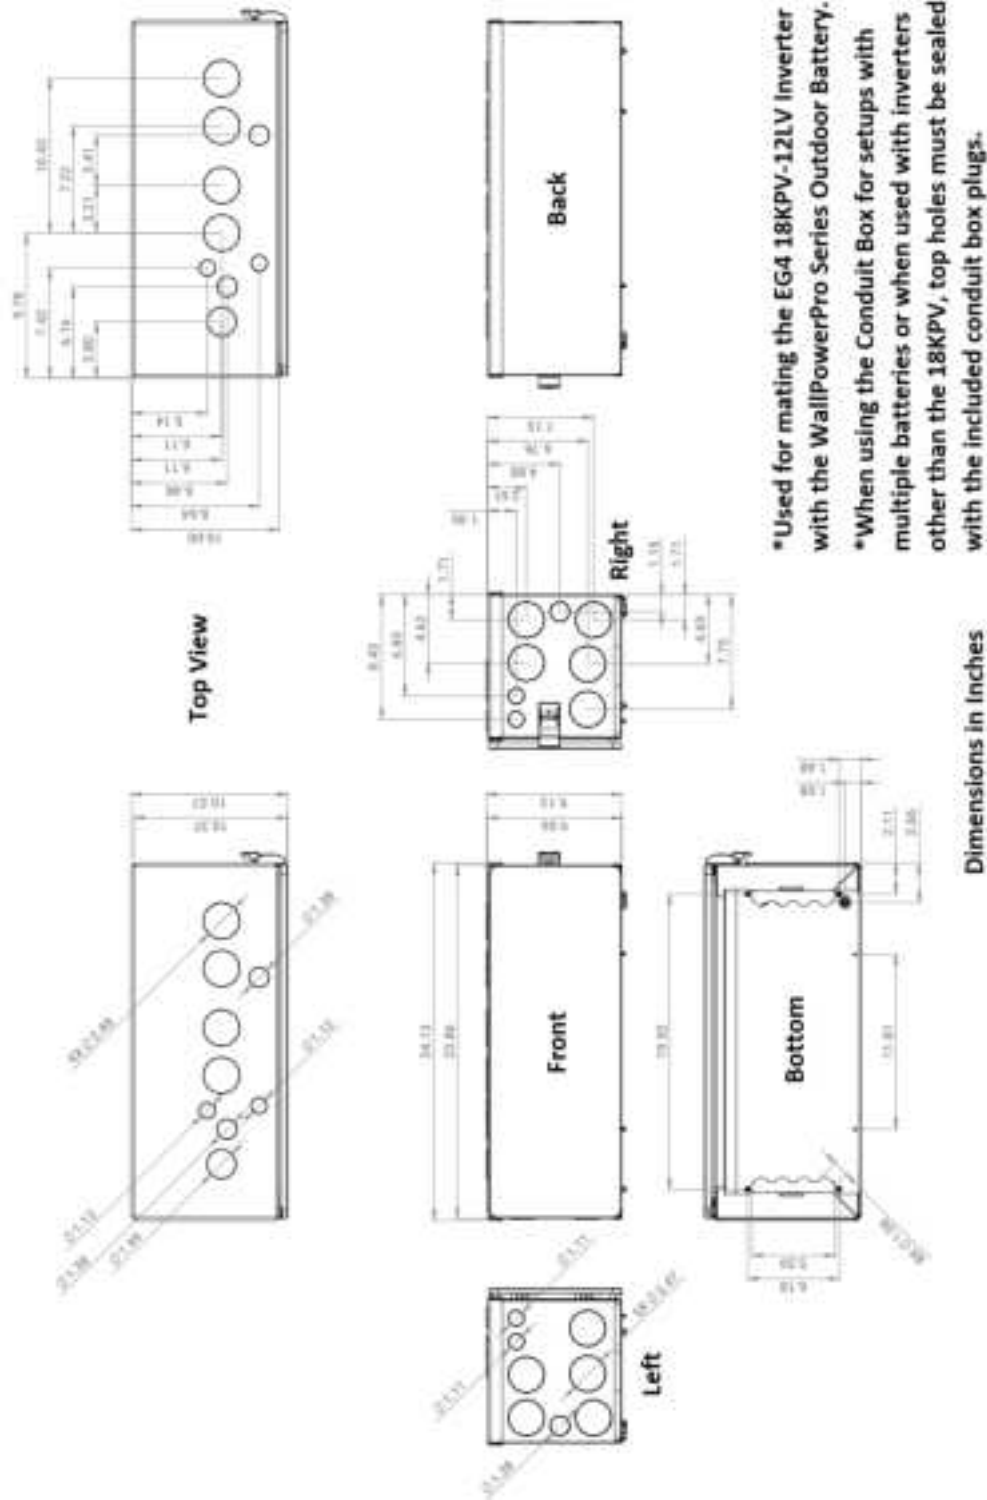


Figure 6 – Conduit Box Schematics

**Step 1:** Identify the four screw locations that attach to the battery (**Figure 7**). Place the conduit box on top of the battery and use the provided thumb screws to tighten the conduit box to the battery.

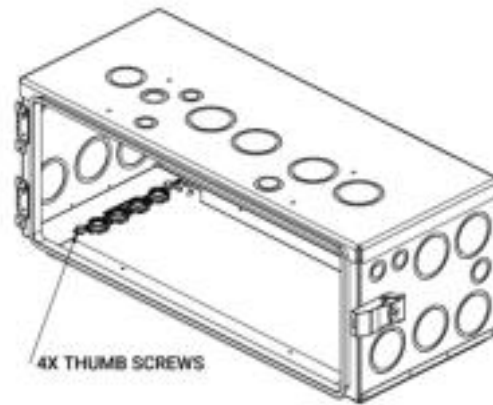


**Figure 7 – Conduit Box Thumb Screws**

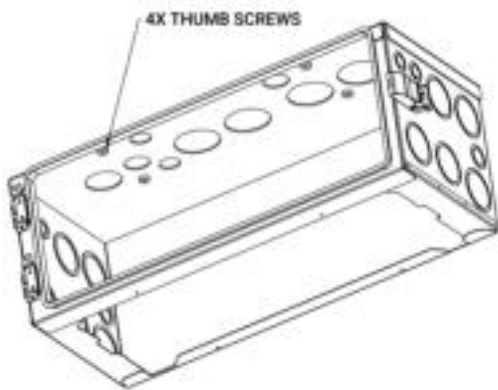

**Step 2:** If installing the WallMount along with the 18kPV inverter (Sec 7.4), please use the remaining 4 thumb screws on the top side of the conduit box to secure it to the inverter, as shown in **Figure 8**.

**Figure 8 – Conduit Box Thumb Screws**

If installing the WallMount as an additional battery or along with non-EG4 18kPV inverter (Section 7.3), please use the plugs to cover the top holes on the conduit box. Refer to **Figure 9**.

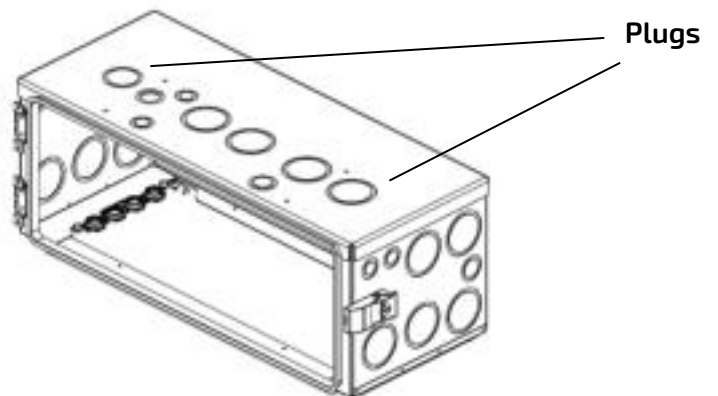

**Figure 9 – Conduit Box Plug Location**

## 6.2 INSTALLATION WITHOUT A CONDUIT BOX



**CAUTION: ALWAYS MOUNT THE BATTERY IN AN UPRIGHT POSITION!**

### Mounting Instructions

1. Place mounting bracket on wall at proper mounting height (min. 28.0625 in) from the ground; use a level to make sure the bracket is straight, and mark mounting hole locations. Drill holes to accommodate mounting hardware being used.



**Note:** The mounting bracket at 28.065 in. from the ground makes the battery sit on the ground.

2. Secure mounting bracket to the wall using the included expansion bolts (concrete/brick walls) or appropriate hardware required for the mounting surface.



**Note:** If **not** mounting into concrete or brick using the included expansion bolts, ensure bolts are mounted into both studs or other supportive material. The battery is 300lbs, please ensure full mounting support.

3. Attach the WallMount battery pack to the mounting bracket. To accomplish this, lift the battery up and hook the flange on the back of the battery into the flange on the front of the mounting bracket. Secure the battery to the mounting bracket with the 4 included side screws (see Figure 10)



**Note:** The battery is very heavy. Please use the team lift technique to prevent damage to personnel and/or equipment

4. Finally, properly ground the battery, attaching a grounding conductor to the M6 grounding screw on top of the battery to the Equipment Grounding System.

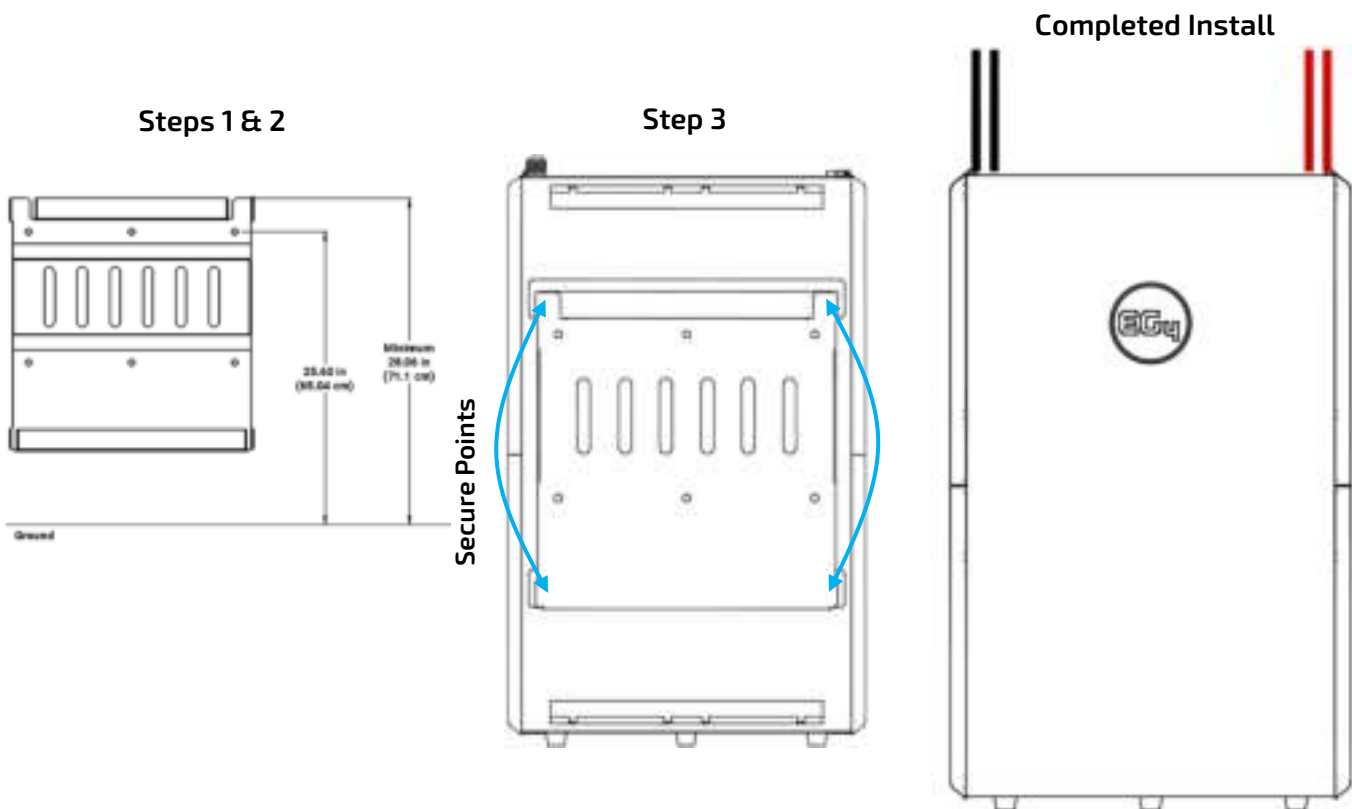


Figure 10 – WallMount Installation without Conduit Box

## 6.3 INSTALLATION WITH A CONDUIT BOX

Attach the conduit box (sold separately) to the top of the WallMount battery using the included hardware. Refer to Section 7.1 for the conduit box installation instructions.



**CAUTION: ALWAYS MOUNT THE BATTERY IN AN UPRIGHT POSITION!**

### Mounting Instructions

1. Place mounting bracket on wall at proper mounting height (minimum 28.0625 in) from the ground; use a level to make sure the bracket is straight, and mark mounting hole locations. Drill holes to accommodate mounting hardware being used.



**Note:** The mounting bracket at 28.065 in. from the ground makes the battery sit on the ground.

2. Secure mounting bracket to the wall using the included expansion bolts (concrete/brick walls) or appropriate hardware required for the mounting surface.



**Note:** If **not** mounting into concrete or brick using the included expansion bolts, ensure bolts are mounted into both studs or other supportive material. The battery is 300lb, please ensure full mounting support.

3. Attach the WallMount battery pack to the mounting bracket. To accomplish this, lift the battery up and hook the flange on the back of the battery into the flange on the front of the mounting bracket. Secure the battery to the mounting bracket with the 4 included side screws (see Figure 12)



**Note:** The battery is very heavy. Please use the team lift technique to prevent damage to personnel and/or equipment

4. Attach the conduit box (sold separately) to the top of the WallMount battery using the included hardware.
5. Finally, properly ground the battery, attaching a grounding conductor to the M6 grounding screw on top of the battery to the Equipment Grounding System.

### Steps 1 & 2

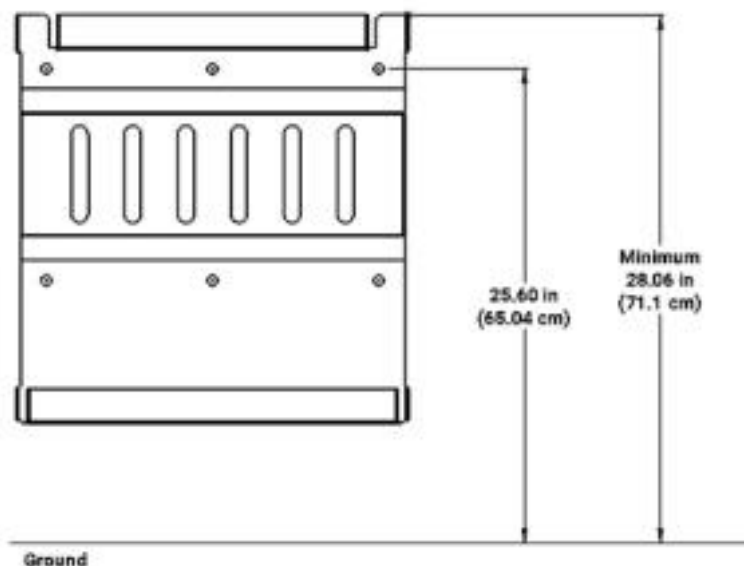


Figure 11 – WallMount Installation with Conduit Box Steps 1 & 2

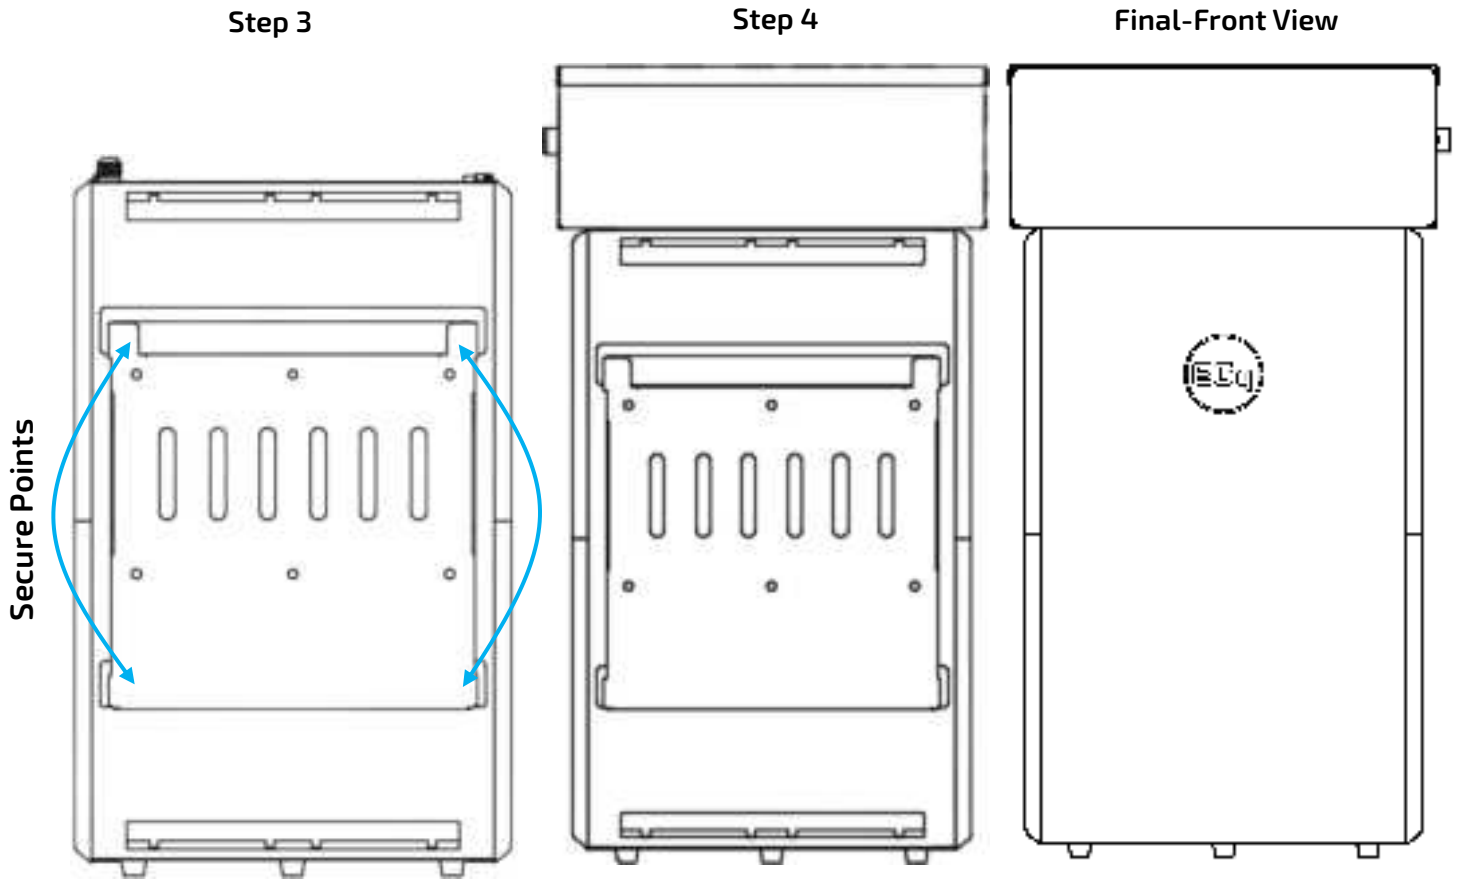


Figure 12 – WallMount Installation with Conduit Box Steps 3, 4 & 5



## CAUTION: ALWAYS MOUNT THE BATTERY IN AN UPRIGHT POSITION!

### Mounting Instructions with EG4 18kPV (See diagrams on following pages)

**Note:** If **not** mounting into concrete or brick using the included expansion bolts, ensure bolts are mounted into both studs or other supportive material. The battery is 300lb, please ensure full mounting support.

1. Place mounting bracket on wall at proper mounting height (Min. 28.0625 in.) from the ground; use a level to make sure the bracket is straight, and mark mounting hole locations. Drill holes to accommodate mounting hardware being used.



**Note:** The mounting bracket at 28.065in from the ground makes the battery sit on the ground.

2. Align the provided X-bracket with the holes on the mounting bracket and secure both to the wall, using the included expansion bolts (concrete/brick walls) or appropriate hardware required for the mounting surface. The X-bracket will be behind the mounting plate, against the wall.
3. Using the X-bracket as a guide, attach the EG4 18kPV mounting bracket using the appropriate hardware required for the mounting surface.
4. Attach the WallMount battery pack to the mounting bracket. To accomplish this, lift the battery up and hook the flange on the back of the battery into the flange on the front of the mounting bracket. Secure the battery to the mounting bracket with the 4 included side screws (see Figure 14).



**Note:** The battery is very heavy. Please use the team lift technique to prevent damage to personnel and/or equipment

5. Attach the conduit box (sold separately) to the top of the WallMount battery using the included hardware.
6. Attach the 18kPV to the inverter mounting bracket making sure that the holes of the inverter align with the conduit box and secure to each other with the included hardware.
7. Finally, properly ground the battery, attaching a grounding conductor to the M6 grounding screw on top of the battery to the Equipment Grounding System.


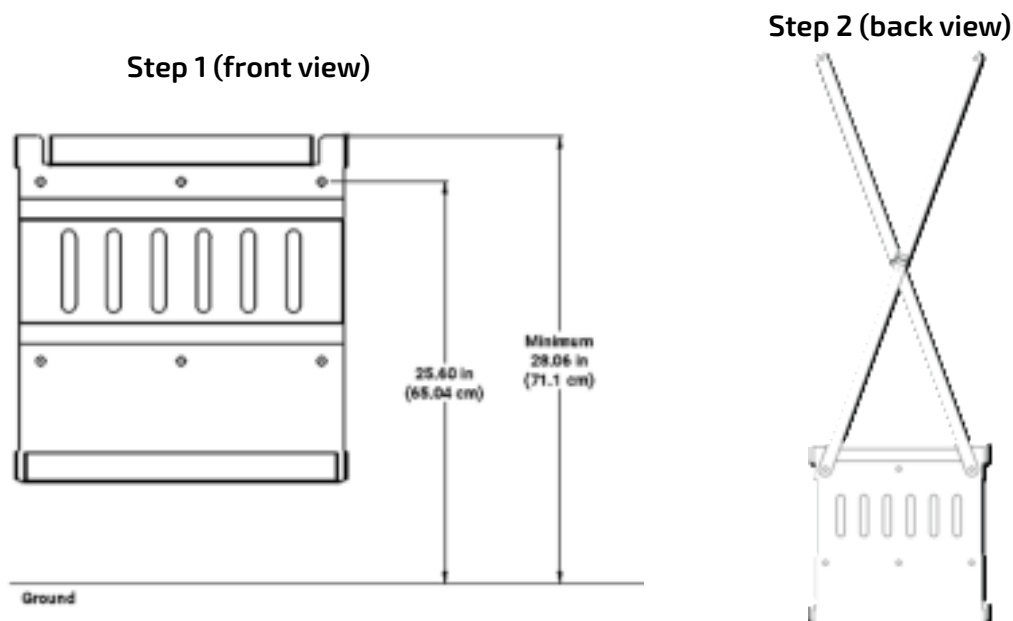


Figure 13 – WallMount Installation with Conduit Box & 18kPV Steps 1 & 2

## 6.4 WITH EG4 18KPV INVERTER

Step 3 (back view)

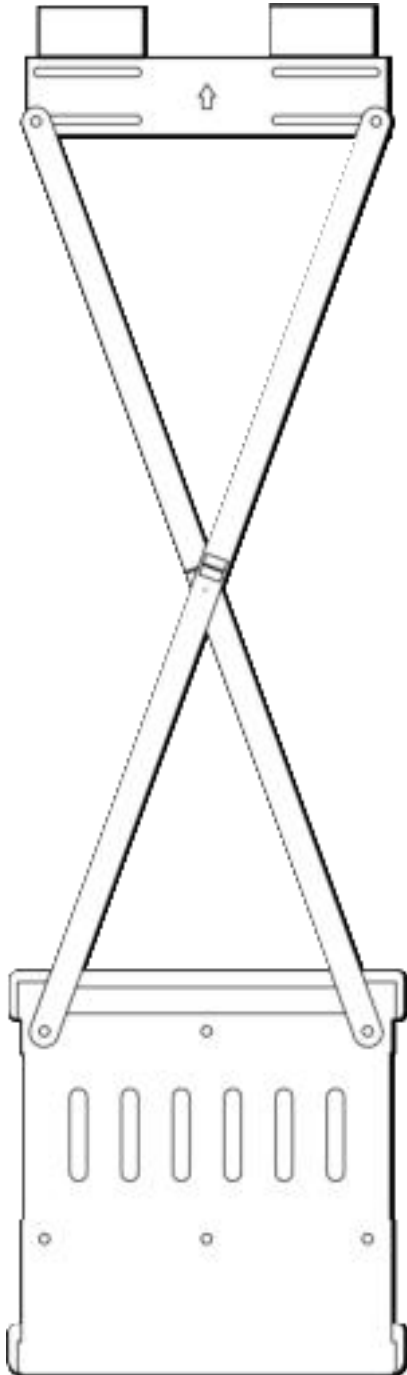

Step 4 (back view)


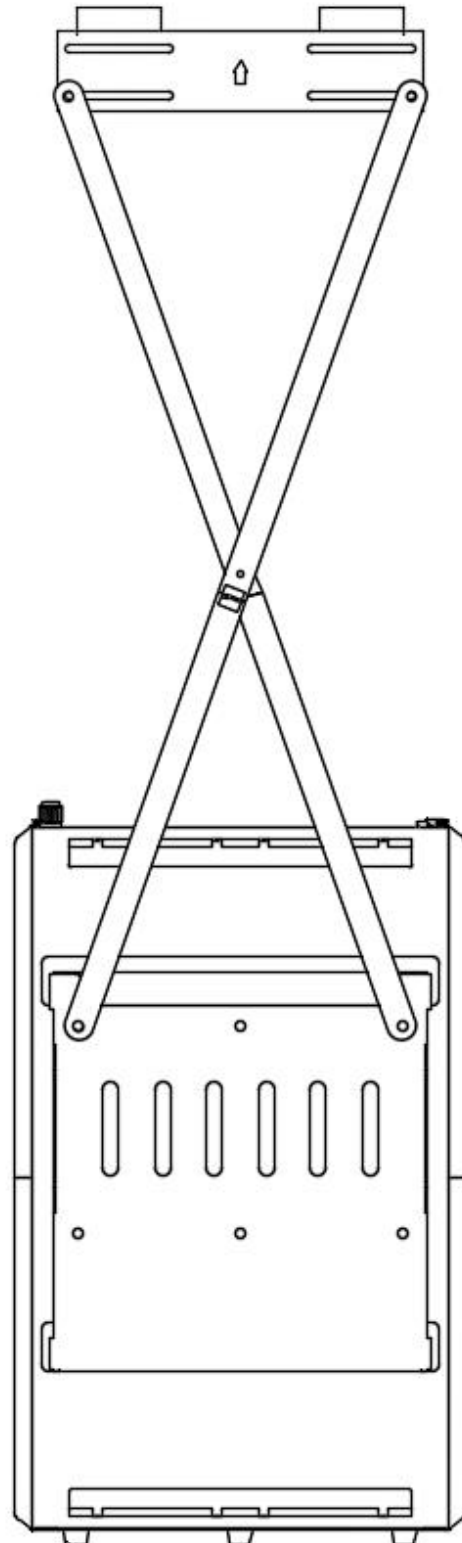


Figure 14 – WallMount Installation with Conduit Box & 18kPV Steps 3 & 4

Step 5 (back view)

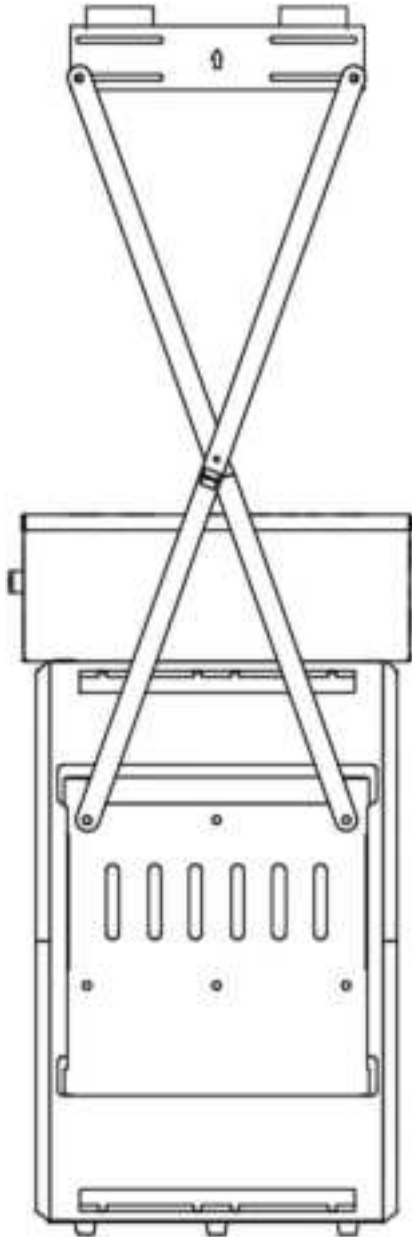

Step 6 (back view)

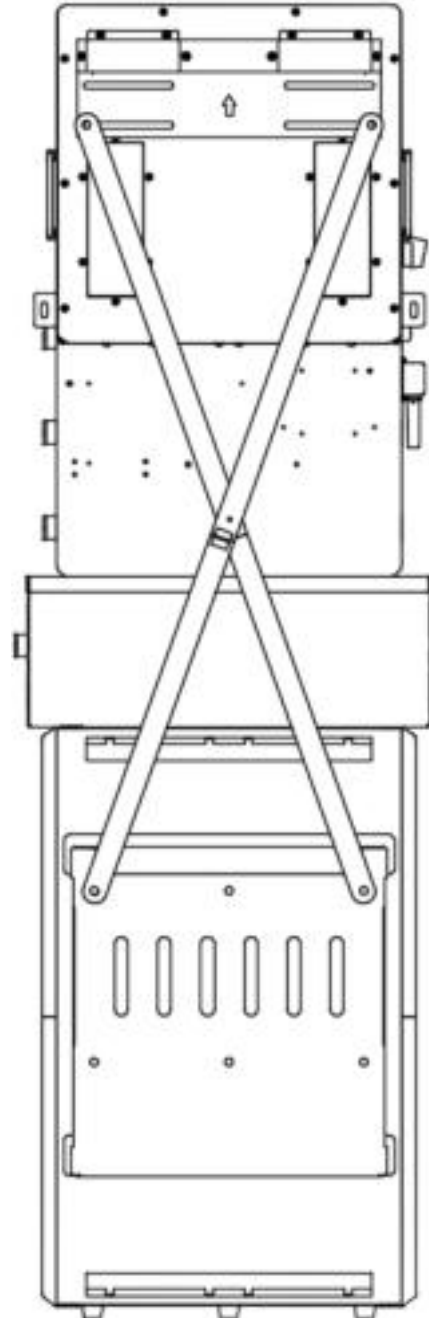


Figure 15 – WallMount Installation with Conduit Box & 18kPV Steps 5 & 6

## Final - Front View w/ Dimensions

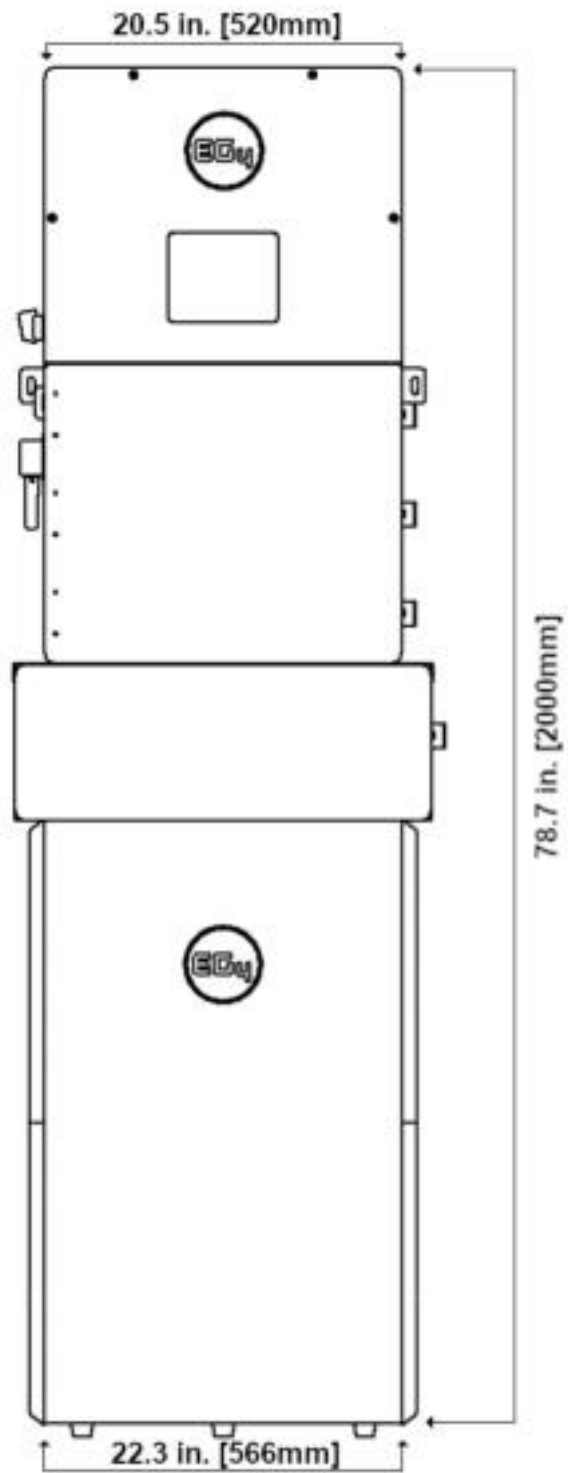


Figure 16 – WallMount Installation with Conduit Box & 18kPV Final

## 7. GENERAL INSTALLATION



### WARNING

Be sure the battery packs are powered **“OFF”** before making/removing any connections.

Use the two included sets of 2/0 AWG (70mm) outdoor rated positive and negative battery cables with the outdoor rated connectors. The connectors will “click” when seated properly.

**Note:** To remove the circular connector installed on the battery, first press the release button on the side of the connector, then slowly pull until the connection is broken.

When paralleling batteries, use one set of 2/0 AWG (70mm) positive and negative battery cables with outdoor rated connectors on both ends to connect battery to battery. These cables are available from the distributor as a paralleling kit.


When paralleling batteries, use a communication cable to attach the master battery to additional batteries for battery-to-battery communication. This cable is also available from the distributor in the paralleling kit.



**NOTE:** When installing multiple batteries or adding a battery to an existing rack, please ensure all batteries are charged to 100% before paralleling together. This step is crucial to optimize battery performance and ensure proper operation.

### 7.1 BATTERY PARALLELING GUIDE

1. Ensure all battery breakers and BMS are OFF.
2. Set the address code of each battery according to the DIP Switch ID Table (see [Section 10.1: DIP Switch ID Table](#)), making sure there are no duplicate addresses.
3. Set up communication between the batteries via the “Battery-Comm” ports of each battery. Use the paralleling kit communication cable to daisy chain all paralleled batteries in the bank together. See diagram below for example.

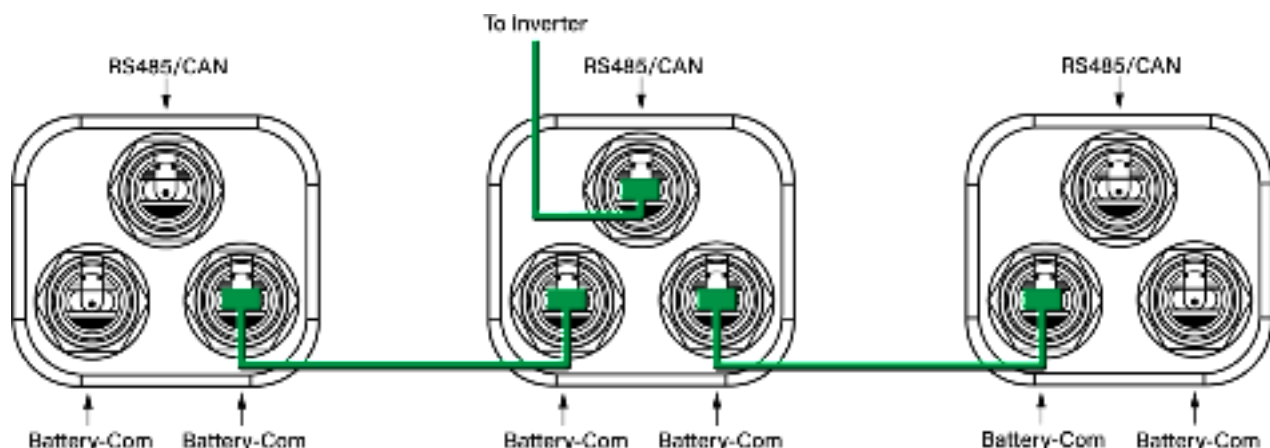

**Figure 17 – Battery Communication Ports**

4. The battery with DIP Switch ID 1 (referred to as the master) connects to the inverter via a properly pinned communication cable (depending on inverter) using the RS485/CAN port.

5. Install battery paralleling cables between batteries. Refer to [Section 8.2 Battery Cable Connections](#) for battery cable connection diagram examples.
6. Once all cable connections are completed and the system is ready to be commissioned, power on each battery breaker and BMS ON/OFF switch one at a time beginning with the master battery.

## 7.2 BATTERY CABLE CONNECTIONS


The following battery cable connection diagrams are examples using the internal busbars to parallel the batteries together and attach the inverter(s) to the batteries. When relying on the internal busbars, up to 3 batteries are supported in parallel when connected to a single inverter, 4 batteries in parallel when connected to 2 inverters, or up to 5 batteries in parallel when connected to 3 inverters.

Systems with more batteries than these configurations **require** the use of an external fused positive busbar and an unfused negative busbar rated at a minimum of 200A per battery. Each fuse should be a maximum of 250A. Alternatively, larger systems could rely on the 18kPV's ability to draw from different battery packs while still paralleling inverters rather than utilizing external busbars.

The maximum recommended number of paralleled 18kPV inverters is 6. If this approach is used, we recommend a ratio of 3 batteries per pack controlled by each 18kPV inverter. Separating packs is only recommended if each pack's average SOC is monitored over time and does not diverge by more than 10%. Common busbars are superior to separating battery packs but it may be difficult to source fused positive busbars rated to greater than 1800 Amps. This translates into separating packs larger than 9 batteries. Refer to NEC code and the local AHJ for exact requirements



**NOTE:** In the following diagrams, units are spaced 6 in. (152.4 mm) apart. Local regulations may require a larger minimum battery spacing. Check with the local AHJ for these requirements. If longer parallel cables than are available in the optional paralleling kit are necessary, please check with the distributor for availability.

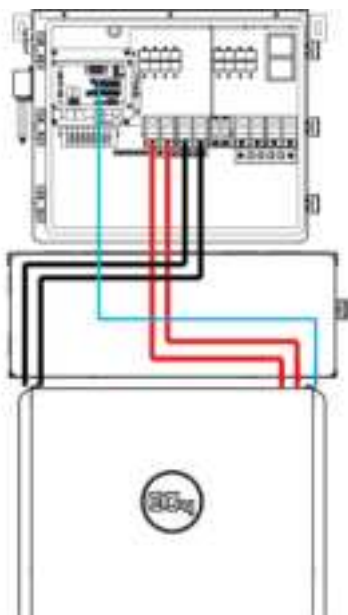

**Note:** To comply with the UL9540 listing for this integrated battery, conduit box, and inverter system, the batteries must be wired as shown using the supplied inverter to battery cables. An additional paralleling kit is required for each additional paralleled battery (sold separately).



**Caution:** To minimize voltage drop in the wire, the battery cables should maintain optimum length. The 53.1 in. cables from the "parallel kit" are sufficient to daisy chain the batteries.

Figure 182 – (1) 18kPV Inverter with (1) WallMount

## 7.3 ADDITIONAL CONFIGURATIONS

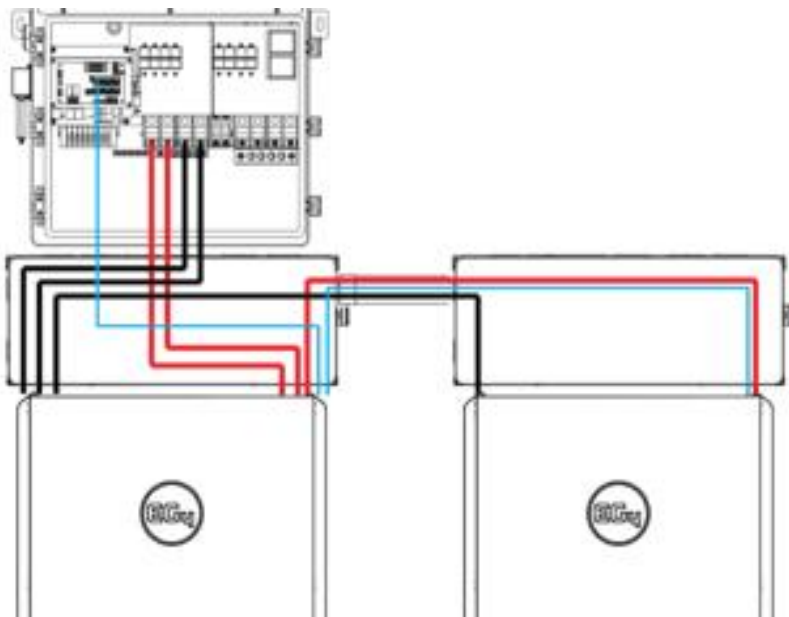


Figure 19 – (1) 18kPV Inverter with (2) WallMount




**Note:** Some configurations require additional wiring/connectors to achieve the example layouts. Inverter to inverter paralleling cables are not shown in the following diagrams. Other configurations can be achieved by using external busbars. Please seek the guidance of an electrician or qualified person for optional system layout.

**Pro Tip:** One EG4-18kPV and a minimum of 2 WallMount units is the recommended configuration to maximize the system’s functionality.

### Color Code

|                                      |                 |
|--------------------------------------|-----------------|
| <span style="color: blue;">■</span>  | — Parallel/Comm |
| <span style="color: red;">■</span>   | — Positive      |
| <span style="color: black;">■</span> | — Negative      |

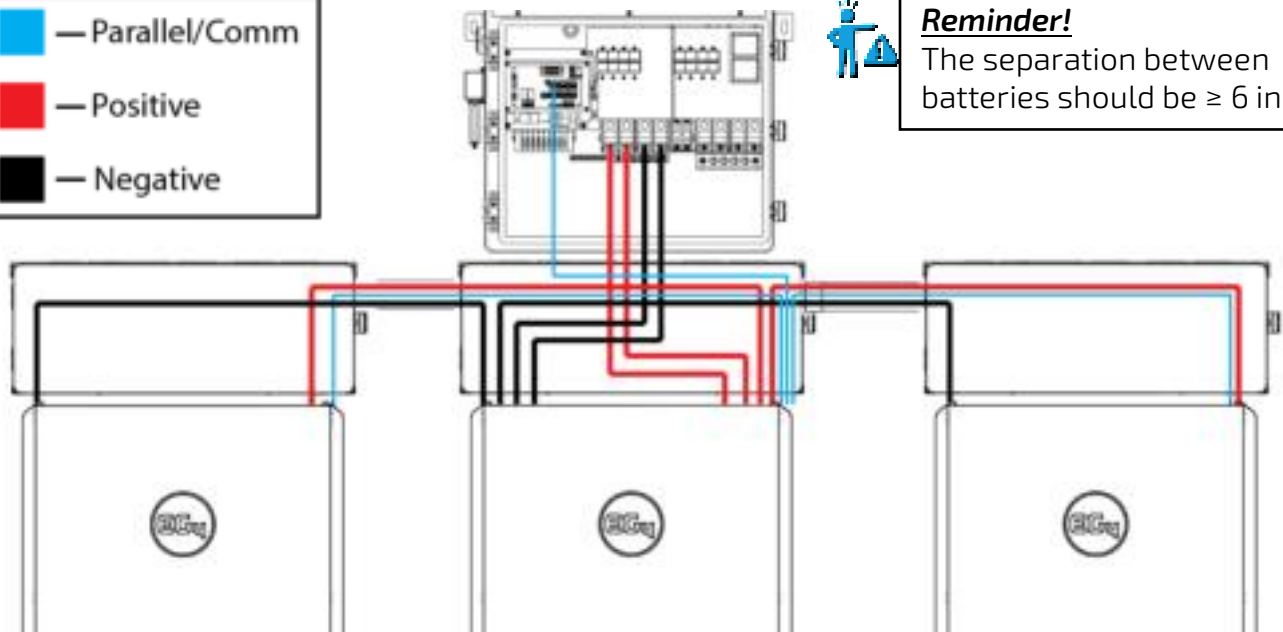

**Reminder!**  
The separation between batteries should be  $\geq 6$  in.

Figure 20 – (1) 18kPV Inverter with (3) WallMount

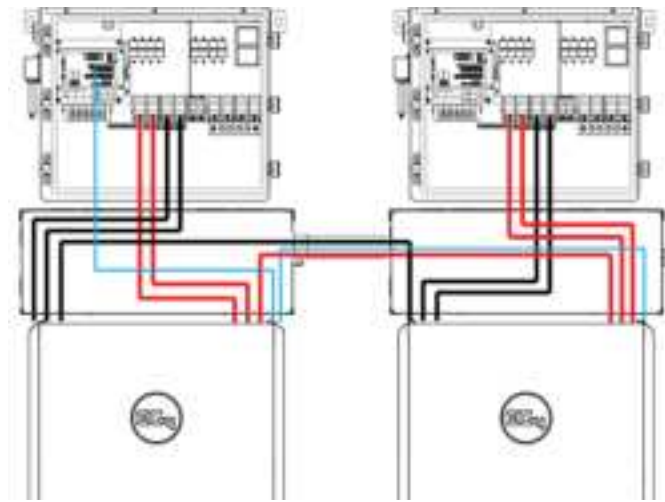


Figure 21 – (2) 18kPV Inverter with (2) WallMount

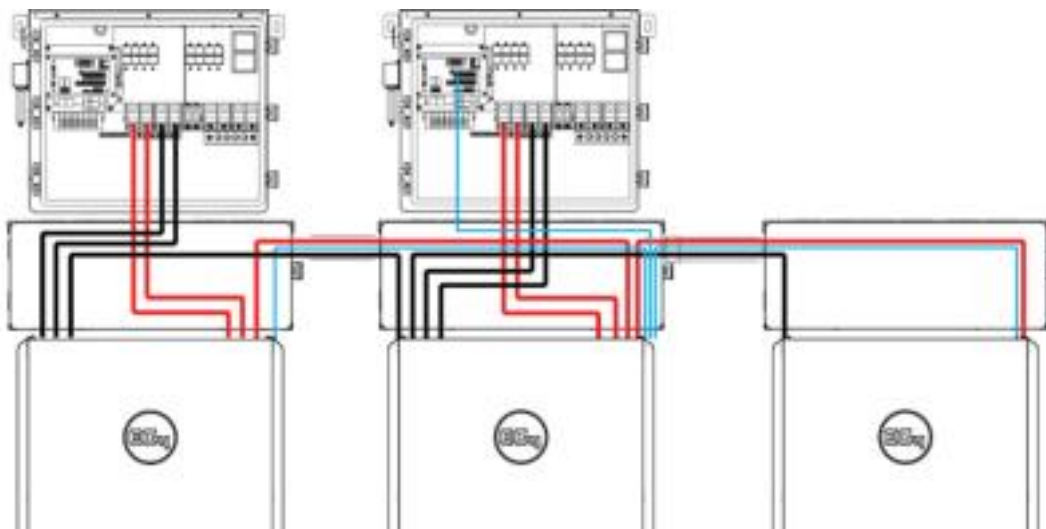


Figure 22 – (2) 18kPV Inverter with (3) WallMount

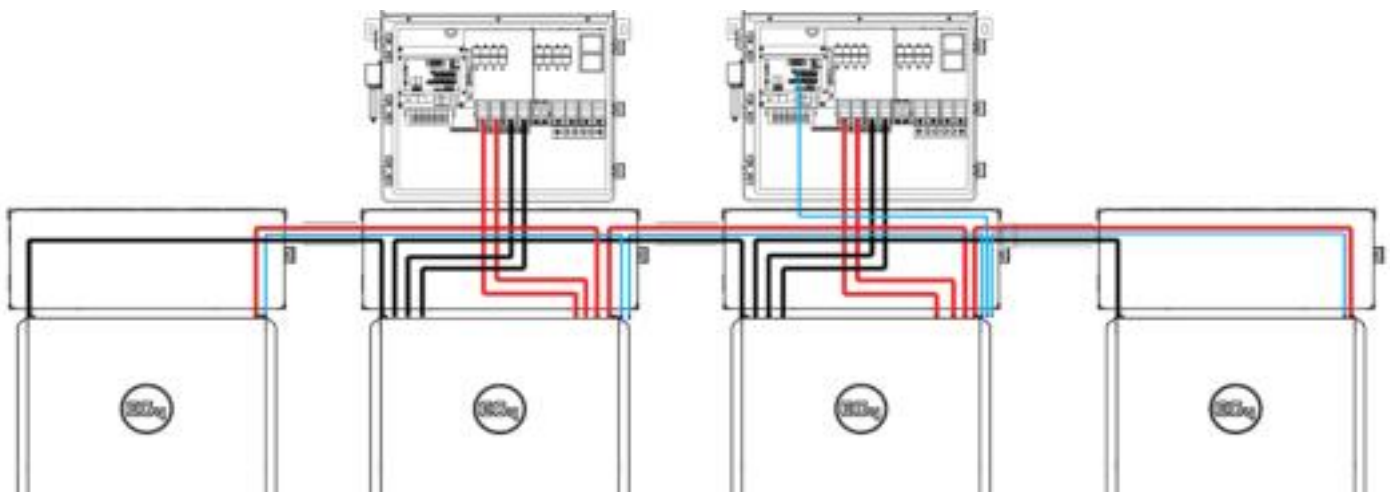


Figure 23 – (2) 18kPV Inverter with (4) WallMount

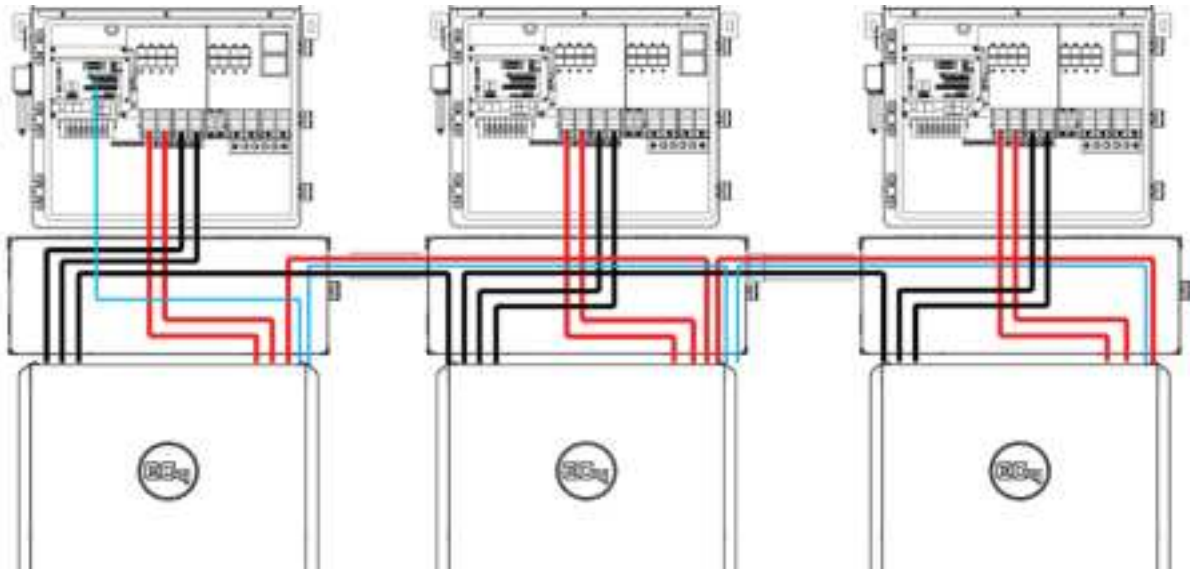


Figure 24 – (3) 18kPV Inverter with (3) WallMount



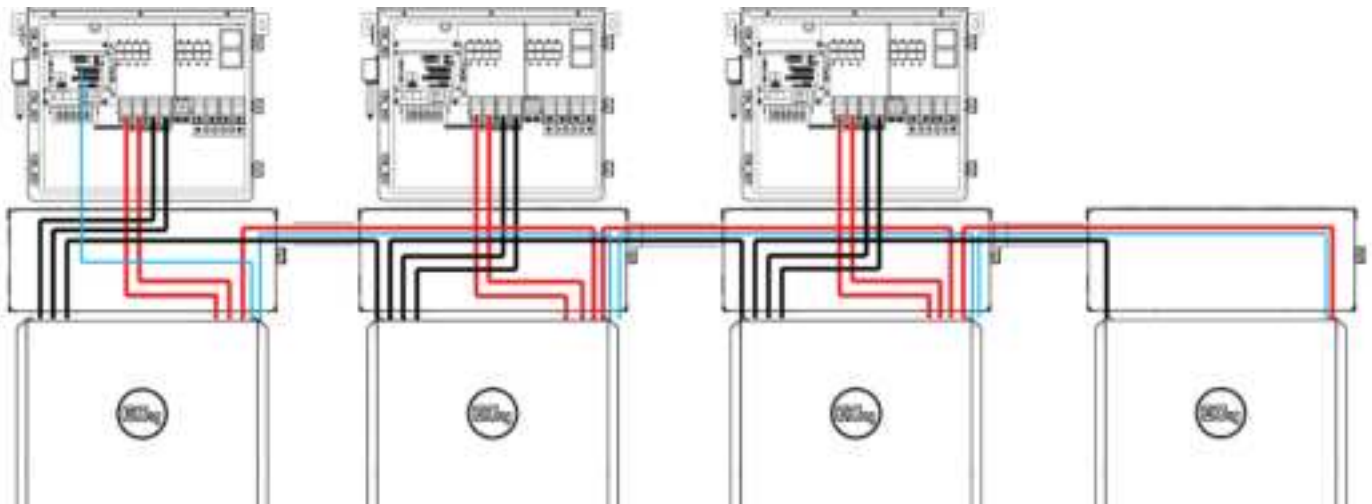


Figure 25 – (3) 18kPV Inverter with (4) WallMount

## 8. EMERGENCY STOP (RSD, ESS DISCONNECT)

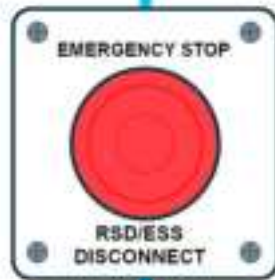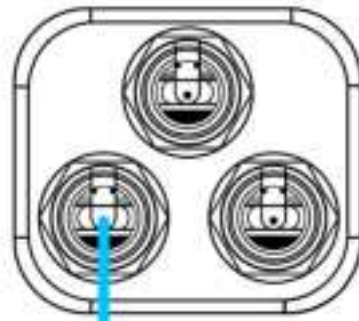

To inverter, RSD Initiator, or ESS Disconnect  
(Inverter recommended if compatible with inverter's RSD system)  
Normally Open (NO) or Normally Closed (NC) contacts depending on inverter

The optional ESS disconnect can be used to shut down all batteries and inverters (if equipped) with the push of a button.

When paralleling multiple batteries, the ESS disconnect only needs to have connections made with the master battery.

This integrated safety feature ties directly into the battery communication system via an open Battery-Com port using a standard Cat-5/6 ethernet cable.

Pins 3 & 6 are used to communicate the emergency stop information to the batteries once the stop button is pressed.

If the inverter is equipped with rapid shut down (RSD) capabilities, the emergency stop feature can be used to initiate this function. Check with the local AHJ and NEC code for compliance.

**Figure 26 – Emergency Stop**

## 9. BATTERY COMMUNICATIONS

Each EG4 battery is designed with the end-user in mind, displaying as much information as possible in the simplest manner. EG4 Electronics includes the option of connecting the battery to PC software to monitor the module status. This allows the user to see and understand exactly what the battery is doing as well as troubleshoot if problems arise.

**Note:** The master battery will communicate directly with the system via the RS485/CAN port.

### 9.1 DIP SWITCH ID TABLE

EG4 batteries interface with an inverter by designating a “Master” battery (DIP switch ID No. 1). The available ID codes range from 1–64. The battery will connect directly to the inverter via a RS485 battery communications cable or a standard CAT 5, 5e, or 6 cable for closed loop communications with supported non-EG4 inverters using CAN bus protocol.



#### REMINDER

If paralleling multiple batteries, all DIP switch settings **must** be different from each other. This allows all equipment to see each battery in the bank separately. For best practice, place IDs in sequence starting with ID 1 as the master battery.

|   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|
| ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 |
| ID:1  | ID:2  | ID:3  | ID:4  | ID:5  | ID:6  | ID:7  | ID:8  |
| ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 |
| ID:9  | ID:10   | ID:11   | ID:12   | ID:13   | ID:14   | ID:15   | ID:16   |
| ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 |
| ID:17   | ID:18   | ID:19   | ID:20   | ID:21   | ID:22   | ID:23   | ID:24   |
| ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 |
| ID:25   | ID:26   | ID:27   | ID:28   | ID:29   | ID:30   | ID:31   | ID:32   |
| ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 |
| ID:33   | ID:34   | ID:35   | ID:36   | ID:37   | ID:38   | ID:39   | ID:40   |
| ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 |
| ID:41   | ID:42   | ID:43   | ID:44   | ID:45   | ID:46   | ID:47   | ID:48   |
| ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 |
| ID:49   | ID:50   | ID:51   | ID:52   | ID:53   | ID:54   | ID:55   | ID:56   |
| ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 | ON<br>1<br>OFF<br>2<br>OFF<br>3<br>OFF<br>4<br>OFF<br>5<br>OFF<br>6 |
| ID:57   | ID:58   | ID:59   | ID:60   | ID:61   | ID:62   | ID:63   | ID:64   |


Figure 27 – Dipswitch ID Table

## 9.2 LCD SCREEN

Each module has a built-in HD LCD touch screen used to display important information about the cells including voltage, current, temperature, SOC, among others.

### Button Description

There are 4 function buttons below the display with detailed descriptions, as shown in the table below.

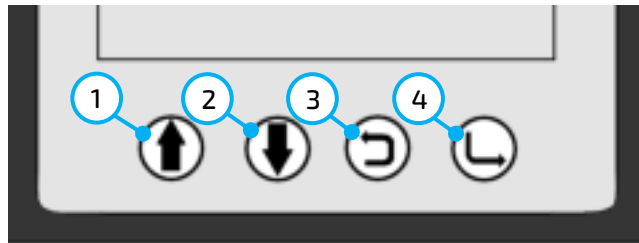

| Number | Description |
|--------|-------------|
| 1      | Up          |
| 2      | Down        |
| 3      | Return      |
| 4      | Enter       |

Figure 28 – LCD Button Description

### Waking up the LCD screen

Press any key to wake up the screen when the power is on, and the information will be shown on the display.

| Number | Description        |
|--------|--------------------|
| 1      | Battery Name       |
| 2      | Status             |
| 3      | Voltage            |
| 4      | Current            |
| 5      | System Date & Time |
| 6      | State of Charge    |

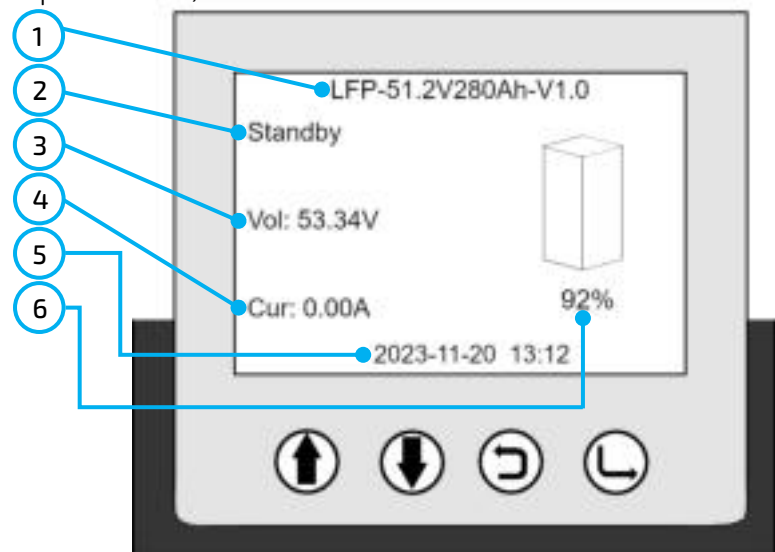


Figure 29 – LCD Screen Features

Press “Enter” on the Cell Voltage page to view the temperature information of the PCB and individual cells (shown in °C)

| Temperature    |      |      |      |  |
|----------------|------|------|------|--|
| PCB Temp: 32°C |      |      |      |  |
| Cell Temp:     |      |      |      |  |
| 31°C           | 31°C | 31°C | 30°C |  |

Figure 30 – Battery Temperature Information

## 9.3 COMMUNICATION PROTOCOL SELECTION




**IMPORTANT:** Only the master battery (Address 1) should be set to the inverter protocol; all other batteries must have unique addresses starting at address 2 and ascending in chronological order.

Check individual cell voltage by pressing the “Enter” button on the main page of the LCD screen (shown in mV). There are 2 pages. Pressing “Up” and “Down” changes the page.

| Page 1           |        |        | Page 2           |         |         |
|------------------|--------|--------|------------------|---------|---------|
| Cell Voltage(mV) |        |        | Cell Voltage(mV) |         |         |
| 1:3332           | 2:3300 | 3:3333 | 10:3332          | 11:3300 | 12:3333 |
| 4:3334           | 5:3333 | 6:3334 | 13:3334          | 14:3333 | 15:3334 |
| 7:3333           | 8:3334 | 9:3333 | 16:3334          |         |         |


Figure 31 – Battery Cell Information

### Protocol Change/Selection Procedure

1. Power off all battery DC breakers and BMS power buttons.
2. The inverter protocol can only be changed with the master battery temporarily set to address 64 (all switches ON. After the dipswitch is changed, restart the battery (with only the BMS power button) for the settings to take effect. (See image on right.)
3. On the master battery, press and hold the “Return”  key for 5 seconds and release to enter the “Protocol Setting” menu.




4. Select the corresponding RS485 program or CAN program, and press Enter.

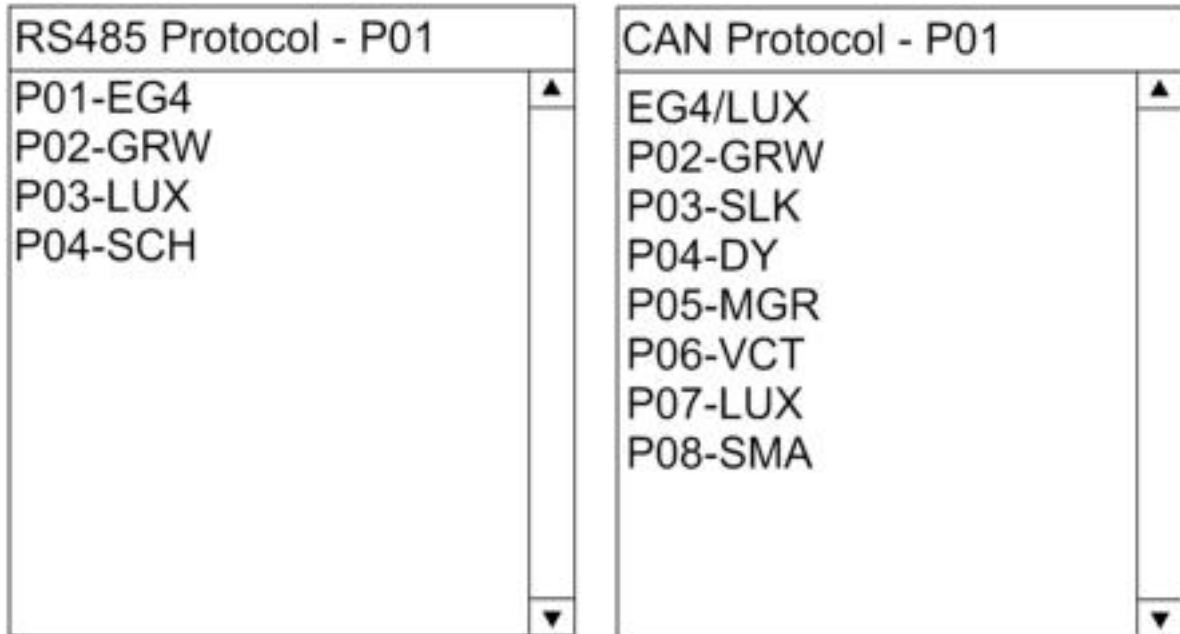

| Protocol # | Manufacturer |
|------------|--------------|
| P01-EG4    | EG4          |
| P02-GRW    | Growatt      |
| P03-LUX    | Luxpower     |
| P04-SCH    | Schneider    |

| Protocol #  | Manufacturer |
|-------------|--------------|
| P01-EG4/LUX | EG4/LUX      |
| P02-GRW     | Growatt      |
| P03-SLK     | Sol-Ark      |
| P04-DY      | Deye         |
| P05-MGR     | Megarevo     |
| P06-VCT     | Victron      |
| P07-LUX     | Luxpower     |
| P08-SMA     | SMA          |

**Figure 32 – Battery Protocol Selection**


5. Press the “Return”  key to return to the main interface.
6. Change the master DIP switch address back to address 1. (See image on right.)
7. Power cycle the master battery, and the BMS will correspond to the protocol selected.



## “About” Screen

When single-tapping the battery’s return key, the “About” page will populate. Here the user can check which Inverter protocol the battery is set to, BMS version numbers, and Firmware version numbers.

See image to the right for an example.

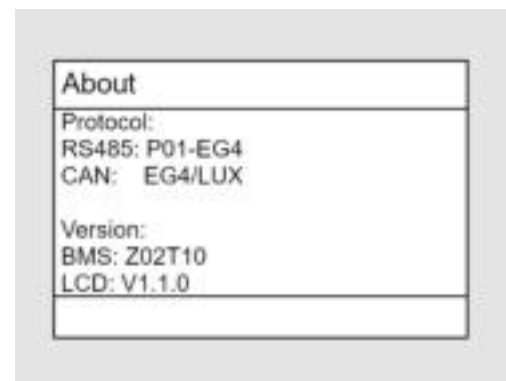

**Figure 33 – “About” Display**

## 10. OPERATION GUIDE

### 10.1 BMS TOOLS INSTALLATION AND INTERFACING

The PC software “BMS Tools” provides real-time battery analysis and diagnostics. The battery cannot communicate with BMS Tools and a closed loop inverter at the same time. The steps outlined below will walk through the initial set up of BMS Tools.

1. Using an RS-485 (RJ45 Pins 1-B, 2-A) to USB-A cable, connect to the RS-485 port of the battery and then to a USB-A port on a Windows computer.



#### NOTE:

**To create the read/write cable, make sure to use a USB-A to RS485 converter adapter and CAT5e (or higher) cable. Connect pins 1 and 2 from the RJ45 connector, matching B to pin 1 and A to pin 2 on the converter adapter. Alternatively, the read/write cable is also available for purchase from the distributor.**

2. Set the battery’s dipswitch to ID: 64. (all dips ON)
3. Power on the battery pack.
4. Confirm the RS485 cable’s COM is set correctly in the BMS Tools program. Refer to the Device Manager on the PC for more information.


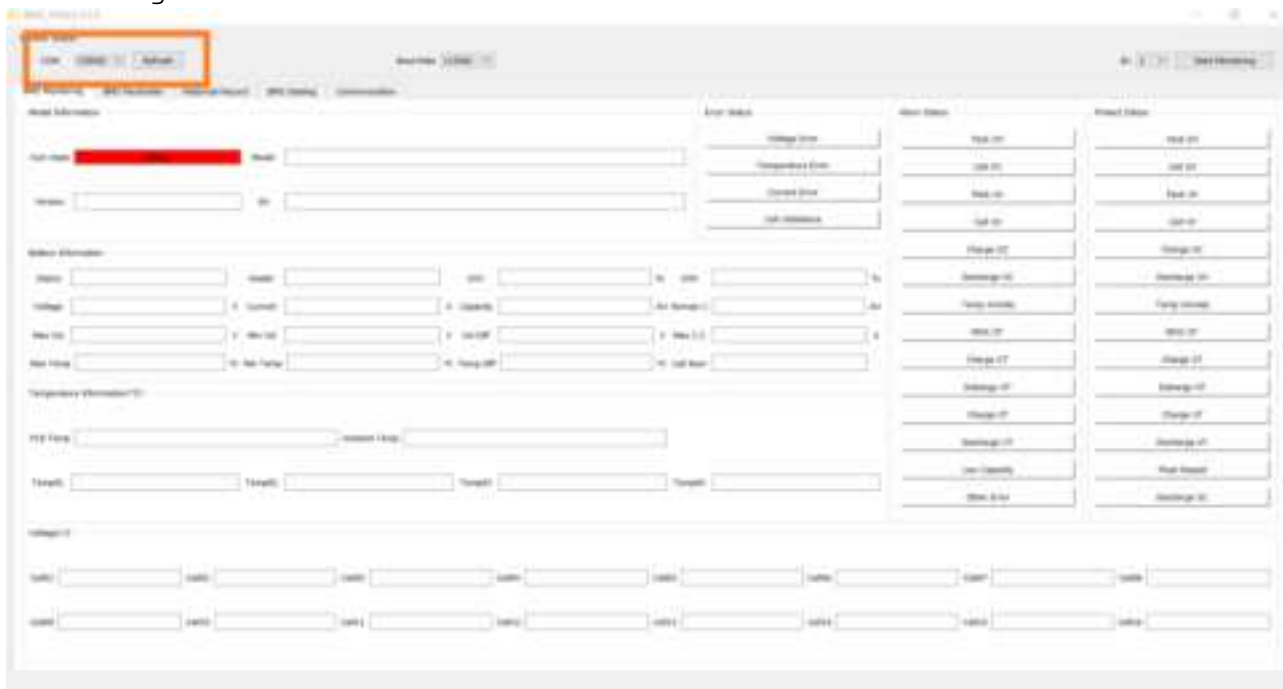


Figure 34 – BMS Tools Comm Selection



7. Select, “Start Monitoring”.

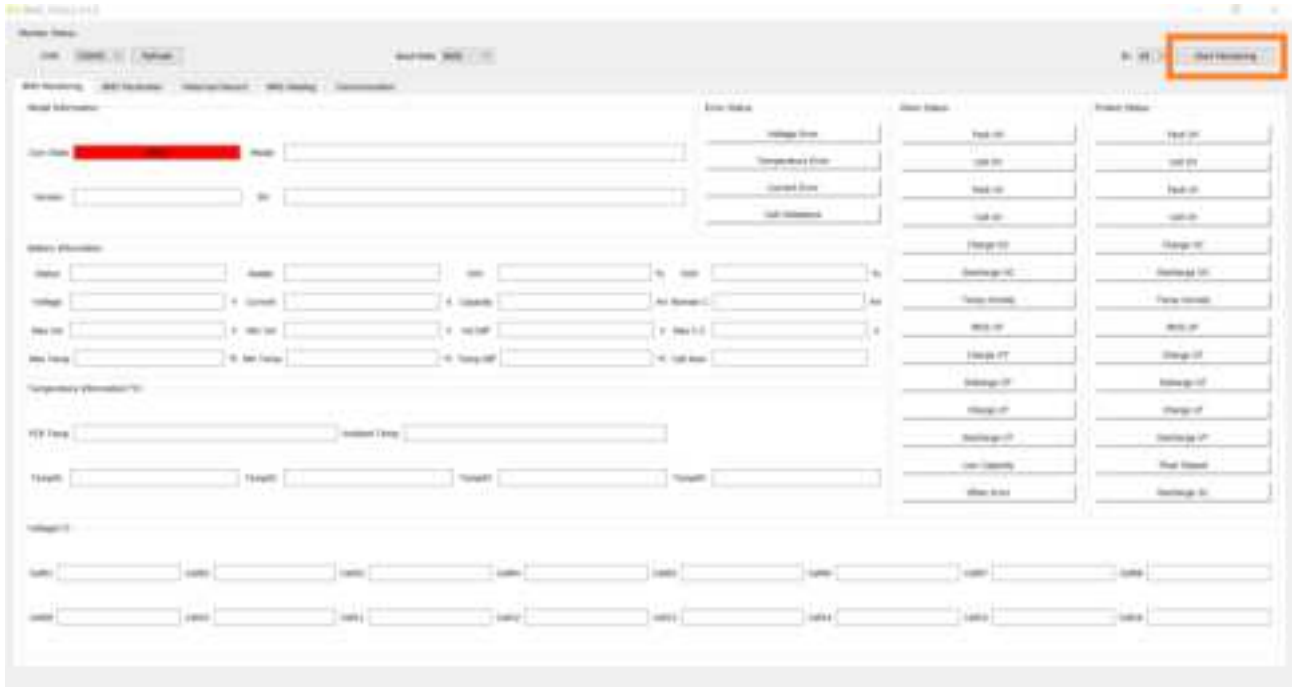

**Figure 37 – BMS Tools Monitoring Initiation**

8. The “Com State” will now change from “Offline” to “Connected.” The system will now monitor the battery’s values in real time.



**Figure 38 – BMS Tools Real-Time Monitoring**

## 11. BATTERY CHARGING

### Charge cycle

Ensure the proper settings are set on the charge controller and/or inverter being used to avoid overcharging or damaging the module. (Refer to [Section 1: Technical Specifications Table](#) for a full list of charging/discharging parameters.)



### IMPORTANT

It is normal for LFP batteries that have their own internal BMS and that are wired in parallel to demonstrate a wide variety of SOC readings during any given charge or discharge cycle.

**Variations of up to 10% are common.** This is not cause for concern or indication that the module is providing less than the maximum capacity. This is caused by even slight variations in wiring resistance to each battery, internal resistance, temperature differences, and even variations in each cell. Even a slight variation causes one battery to take more of the load or charge for a short time. Over the duration of the discharge or charge cycle, this will balance out with the lagging battery then taking the load or charge at the other end of the cycle resulting in recovering the full listed kWh capacity of the pack. The voltage differences created as batteries diverge in SOC will eventually cause them to converge at some point in the cycle.



**NOTE:** When installing multiple batteries or adding a battery to an existing rack, please ensure all batteries are charged to 100% before paralleling together. This step is crucial to optimize battery performance and ensure proper operation.

## 11.1 BATTERY PERFORMANCE CURVES

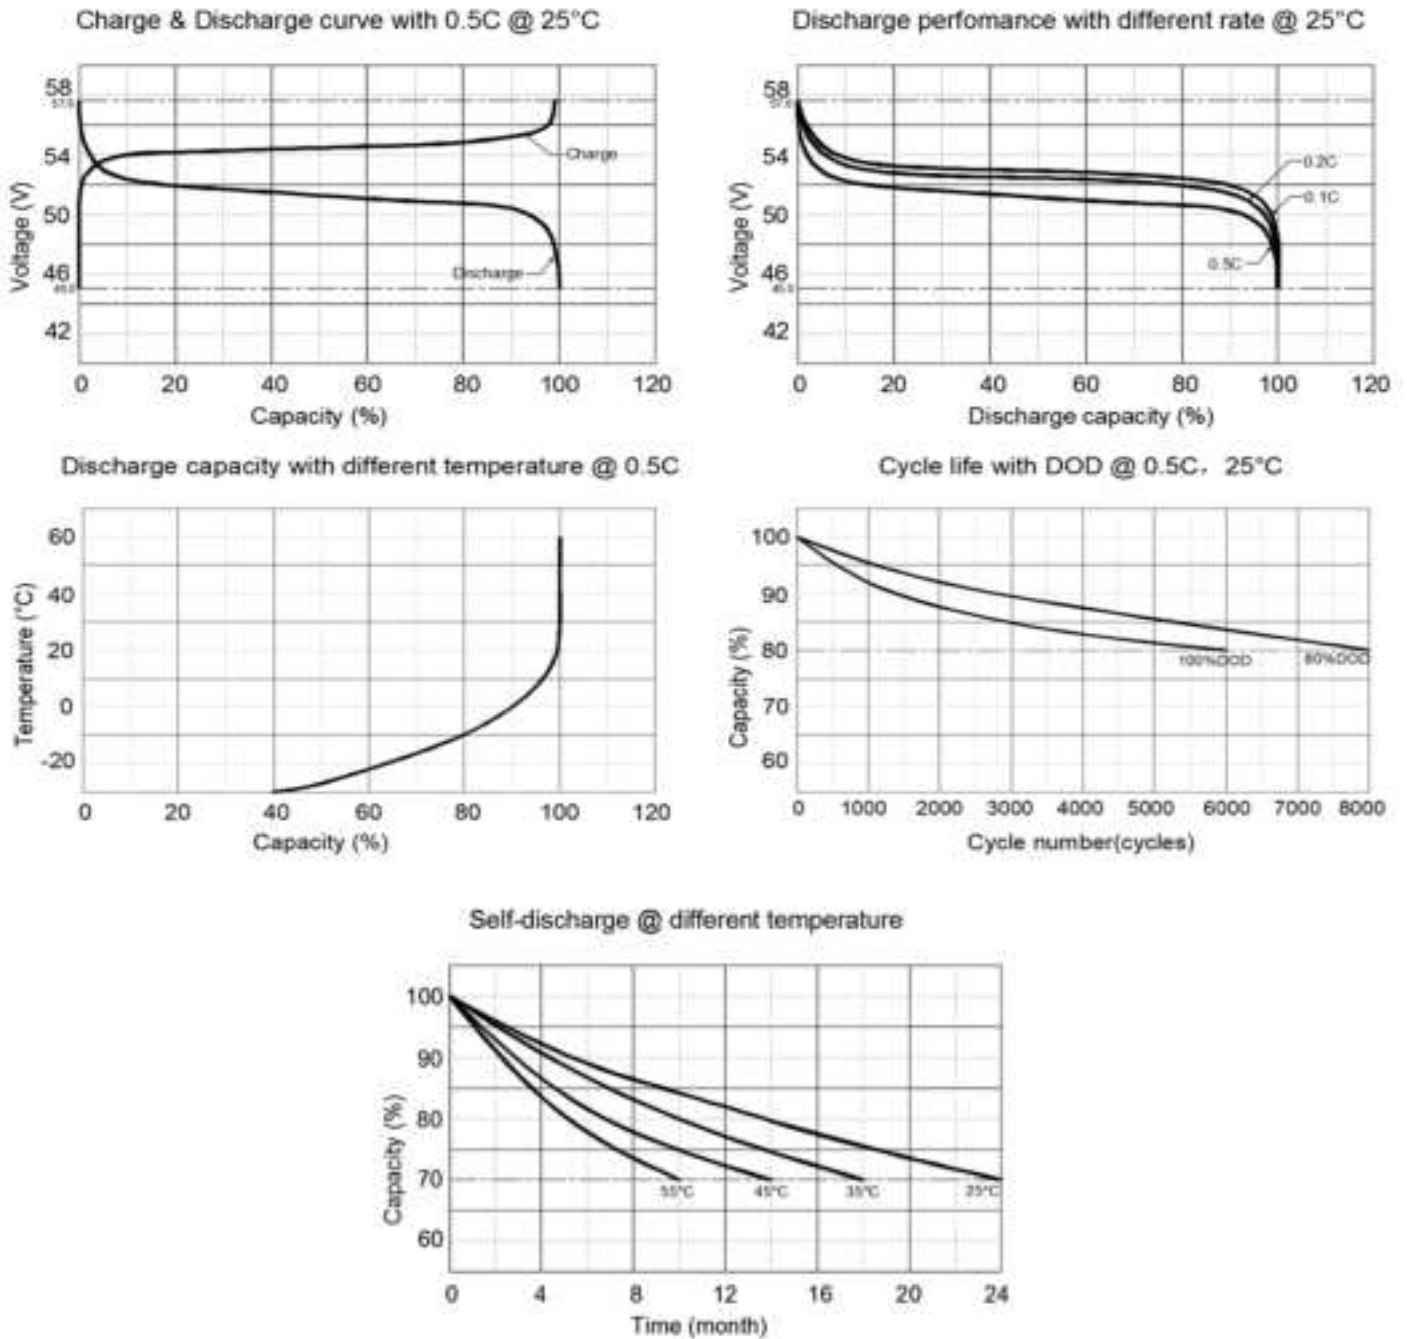


Figure 39 – Lithium Battery Performance Curves

## Recommended Charge Current Settings for Paralleled Batteries on Paralleled 18kPVs

| # of 18kPV | Rec. Max. Charge Current<br>(230A per inverter) | (1) Battery<br>Inverter Setting –<br>Amps per Battery | (2) Batteries<br>Inverter Setting –<br>Amps per Battery | (3) Batteries<br>Inverter Setting –<br>Amps per Battery | (4) Batteries<br>Inverter Setting –<br>Amps per Battery |
|------------|---|---|---|---|---|
| 1          | 230A  | 160 – 160A  | 230 – 160A  | 230 – 77A   | 230 – 58A   |
| 2          | 460A  | 80 – 160A   | 160 – 160A  | 230 – 153A  | 230 – 115A  |
| 3          | 690A  | 53 – 159A   | 107 – 160A  | 160 – 160A  | 213 – 160A  |

Please note that if the battery firmware is updated to allow 200A maximum charge, the internal thermal sensors will throttle the charge current to what the BMS deems necessary to prevent overheating.

## 12. TROUBLESHOOTING, MAINTENANCE & DISPOSAL

### 12.1 INTRODUCTION TO THE BMS

The BMS (Battery Management System) is intended to safeguard the battery and battery cells against a variety of situations that could damage or destroy system components. This protection also aids in keeping the battery and battery cells operational for a greater number of life cycles. Each EG4 battery is specifically configured to ensure peak performance and operation with any system.

### 12.2 BMS PROTECTION

#### PCB temperature protection

The BMS will ensure that the Printed Circuit Board (PCB) does not overheat. This is the component that houses most of the “brains” of the battery. This feature will turn off the battery if it begins to overheat.

#### Cell balance protection

Cell balance ensures that each cell is within a specific voltage range of each other. Cell balance is crucial for ensuring that the battery is operating properly for its lifespan. This is always done automatically.

#### Environmental temperature protection

It may be dangerous to attempt using the battery in extreme heat or cold. Continued operation in these conditions may result in permanent damage to the battery module and its components. To prevent this, the BMS is designed to measure the temperature while charging/discharging and will shut down the battery to prevent damage.

#### Voltage protection

The BMS is designed to continuously monitor the voltage of each individual cell and ensure that they are not over/undercharged.

#### Current protection

The BMS is designed to constantly monitor the charge/discharge amperage and has built-in safeguards against exceeding specific parameters. These include built-in timers that shut off quickly in the event of short circuits, extremely high amperage and delayed shut down for amperage that is only slightly above the maximum capacity.

## 12.3 TROUBLESHOOTING

### Alarm Description and Troubleshooting

When the ALM light on the battery control panel is on, it means that the battery has given an alarm or has been protected from potential damage. Please check the cause of the failure through the app or BMS Tools and take appropriate measures or go directly to the battery site to troubleshoot. BMS Tools alarms are shown in the table below:

#### Warning and protect status definitions

| STATUS              | NAME          | DEFINITION                  | ACTION  |
|---------------------|---------------|-----------------------------|---|
| Warning/<br>Protect | Pack OV       | Pack over-voltage           | Module needs to be discharged to lower its voltage.                                       |
|                     | Cell OV       | Cell over-voltage           | Check individual cell voltage in BMS Tools.   |
|                     | Pack UV       | Pack under-voltage          | Module needs to be charged.   |
|                     | Cell UV       | Cell under-voltage          | Check individual cell voltage in BMS Tools.   |
|                     | Charge OC     | Charge over-current         | Incoming current needs to be reduced.   |
|                     | Discharge OC  | Discharge over-current      | Discharge current is too high; lower loads.   |
|                     | Temp Anomaly  | Temperature anomaly         | Check ambient and module temperature.   |
|                     | MOS OT        | MOSFET over-temperature     | BMS temperature is too high. Power off module and cool down location.                     |
|                     | Charge OT     | Charge over-temperature     | Power off module and cool down location.  |
|                     | Discharge OT  | Discharge over-temperature  | Power off module and cool down location.  |
|                     | Charge UT     | Charge under-temperature    | Power off module and warm up location.  |
|                     | Discharge UT  | Discharge under temperature | Power off module and warm up location.  |
| Warning             | Low Capacity  | Low battery capacity        | Module needs to be charged.   |
| Warning             | Other Error   | Error not listed            | Contact the distributor   |
| Protect             | Float Stopped | Float Stopped               | Contact the distributor   |
| Protect             | Discharge SC  | Discharge short circuit     | Discharge current is too high, turn BMS and breaker off and back on to reset. Lower loads |



**NOTE:** The “Historical Record” tab can indicate what occurred with the module before entering a warning or protection state. It is recommended to export this data into a text (.txt) file to provide to the distributor for any additional troubleshooting assistance.

## Other common faults and solutions



**NOTE:** If any of the warnings or faults from both tables persist, please contact the distributor for additional troubleshooting steps.

| Fault   | Analysis   | Action   |
|---|--|--|
| Inverter communication failure                          | Check communication port connection, and battery ID setting. | Input proper "host" battery DIP switch address, and power cycle the battery.           |
| No DC output  | Open breaker, or battery voltage is too low.                 | Check battery breaker or charge the battery.   |
| Power supply unstable                                   | Battery capacity is not at full power.                       | Check for proper battery cable connection.   |
| Battery cannot be charged fully                         | DC output voltage is below the minimum charge voltage.       | Check the charging settings on the inverter to ensure they match battery requirements. |
| ALM LED always on                                       | Short circuit  | Disconnect the power cable and check all cables.                                       |
| The battery output voltage is unstable.                 | Battery management system does not operate normally.         | Press the reset button to reset the battery, then reboot the system.                   |
| ALM LED flashes 20 times with SOC1 LED on.              | Unbalanced voltage within a cell                             | Deep discharge the battery bank (<20% SOC), then charge battery bank fully.            |
| ALM LED flashes 20 times with SOC2 LED on.              | Unbalanced temperature                                       | Contact the distributor.   |
| ALM LED flashes 20 times with SOC 3/4 LED on.           | BMS damaged  | Contact the distributor.   |
| Different SOC value of batteries in parallel operation. | No issue   | Deep discharge the battery bank (<20% SOC), then charge battery bank fully.            |
| Low voltage protection with no LED on                   | BMS is in low voltage protection, and is in sleep mode       | Contact the distributor.   |
| Deeply discharged with "RUN" LED on                     | The battery voltage is too low to start BMS.                 | Contact the distributor.   |

## 12.4 BATTERY END OF LIFE

The EG4 48V battery is designed to last for *more than 15 years* when used correctly. We have worked tirelessly to ensure that our batteries will maintain a charge after thousands of cycles. However, when it does come time to retire the battery, there are a few things to consider.

Lithium iron phosphate batteries are considered a hazardous material and should not be disposed of by simply placing them in the trash. There are several websites and organizations that will accept this battery to recycle at little to no cost to the user. At EG4, we understand that we are working with customers across the United States and the world. Our recommendation is to go online and search the term “Lithium Battery Disposal Near Me.” There will likely be an assortment of organizations that can safely dispose of LFP batteries.

**We recommend calling ahead of time to ensure that the location is still open and accepting material.**

If users are unable to locate a disposal location safely, EG4 is here to help. Before dumping the battery or disposing of it incorrectly, please contact our customer service team for assistance.

## 13. WARRANTY INFORMATION

For information regarding warranty registration on EG4® Electronics products, please navigate to <https://eq4electronics.com/warranty/> and select the corresponding product to begin the registration process.

## 14. STORAGE

Please follow these instructions for the safe storage of the unit to maintain the longevity of the battery, if choosing not to install the product immediately after purchasing or unpacking the box.

There are a few steps that can be taken to ensure that batteries are stored safely and in a state that will ensure they are not damaged during storage. The steps are detailed below.

### Battery State

The state of the battery when placed into storage will affect how long it can be stored, as well as the battery’s condition when it is brought out of storage. EG4® recommends that each battery is brought to a 50% SOC (state of charge) before placing it in storage. Lithium batteries will lose a certain percentage of their total charge while in storage, depending on how long they are stored and the conditions they are stored in. We recommend recharging the batteries after 8 – 9 months in prolonged storage.

### Environmental Factors

The environment the battery is stored in can greatly affect the health of the battery. **For best results**, the temperature should range between 33°F and 90°F (0.6°C and 32°C). Mount the battery in a location where it is not exposed to direct rain, standing water and **ensure the battery is mounted on non-combustible material**. Keep the battery **away from direct sunlight**. Store the batteries away from combustible materials.

## 15. CHANGELOG

### Version 1.5.2

- Added new spacing requirements from 12 in. to 6 in.
- Added note to section 10 about read/write cable
- Added operating altitude range to spec sheet

### Version 1.5.1

- Modified warranty information in section 13





## CONTACT US

[support@eg4electronics.com](mailto:support@eg4electronics.com)

(903) 609-1988

[www.eg4electronics.com](http://www.eg4electronics.com)