



Original	Rechange
Power	Power
i	ANGLE INFO I n f o / Angl e
Analog Menu	HOME MENU Menu / Home
Digital Menu	TOP MENU D.MENU D. Menu / Top
1	1
2	2
3	3
Input Sel ect	RDS AV INPUT AV / Input / RDS
4	4
5	5
6	6
TV/ DVB- T	MEDIA DISPLAY Di spl ay / Medi a
7	7
8	8
9	9
Gui de (EPG)	GUIDE EPG Gui de / EPG / - / - -
Ti ner	TIMER SLEEP Sl eep / Ti ner

Original	Rechange
0	HDMI - BAT 0
Mute	DIMMER MUTE Mute / Di mmer
Exi t	CLEAR EXIT Exi t / Cancel / Clear
Vol +	VOL Vol +
Up	Up
P+	CH PAGE CH+ / Page+
Lef t	Lef t
Ent er / CH Li st	OK OK
Ent er / CH Li st	LIST SMART Smart / Li st
Ri ght	Ri ght
Vol -	VOL Vol -
Down	Down
P-	CH PAGE CH- / Page-
TV/ Radi o	PROGRAM TV/ RADIO TV/ Radi o /
[≡]	GOTO TEXT Text / Got o
[≡] [≡] / P+P	RETURN BACK Back / Ret urn
Pi ctur e Si ze	FORMAT PICTURE Pi ctur e / For nat



