

Operation Manual

Pizza Oven

61998, 61999

toboli



Illustration similar, may vary depending on model

Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Due to further developments, illustrations, functioning steps, and technical data can differ insignificantly.

Updating the documentation

If you have suggestions for improvement or have found any irregularities, please contact us.



The information contained in this document may alter at any time without previous notice. It is prohibited to copy or spread any parts of this document in any way without prior written allowance. All rights reserved.

The WilTec Wildanger Technik GmbH cannot be held accountable for any possible mistakes in this operating manual, nor in the diagrams and figures shown.

Even though, the WilTec Wildanger Technik GmbH has undergone biggest possible efforts to ensure that the operating manual is complete, faultless, and up to date, mistakes cannot be entirely avoided.

If you should find a mistake or wish to make a suggestion for improvement, we look forward to hearing from you.

Send an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in various languages can be found in our online shop via:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler
Germany

To return orders for exchange, repair, or other purposes, please use the following address. Attention! To allow for a smooth execution of your complaint or return, it is important to contact our customer service team before returning the goods.

Returns Department
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler

E-mail: **service@wiltec.info**

Tel: +49 2403 55592-0

Fax: +49 2403 55592-15




Introduction

Thank you for purchasing this quality product. **To minimise the risk of injury we urge that our clients take some basic safety precautions when using this device. Please read the operation instructions carefully and make sure you have understood its content.**


Keep these operation instructions safe.

Safety instructions

- Read the instructions carefully and follow all advice and instructions. Keep the instructions in a safe place and close at hand whenever you need them.
- Check the pizza oven for damage after unpacking. Make sure that the oven is in perfect condition.
- Use the pizza oven only for its intended purpose. Improper use can result in property damage and personal injury.
- In case the oven malfunctions or does not function properly, switch it off immediately. Disconnect the device from the mains and have repairs carried out by a qualified electrician.
- This device may only be used by persons with limited physical, sensory, or mental capabilities or a lack of experience or necessary knowledge if they are instructed and supervised by a person familiar with the device.
- Children, not being allowed to use the device, must be supervised to ensure that they do not play with it.
- Do not use the device in a damp environment and keep it away from moisture. Not suitable for outdoor use.
- Make sure that there are no flammable objects inside. These can cause a fire if the oven is switched on accidentally.
- Do not place the oven near flammable materials or liquids.
- Do not place any objects on the oven. Make sure that there is sufficient distance to other objects on all sides.
- Do not touch the power cord and plug with wet hands.
- Avoid damaging the power cord. Do not let it come into contact with sharp edges, hot surfaces, water, etc.
- If the power cord is damaged, it must be replaced by a qualified electrician.
- The pizza oven should always be under supervision during use.
-  **Attention!** Some components of the pizza oven can become very hot during operation. Avoid contact with the hot surfaces. **Risk of burns!**
- Let the pizza oven cool down before cleaning it. Make sure that it is turned off and unplugged.
- Make sure that the ventilation slots are not covered by objects.
- Wear protective gloves when taking pans or pizza trays out of the oven, as these, heating up extremely, can lead to burns.
- The pizza oven may only be operated in perfect condition. If it shows signs of damage, it must not be operated. Have repairs carried out by a qualified electrician only.


Device operation

Control panel 61998

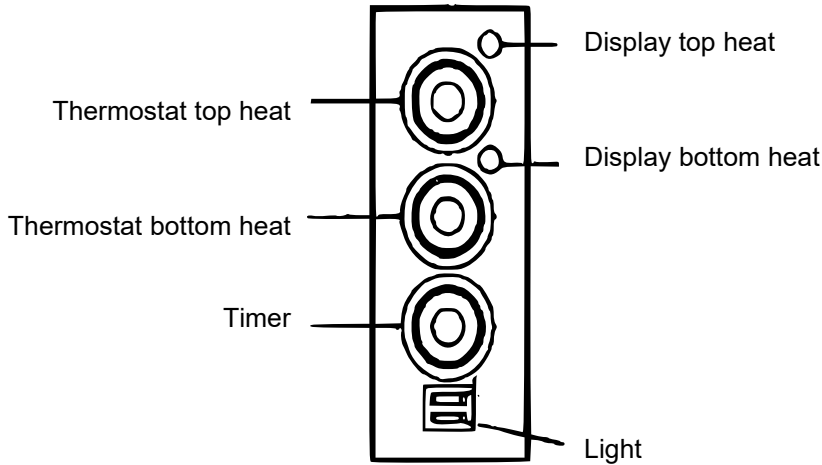

- The lighting inside the oven is activated by the light switch.
- The heating part is controlled by a power switch. When this is connected, the thermostats for top and bottom heat can be set while the heating elements start to heat up. As soon as the temperature reaches the desired thermostat setting, the display switches off.
- The timer button is the time control mode and power switch. Once the timer is set and time begins to run out, the thermostat and heating element begin to work. If the oven is switched on manually, the timer function is interrupted and cannot be set.
- The bottom heating element and its display are controlled by the bottom heat thermostat, the top heating element and its display are controlled by the top heat thermostat.

Control panel 61999

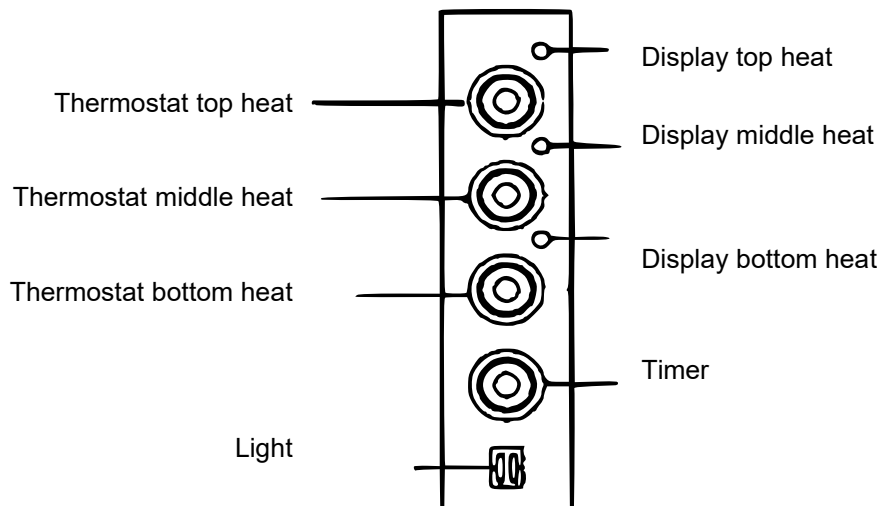

- The lighting inside the oven is activated by the light switch.
- The heating part is controlled by a power switch. When this is connected, the thermostats for top, middle, and bottom heat can be set while the heating elements start to heat up. As soon as the temperature reaches the desired thermostat setting, the display switches off.
- The timer button is the time control mode and power switch. Once the timer is set and the time begins to run out, the thermostat and heating element begin to work. If the oven is switched on manually, the timer function is interrupted and cannot be set.



- The bottom heating element and its display are controlled by the thermostat for setting the bottom heating. The heating element for the top heat and its display are controlled by the thermostat for the top heat. The heating element for the middle heat and its display are controlled by the thermostat for the middle heat.

Function and application

Functions

- The temperature of the oven rises rapidly. It has a 350 °C thermostat. This significantly improves the cooking speed.
- The use of firebrick ensures that the food is heated more evenly. They are similar to professional, traditional stone ovens and suitable, for example, for baking bread and pizza.
- Since the stone surface is thin and brittle, it absorbs water on the bread base and distributes the baking heat more evenly.
- Top and bottom heat are controlled by a separate thermostat. They can adjust the temperature as needed.

Note! On the first use, a slight odour may develop. This is normal and not an indication of a defect. We recommend letting the empty oven heat up for approx. 30 min before the first time that it is used for baking.

Area of application

- For all fresh and frozen bread and pastry
- For all fresh and frozen meat products
- For cooking in gastronomy

Installation instructions

- All electrical equipment and circuits must be installed by a qualified electrician in accordance with safety regulations.
- Before installation check whether the connection of the device corresponds to the instructions and complies with safety standards. Before connecting, check whether the voltage and power meet the requirements of the manual. The electrical connection is made to a 230 V ~ 50 Hz protective contact socket. Fuse at least 10 A. The alternating voltage of 230 V indicated on the nameplate of the device must correspond to the existing mains voltage.
- Do not use the product without rubber feet. The rubber foot must be firmly attached to the device.
- Make sure that the device is in a safe position on a stable table or shelf.
- Put the device on a place suitable for power connection and normal maintenance.
- Keep it at least 10 cm away from its back and the wall as well as other objects.
- Keep the oven away from flammable materials and objects.
- Install the oven together with a good ventilation system and have suitable extinguishing equipment at hand.
- Remove the oven film before first use.
- Install the two-pole switch in front of the oven and power line. When the oven is switched on, the voltage tolerance must be within $\pm 10\%$. It must be ground-wired.
- **Important!** If the cable or the plug is damaged due to external influences, the cable must not be repaired, but exchanged for a new one.



Technical specifications

Item number		61998	61999
Power supply		230 V, 50 Hz	230 V, 50 Hz
Power consumption (W)		2,000	3,000
Temperature range (°C)		0–350	0–350
Size (mm)	Oven	560 × 570 × 280	560 × 570 × 440
	Firebrick	400 × 400 × 10	400 × 400 × 10
	Inner part	415 × 400 × 120	415 × 400 × 120
Material		Stainless steel	Stainless steel
Weight (kg)		18	26

Cleaning the firebrick

Dirt on the firebrick can be scraped off and removed using a kitchen scraper.

Note! The firebrick must not be dipped in water or cleaned with a wet cloth! Wet fireclay bricks can no longer dry completely which limits their durability so that they may break.

Disposal regulations

EU guidelines regarding the disposal of scrap electric appliances (WEEE, 2012/19/EU) were implemented in the law related to electrical and electronic equipment and appliances.

All WiTec electric devices that fall under the WEEE regulations are labelled with the crossed-out wheeled waste bin logo. This logo indicates that this electric equipment must not be disposed with the domestic waste.

The company WiTec Technik GmbH has been registered in the German registry EAR under the WEEE-registration number DE45283704.

Disposal of used electrical and electronic appliances (intended for use in the countries of the European Union and other European countries with a separate collection system for these appliances).

The logo on the article or on its packaging points out that this article must not be treated as normal household waste but must be disposed to a recycling collection point for electronic and electrical waste equipment. By contributing to the correct disposal of this article you protect the environment and the health of your fellow men. Environment and health are threatened by inappropriate disposal.



Material recycling helps reduce the consumption of raw materials.

Additional information on recycling this article can be provided by your local community, municipal waste disposal facilities, or the store where you purchased the article.

Address:
WiTec Wildanger Technik GmbH
Königsbenden 12 / 28
D-52249 Eschweiler

Important notice:

The reprint or reproduction, even of excerpts, and any commercial use, even in part, of this instruction manual require the written permission of WiTec Wildanger Technik GmbH.