

USER MAINTENANCE

Your flat iron is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool, and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off.

To reduce the risk of death by electric shock:


1. **Always unplug appliance immediately after using.**
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquid.
5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

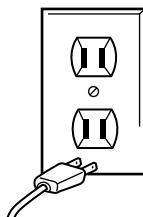

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

4. Do not use an extension cord to operate appliance.
5. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**
6. Keep the cord away from heated surfaces.
7. Do not pull, twist, or wrap line cord around appliance, even during storage.
8. Never place the appliance on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
9. Never use while sleeping.
10. Never drop or insert any object into any opening or hose.
11. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
12. This flat iron is hot when in use. Do not let heated surfaces touch eyes or bare skin.
13. **Do not place the heated flat iron directly on any surface or on the appliance power cord while it is hot or plugged in.**
14. Do not attempt to touch the housing of your appliance near the straightening plates as it is hot when in use.
15. Do not touch hot surfaces of the appliance. Use the handles or knobs.
16. Do not use with a voltage converter.
17. Before plugging in, please read the information about dual voltage in the OPERATING INSTRUCTIONS section of this booklet.

LIMITED ONE-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and \$7.50 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This flat iron appliance is intended for household use. This unit is designed to operate at 120–240 volts AC. Use on Alternating Current (50/60 hertz) only.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

DUAL VOLTAGE

This flat iron will automatically adjust to the proper voltage. Use an adapter plug with correct configuration, prior to use in outlet.

STRAIGHTENING BASICS

1. Plug the flat iron cord into any household outlet (120–240V). Slide the ON/OFF switch to ON position. The iron will heat up very quickly. The power indicator light will remain on when in operation. To turn off, slide switch to OFF position (light will go off). Never leave your flat iron on and unattended.

WARNING: The flat iron's ceramic-coated plates will get very hot within a few seconds and should not come into contact with the skin after the flat iron has been turned on.

Hair should be clean and completely dried before using any flat iron. For best results, use a light



Please register this product at:
www.conair.com/registration

SERVICE CENTER

CONAIR CORPORATION
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

©2012 CONAIR CORPORATION

12PA131052

IB-11364

1 in. Ceramic Flat Iron



Instruction & Styling Guide

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CONAIR®

Model CS50HPBC

styling product before blow-drying hair.

2. Start with a hair section that is 2 in. wide and no more than 1/2 in. thick. Open the iron and place a hair section between the two hot plates, close to the scalp. Trap hair between the plates by firmly squeezing the handles together. While maintaining the tension, slowly pull the unit down along the hair section toward the end of hair. At the end of hair section, release the pressure on the handle and allow the hair section to slide out. Repeat process on additional sections of hair until you achieve the hair style you desire. It may be necessary to repeat process on certain areas, depending on the texture of your hair.


Some practice is necessary when learning to use this flat iron. After using iron several times, you will learn the ideal way to straighten and style your hair easily.

STYLING WITH THE NEW EASY-GLIDE CERAMIC-COATED PLATES

The plates of your new flat iron have an easy-glide ceramic-coated surface. Hair glides easily over the surface of the plates as you're straightening. The ceramic-coated surface also helps smooth down flyaways and frizzies. As you smooth each strand, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shining finish. Hair slips right off the plates after it's straightened, and the ceramic surface is easy to clean.

The ceramic technology is a pleasure to work with because it makes styling your hair easier and the results more professional.

GETTING TO KNOW YOUR FLAT IRON

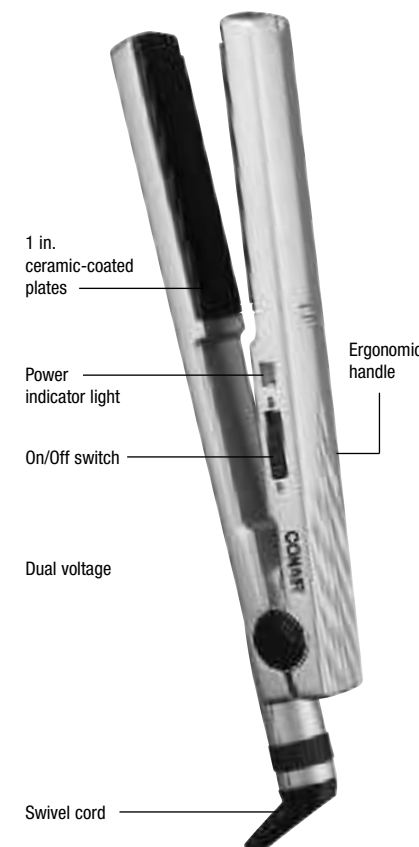

INSTRUCCIONES DE MANTENIMIENTO

Su aparato requiere poco mantenimiento. No necesita lubricación. Mantenga todas las aberturas libres de polvos y pelusas. Cuando sea necesario limpiarlo, desenchúfelo, permita que enfríe y limpie la superficie exterior con un paño humedecido. En caso de mal funcionamiento, desconecte el aparato, permita que enfríe y regréselo a un centro de servicio autorizado. No trate de repararlo.

PRECAUCIÓN

NUNCA jale, retuerza ni doble mucho el cable. Nunca lo enrolle con fuerza alrededor del aparato. Esto podría dañar la junta flexible que lo conecta al aparato, produciendo su ruptura o un cortocircuito. Revise el cable con frecuencia para asegurarse de que no esté dañado. Deje de usar el aparato inmediatamente si el cable parece dañado o si el aparato dejara de funcionar o funcionara de manera intermitente.

ALMACENAJE

Cuando no lo utiliza, su aparato es fácil de almacenar. Permita que enfríe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. No tiree ni retuerza el cable al nivel del enchufe. No enrolle el cable alrededor del aparato. Permita que el cable cuelgue o que la junta que lo conecta al aparato esté suelta y recta.

MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, especialmente en la presencia de niños, debe tomar precauciones básicas de seguridad, entre las cuales las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO MANTÉNGALO ALEJADO DEL AGUA

PELIGRO — Cualquier aparato enchufado permanece bajo tensión, aunque esté apagado.

Para reducir el riesgo de muerte o herida por descarga:


1. **Siempre desconecte el aparato inmediatamente después de usarlo.**
2. No lo use en el baño o la ducha.
3. No coloque ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.
4. No coloque el aparato ni lo deje caer al agua u otro líquido.
5. Si el aparato cayera al agua, desconéctelo inmediatamente. No toque el agua.

ADVERTENCIA — Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

1. **Nunca deje el aparato desatendido mientras esté conectado.**

**ADVERTENCIA:
SI CREE QUE NO HAY
CORRIENTE CUANDO
EL APARATO ESTÁ
APAGADO,
ESTÁ EQUIVOCADO**

MANTÉNGALO ALEJADO DEL AGUA

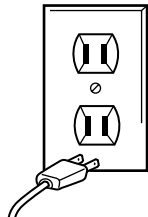

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿Sabe usted que un aparato eléctrico permanece bajo tensión aunque esté apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchufe los aparatos eléctricos después de usarlos.

SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

2. Este aparato no debería ser usado por, sobre o cerca de niños o personas con alguna discapacidad.
3. Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Sólo use accesorios recomendados por el fabricante.
4. No utilice una extensión con este aparato.
5. **No utilice este aparato si el cordón o la clavija estuviesen dañados, después de que hubiese funcionado mal o que se hubiese caído o si estuviese dañado. Regrese el aparato a un centro de servicio autorizado para su revisión y reparación.**
6. Mantenga el cable alejado de superficies calientes.
7. No jale, retuerza ni enrolle el cable alrededor del aparato, incluso para almacenarlo.
8. Nunca haga funcionar el aparato sobre una superficie blanda, como una cama o un sofá, donde las entradas de aire se puedan obstruir. Mantenga las aberturas libres de pelusas, cabellos y elementos similares.
9. Nunca utilice este aparato mientras esté dormido/a o adormilado/a.
10. Nunca deje caer ni inserte ningún objeto en ninguna de las aberturas del aparato.
11. No lo utilice en exteriores, ni lo haga funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.
12. Este aparato se vuelve muy caliente. Mantenga los ojos y la piel alejados de las superficies calientes.
13. **No coloque el aparato sobre ninguna superficie mientras esté caliente o conectado. Manténgalo alejado del cable eléctrico.**
14. El cuerpo del aparato cerca de las placas se

GARANTÍA LIMITADA DE UN AÑO

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un período de 12 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque o giro postal de US\$7.50 por gastos de manejo y envío. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 12 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 12 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

- vuelve muy caliente durante el uso. No lo toque.
15. No toque las partes calientes de este aparato. Utilice las asas o las perillas.
16. No utilice este aparato con un convertidor de voltaje.
17. Lea la información relativa al doble voltaje que se encuentra en la sección INSTRUCCIONES DE OPERACIÓN antes de enchufar el aparato en la toma de corriente.

GUARDE ESTAS INSTRUCCIONES DE OPERACIÓN

Para uso doméstico solamente. Este aparato ha sido diseñado para funcionar con corriente de 120/240V CA. Utilícelo solamente con corriente alterna (50/60 Hz).

El cable de este aparato está dotado de una clavija polarizada (una pata es más ancha que otra). Como medida de seguridad, se podrá enchufar de una sola manera en la toma de corriente polarizada. Si no entrara en la toma de corriente, invírtela. Si aún no entrara completamente, comuníquese con un electricista. No intente ir en contra de esta función de seguridad.

DOBLE VOLTAJE

Este aparato es bitensión. Se adaptará automáticamente al voltaje adecuado. Puede que sea necesario emplear un adaptador de enchufe (no se incluye) para utilizarlo fuera de los Estados Unidos.

FUNDAMENTOS DEL ALISADO

1. Enchufe el aparato en una toma de corriente de 120/240V. Encienda el aparato (ON). El

Plancha alisadora cerámica 25 mm




Instrucciones

Para su seguridad y para disfrutar plenamente de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.

CONAIR®

Modelo CS50HPBC

FAMILIARÍCESE CON SU PLANCHA ALISADORA

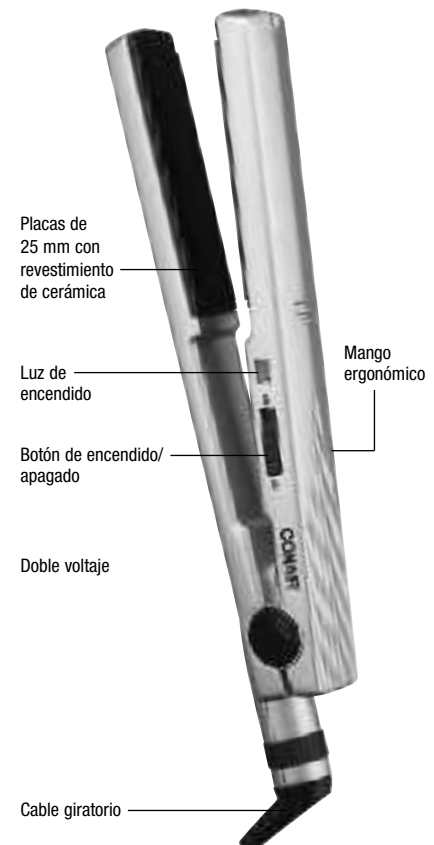

Para registrar su producto, visítenos en:
www.conair.com/registration

CENTRO DE SERVICIO

CONAIR CORPORATION
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

©2012 CONAIR CORPORATION

12PA131052

IB-11364

aparato calentará muy rápidamente. La luz de encendido permanecerá encendida hasta apagarse el aparato. Para apagar el aparato, ponga el botón de encendido/apagado en la posición OFF. El indicador luminoso se apagará. Nunca deje el aparato desatendido después de encenderlo.

ADVERTENCIA: Las placas se volverán extremadamente calientes en segundos. Evite todo contacto con la piel después de encender el aparato.

El cabello debe estar limpio y seco. Para lograr resultados óptimos, aplique una loción fijadora ligera sobre el cabello antes de peinarlo.

2. Divida el cabello en secciones de 2 pulgadas de ancho por 1/2 pulgada o menos de espesor. Abra las placas y coloque una sección de cabello entre ellas, cerca del cuero cabelludo. Cierre las placas. Baje el aparato lentamente hasta las puntas, manteniendo la tensión. Afloje el cabello tras llegar a las puntas. Repita el proceso con cada sección de cabello. Según la textura del cabello, puede que sea necesario repetir el proceso varias veces en cada sección.

Será necesario experimentar un poco al principio. Con práctica, encontrará la manera perfecta para alisar su cabello fácil y rápidamente.

REVESTIMIENTO DE CERÁMICA

Las placas de su nueva plancha alisadora están cubiertas de una capa de cerámica increíblemente suave. El revestimiento hace que el cabello se deslice fácilmente entre las placas. El revestimiento de cerámica también ayuda a controlar la estática y el frizz. Distribuye el calor uniformemente, para resultados lisos, sedosos y brillantes – resultados de salón. Además, las placas son muy fáciles de limpiar.

Es un placer trabajar con esta nueva tecnología, pues facilita el peinado y permite lograr resultados profesionales.