


Installation guide – Spare parts and accessories

Overhaul kit | Code number 027F0561
PML, size 100

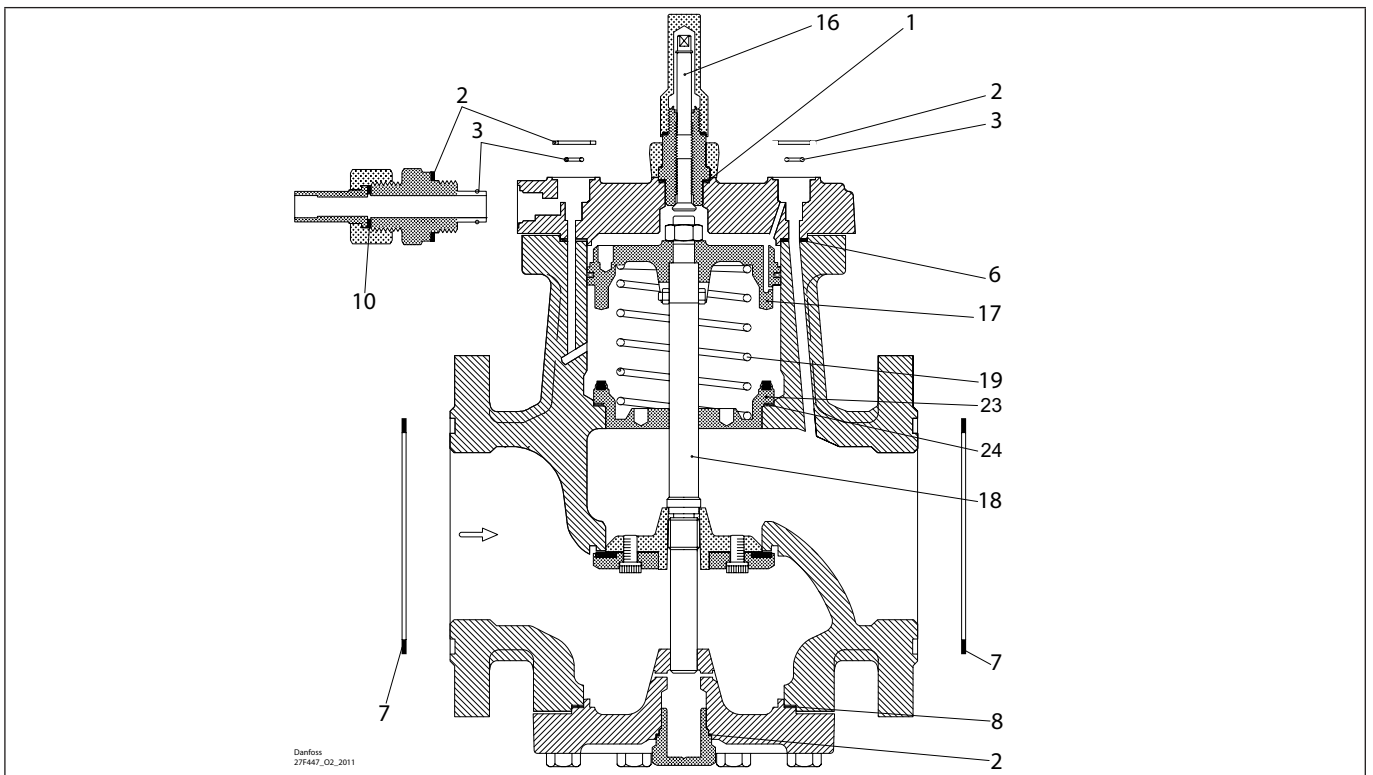

| | | | | | |
|---|---|--|--|--|---|
| <p>1*</p> <p>Alu.</p> <p>Ø26 mm Ø1.02"</p> <p>Total no. = 1</p> | <p>2</p> <p>Fibre</p> <p>Ø33 mm Ø1.28"</p> <p>Total no. = 4</p> | <p>3</p> <p>Ø9 mm Ø0.36"</p> <p>Total no. = 3</p> | <p>4*</p> <p>Alu.</p> <p>Ø18 mm Ø0.70"</p> <p>Total no. = 1</p> | <p>5*</p> <p>Alu.</p> <p>Ø14 mm Ø0.55"</p> <p>Total no. = 1</p> | <p>6</p> <p>Fibre</p> <p>Ø185 mm Ø7.28"</p> <p>Total no. = 1</p> |
| <p>7</p> <p>Fibre</p> <p>Ø175 mm Ø6.89"</p> <p>Total no. = 2</p> | <p>8</p> <p>Fibre</p> <p>Ø168 mm Ø6.61"</p> <p>Total no. = 1</p> | <p>9*</p> <p>Alu.</p> <p>Ø32 mm Ø1.26"</p> <p>Total no. = 1</p> | <p>10</p> <p>Alu.</p> <p>Ø22 mm Ø0.87"</p> <p>Total no. = 1</p> | <p>16</p> | <p>17</p> <p>Ø145 mm Ø5.71"</p> |
| <p>18</p> <p>307 mm 12.09"</p> | <p>19</p> <p>Ø100 mm Ø3.94"</p> <p>Total no. = 1</p> | <p>23</p> <p>Ø135 mm Ø5.31"</p> | <p>24</p> <p>Fibre</p> <p>Ø134.4 mm Ø5.29"</p> <p>Total no. = 1</p> | | |

* The spare part is included in the package but is not used for PML size 100.