

# CORDLESS FAUX WOOD INSTALLATION INSTRUCTIONS




## 1

### TOOLS

#### GETTING STARTED - TOOLS NEEDED FOR INSTALLATION

Rechargeable Drill with 1/4" Hex Bit / Phillips Screwdriver / Pencil / Tape Measure

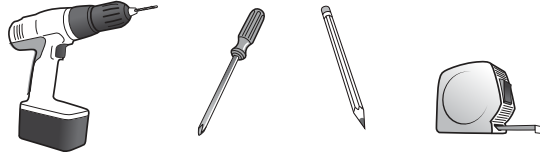

## 2

### UNPACKING THE PARTS

Locate the parts and brackets in hardware box. The quantity will vary with blind size.


Hold-down parts will only be sent for blinds that have requested this option.

Center Support Bracket will only be sent for blinds over 37" wide.

Installation Brackets

Valance Clips

Center Support



End Cap for Hold-downs

Hold-down Bracket


Installation Screws




## 3

### BRACKET PLACEMENT


Left Bracket



Right Bracket

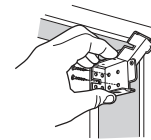

OR

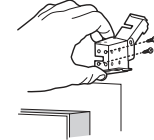



Inside mount

Inside mount

Outside mount

IF APPLICABLE:



Center Support Bracket

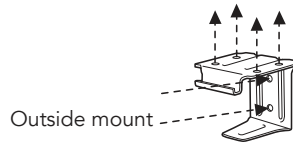


## 4

### VALANCE CLIPS & WAND


Attach Valance Clips

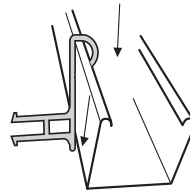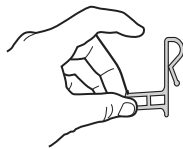

Clip on to Headrail

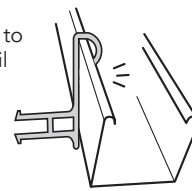

Assemble the Wand






Snap together where applicable.


## 5

### FINISHING UP


Slide into Brackets

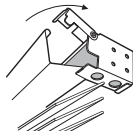

Attach Wand

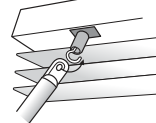


Install Valance

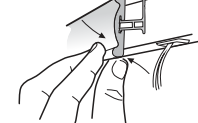


IF APPLICABLE:

Hold-down brackets



OR



## 6

### OPERATING INSTRUCTIONS

Raise or lower the blind by lifting or lowering the bottom rail to the desired height.

PLEASE NOTE: This product is made up to +6" of ordered height. Blinds over 84" may include up to 10" of additional height. This is normal for this product and not considered a manufacturing error or defect.

Open or close the blind slats by turning the wand until the slats are opened or closed to the desired amount.