


User Manual



For quick start tutorial, please scan the QR code below

1 iSteady Q Overview

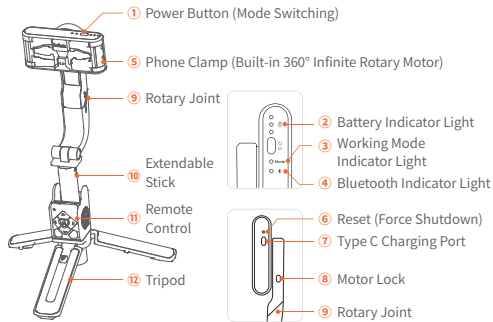

2 Download the Hohem Joy App, Register and Login

(App supports face tracking, gesture control, motion timelapse and moment mode)



Scan the QR code to enter the download page

Search "Hohem Joy" in the App Store or Google Play.

*Hohem Joy app requires iOS 10.0 or above, Android 6.0 or above.


*More product tutorial videos can be found on the app homepage.

3 Phone Mounting

1 Unfold the Stick



2 Phone Mounting




- Unfold the phone clamp and turn 'hohem' logo towards the **left**.
- Meanwhile, turn the phone camera towards the **left**, put the phone stuck in the bottom of the phone clamp, and pull the head of the phone clamp to mount your phone.




*The iSteady Q would work improperly if there is no mobile phone mounted.
*Make sure your phone clings to the rubber mat and clamps in the middle, otherwise the iSteady Q would vibrate or turn off automatically.

3 Phone Balancing



4 Powering On: Long press the power button for 3s

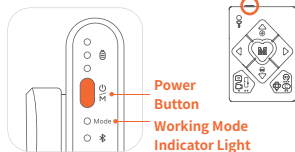

Turn On Remote Control
Turn the power button **on**.

*The remote control will connect to the iSteady Q automatically after turning on.

If the remote control is not working properly, please follow the steps to pair the device again:


- 1 Turn on the iSteady Q first. Press the power button **7 times** to enter the pairing mode, and the working mode indicator light flashes alternately in yellow and green.
- 2 Then turn on the remote control. Pairing is complete in about 1 second, and the iSteady Q's mode light stays on green.

5 Connect iSteady Q with Phone Bluetooth in the App

1 Turn on iSteady Q



3 Follow the prompts at the top of **Hohem Joy app homepage** and click 'Connect'. Then connect the device with an 'iSQ-' prefix name in Hohem Joy app.

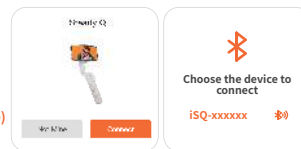


2 Enable Phone Bluetooth (Don't need to search device)




*Press iSteady Q power button **9 times** to cancel the Bluetooth pairing.

6 Handheld Use

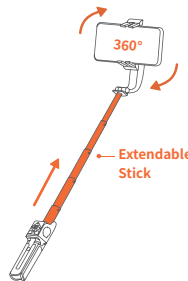

When to lock the phone clamp?

iSteady Q's phone clamp can make 360° infinite rotation. It is able to lock the phone clamp to use as a selfie stick when it is in low power mode.

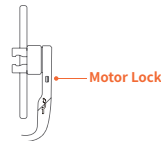


*Confirm the position of the notch on the back of the phone clamp. Lock the motor, and the bolt will be inserted into the notch. The motor will be fixed and won't rotate.

7 Desktop Use



1 Unfold the tripod and put it on the table



2 Manually rotate 90° along arm's bevel cut



3 Rotate phone clamp to level with the desktop



4 Unfold the phone clamp



5 Put the phone into the phone clamp




6 Clamp the phone in the middle



*To use 360° tracking, please make iSteady Q in desktop use, launch Hohem Joy app, turn on iSteady Q's power button, and ensure the Bluetooth is connected. Hohem Joy app supports face tracking, gesture control, motion timelapse, and moment mode.

8 Single Press the Shutter Button: Take Photo/Video

 Please ensure Bluetooth is successfully connected to use the feature.



Double Press:
Switch the photo and video modes

Triple Press:
Switch the front and rear cameras

(Only available in the app)


9 Single Press: Switch the landscape and portrait modes

Double Press: Recenter the iSteady Q

Press Five Times: Auto calibration
(Please do calibration on a flat surface when the iSteady Q is not level or drifting. There will be a beep sound after enabling the calibration, and do not move the iSteady Q until the calibration is done and hear another beep sound.)

Long Press 5s:
Power off the iSteady Q

Triple Press: Auto rotation
(300° Auto Inception/
360° Horizontal Rotation)

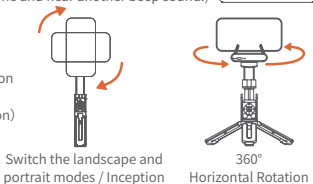

Switch the landscape and portrait modes / Inception

360° Horizontal Rotation

10 Navigation Button



Long Press Left/Right Button:
Control the rotation of iSteady Q

Double Press Left/Right Button:
90° counterclockwise / clockwise fast rotation



Long Press Up/Down Button: Zoom in/out
(Only available in Hohem Joy app and some smartphone native cameras)



Please ensure Bluetooth is successfully connected to use the feature.

11 M Button: Switch Working Mode



Single Press: Lock Mode (Default Mode)


* When the handle rotates along the motor shaft, the phone does not follow the motor to rotate, and iSteady Q's working mode indicator light stays on green.

Double Press: POV Follow Mode

* When the handle rotates along the motor shaft, the phone does follow the motor to rotate slowly, and iSteady Q's working mode indicator light of single flashes green.


Long Press 5s: Low Power Mode (Longer battery life)

* The motor will stop working, and it can be used as a regular selfie stick by locking the motor.



Motor Lock

12 More Functions of Power Button



Power Button

Single Press:

Switch between lock/POV follow mode (Lock mode is the default mode)

Double Press: Recenter the iSteady Q

Triple Press: Auto rotation
(300° Auto Inception/360° Horizontal Rotation)


Press Five Times: Auto calibration

(Please do calibration on a flat surface when the iSteady Q is not level or drifting. There will be a beep sound after enabling the calibration, and do not move the iSteady Q until the calibration is done and hear another beep sound.)

Press Seven Times: Remote control pairing

Press Nine Times: Cancel the phone Bluetooth pairing

13 About Indicator Lights



Battery Indicator Light

Stay on: Battery remaining/Charging completed

Single flashing: Charging

(Only one grid shows single flash indicates low battery warning)


Working Mode Indicator Light

Green light stay on: Lock mode

Green light single flashing: POV follow mode

Yellow light flashing: Response of pressing the remote control

Yellow light stay on: Low power mode
(The motor of iSteady Q stops operating, but the remote control is still connected)



Bluetooth Indicator Light

Stay on: Connected

Light off: Unconnected

Blink: Firmware updating

Specifications

Model	iSteady Q
Weight	195g
Folded Dimensions	140 x 54 x 36mm
Material	PA&PC + ABS
Battery	460mAh
Operating Time	3 hours
Mechanical Range	* Pan: 360° / Roll: 360°
Controllable Range	* Pan: 360° / Roll: 360°
Compatible Phones	Weight: ≤ 280g Thickness: ≤ 11mm Width: 55mm~100mm

Warranty Card

User Name:

Contact No.:

Address:

Purchase Date:

Prod. Serial No.:

Failure Cause:

Service Record:

- Within 15 days upon the purchase date. Any functional disorder or quality problem enjoys free replacement service. But ensure the commodity and package with no damage, and we will offer a brand new replacement after confirming the product problem.
- Warranty valid only under normal use.
- Used in the normal circumstances, 1 year warranty, maintenance of life (not include the All accidents or artificial damage, improper disassembly or misuse damage is NOT covered by the warranty).
- Please keep and offer the warranty card for claiming the warranty service.

CALL CENTER -Toll Free

UNITED STATES: +1(888)9658512 Mon-Fri: 9:00AM-5:00PM(EST)

UNITED KINGDOM: +44(0)808 2737578 Mon-Fri: 2:00PM-10:00PM(GMT +0)

CANADA: +1(855)758-8939 Mon-Fri: 9:00AM-5:00PM(EST)

BRAZIL: +55 (0)800 5911897 Mon-Fri: 10:00AM-6:00PM(GMT -3)

Contact us

Email: service@hohem.com

Website: www.hohem.com

Manufacturer: Hohem Technology Co., Ltd

Connect us at Facebook

—@HohemTechOfficial—